

# IRON BALTIC

## FRONT MOUNT ADAPTER

### CFMOTO

### U10 PRO

Code 03.16300

Version 17022025



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

MULTILINGUAL MANUAL




[code.ironbaltic.com/u/J99OHGzy](http://code.ironbaltic.com/u/J99OHGzy)



# SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.16301K	1
2	Distance bush	03.16309	2
3	Bush 28 mm	03.10605	2
4	Bolt M10x1,25-30 DIN961	OT.02.08.340	2
5	Bolt M10x55 DIN933	OT.02.02.342	2
6	Washer M10 DIN125	OT.04.01.040	6
7	Nyloc nut M10 DIN985	OT.03.02.050	2

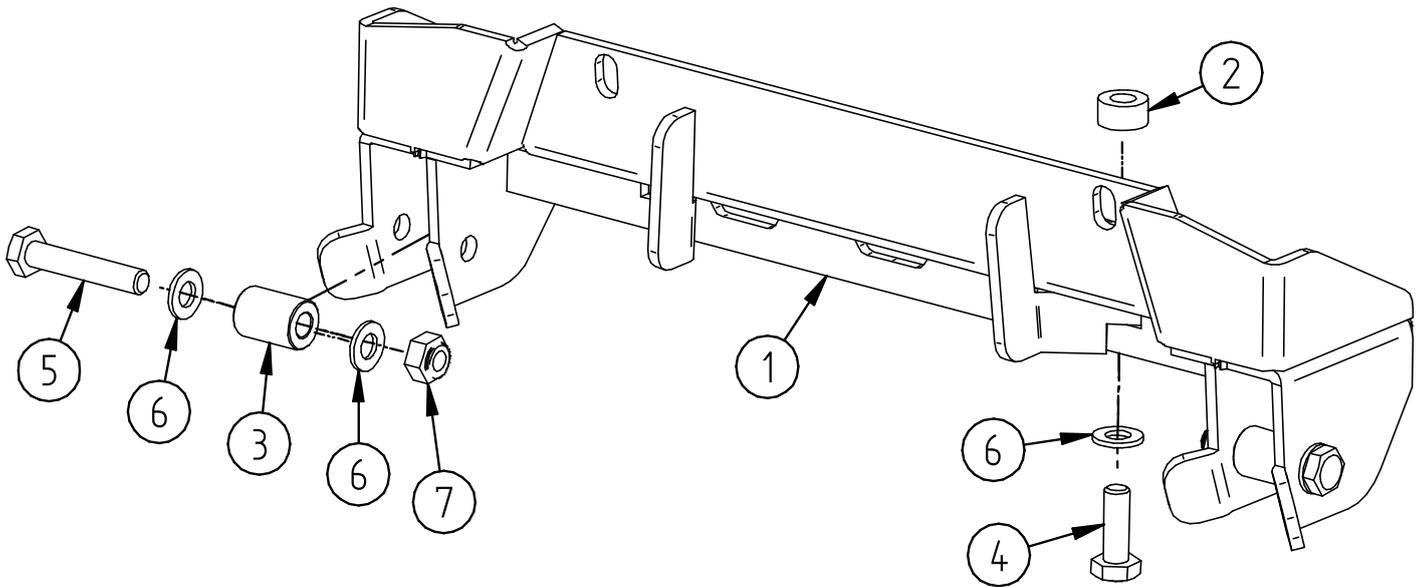

## TOOLS REQUIRED FOR INSTALLATION:



- Spanner 17mm
- Socket wrench 13mm
- Socket wrench 17mm



### NB!

Designing the adapter, original/factory tires were taken into consideration: front: 29x9.00-14 and rear: 29x11.00-14

# FITTING INSTRUCTIONS


## Step 1


Remove bottom bumper bolts.  
For easier installation you might need to loosen upper bumper bolts.



## Step 2


Install adapter (Pos.1). Place the adapter on top of the original bumper.  
For fastening use original bolts, M10x1,25-30 bolts (Pos.4) and M10 washers (Pos.6). Install distance bushes (Pos.2) between the adapter and UTV frame.

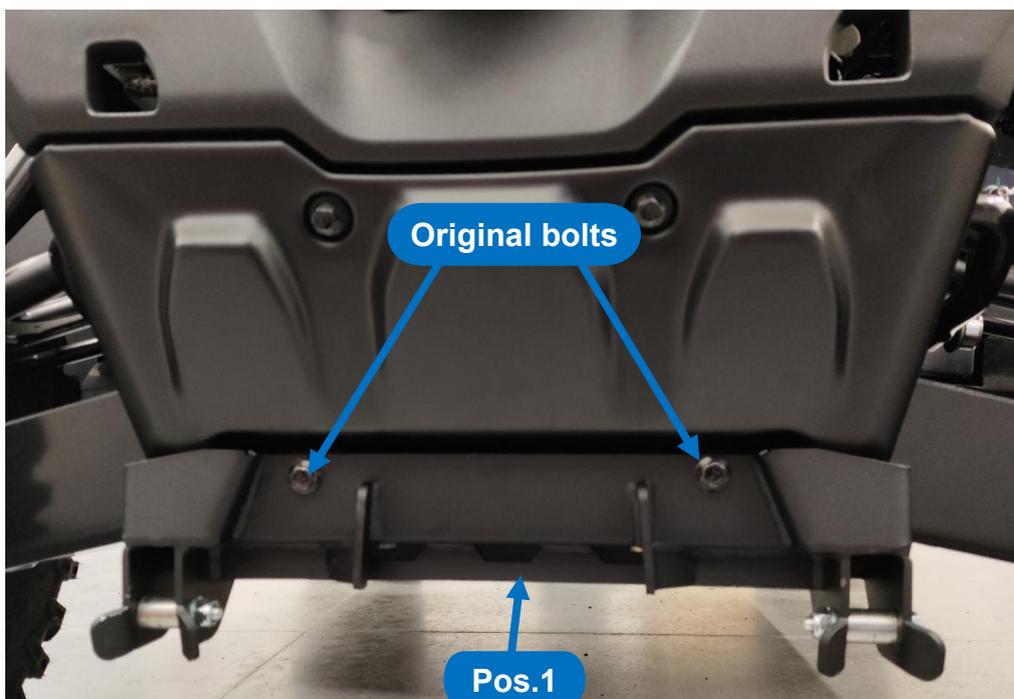

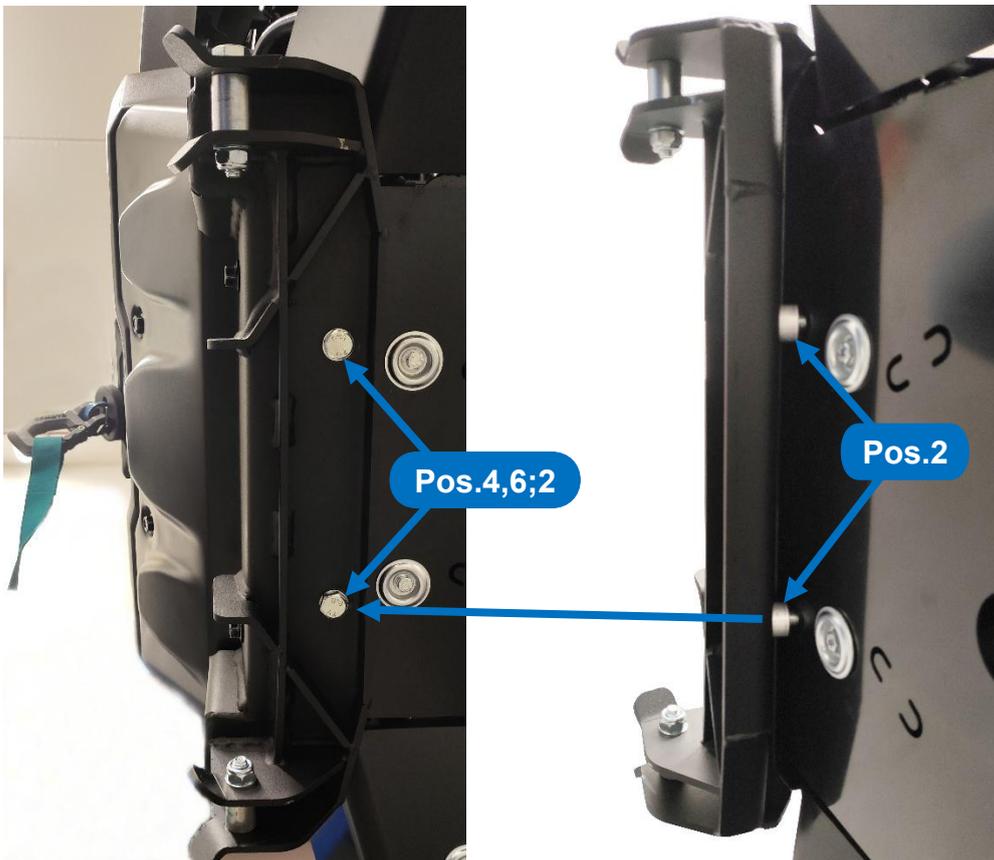

### Step 3

Install bushes (Pos.3) on the adapter (Pos.1). For fastening use M10x55 bolts (Pos.5), M10 washers (Pos.6) and M10 nyloc nuts (Pos.7)

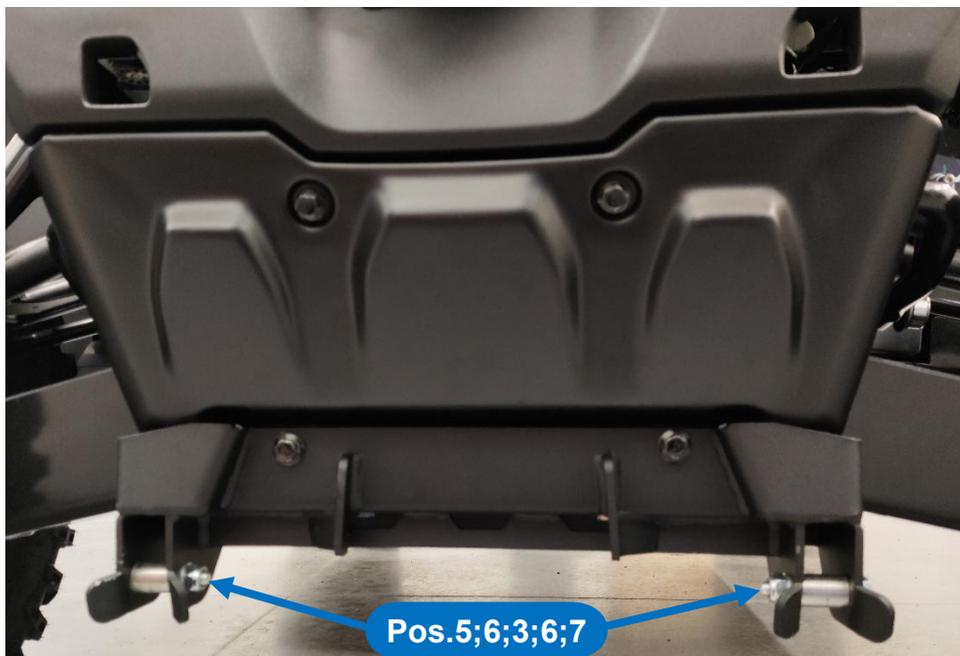





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

