



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/L71t33dY

MID-MOUNT ADAPTER

SEGWAY SNARLER AT10

Code 03.16500

Version 04062025




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.16501K	1
2	Bushing Ø20 H23	03.16502	2
3	Bushing Ø20 H29	03.16503	2
4	Pin 10x40 DIN1444	14.003	2
5	Cotter pin 2 mm DIN11024	OT.07.01.010	2
6	U-bolt M8x38	14.009	2
7	Bolt M8x45 DIN933	OT.02.02.230	2
8	Bolt M8x55 DIN933	OT.02.02.241	2
9	Washer Ø8/20 SFS3738	OT.04.03.030	10
10	Nyloc nut M8 DIN985	OT.03.02.040	4

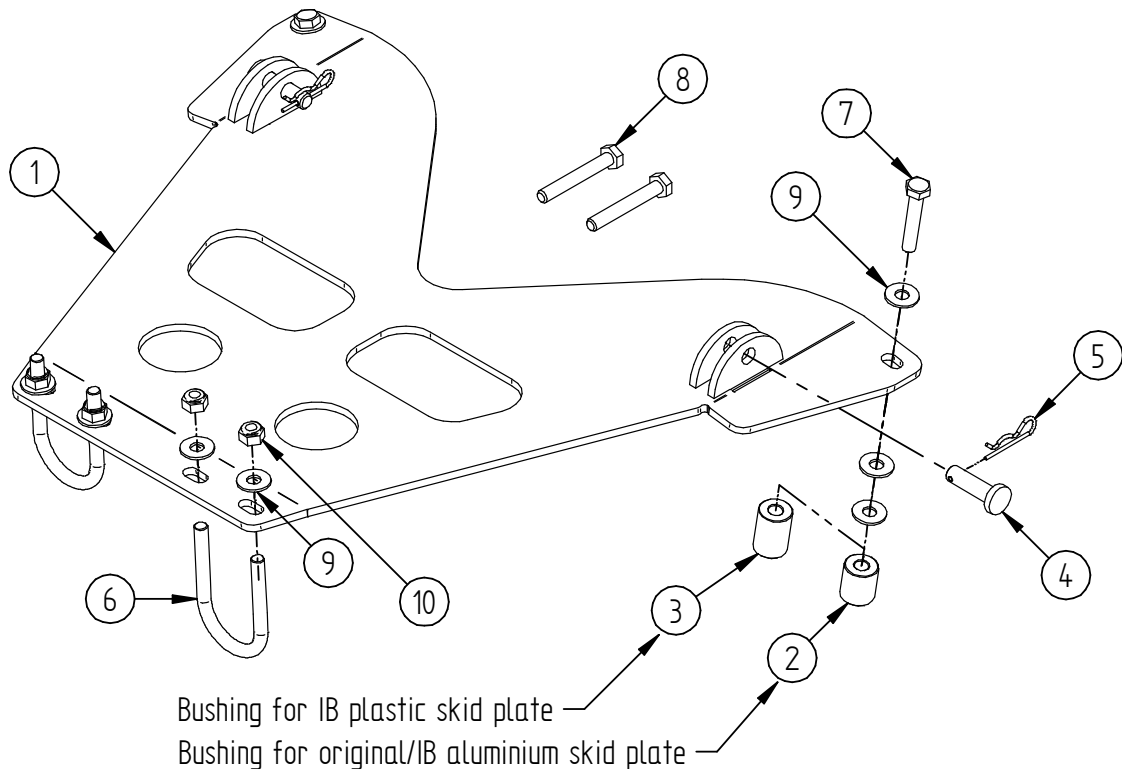

* Numbers on drawing correspond to Pos numbers on specification table.



NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

All pictures in this manual are for illustration purposes only and may differ from real product due to the changes made to the product during improvements!



TOOLS REQUIRED FOR INSTALLATION:

- Spanner 10 mm
- Spanner 13 mm
- Socket wrench 10 mm
- Socket wrench 13 mm


FITTING INSTRUCTIONS

Step 1


If you are using adapter with the original skid plate, remove the front plastic protection, make the cutouts to the protector as shown, remove the original bolts and reinstall the front plastic protection.

If you are using adapter with the Iron Baltic skid plate, remove the brackets and the original bolts shown in the picture. When removing the connecting plates that connect the side protectors to the middle protector, the right side connecting plate can be accessed through the footbrake plastic opening, but the left side protector must be removed completely. Afterward, reinstall the left side protector.

Original skid plate

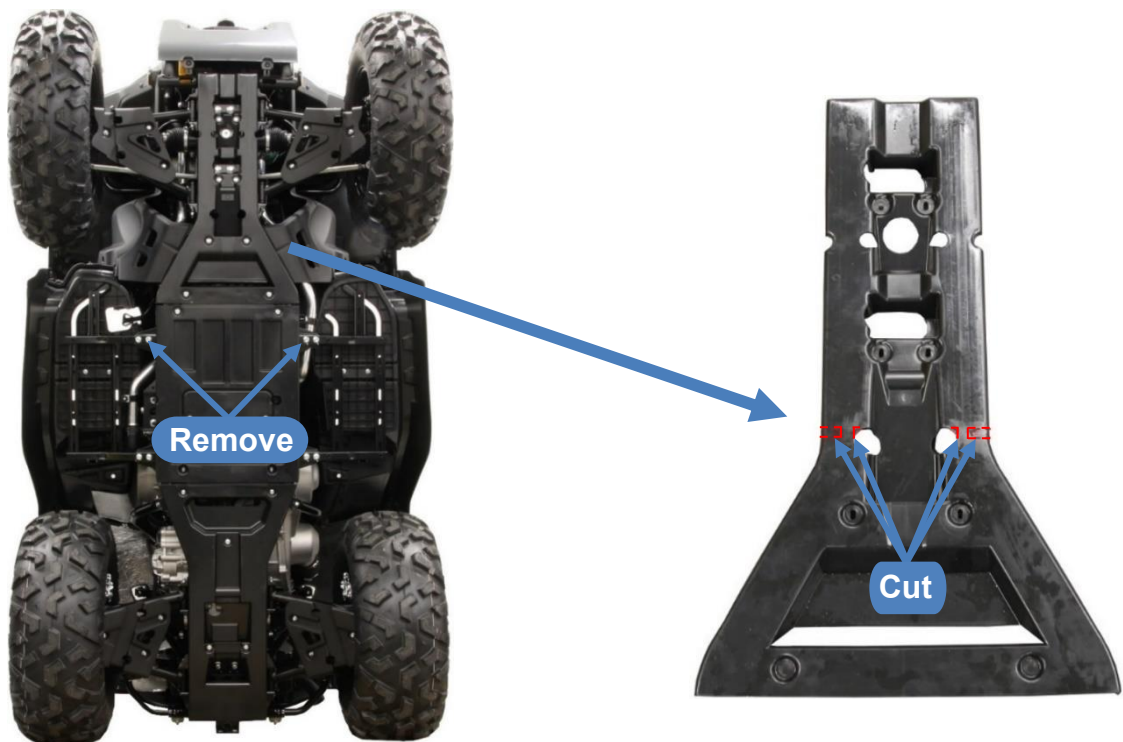


Iron Baltic skid plate

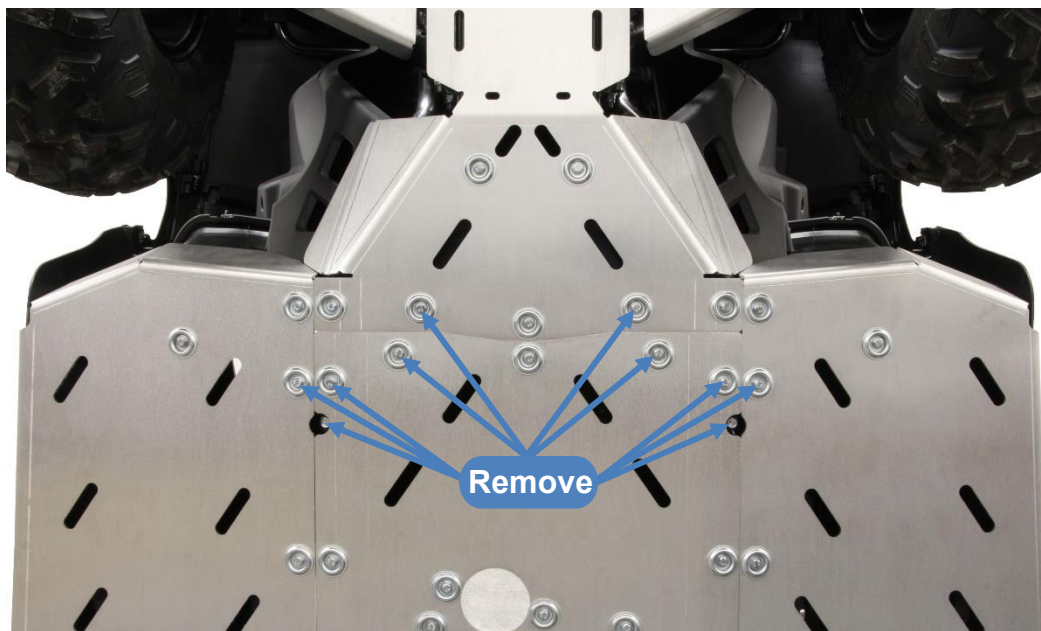


Step 2

For fastening the adapter (Pos.1) with the original or Iron Baltic aluminium skid plate, use M8x38 U-bolts (Pos.6), M8x45 bolts (Pos.7), Ø8 mm washers (Pos.9), M8 nyloc nuts (Pos.10) and 23 mm bushings (Pos.2). NB! The kit includes extra Ø8 mm washers (Pos.9), which must be used when installing the adapter with the original skid plate to prevent deformation during tightening. These extra washers are not needed with the Iron Baltic skid plates. If using adapter (Pos.1) with the Iron Baltic plastic skid plate, use M8x38 U-bolts (Pos.6), M8x55 bolts (Pos.8), Ø8 mm washers (Pos.9), M8 nyloc nuts (Pos.10) and 29 mm bushings (Pos.3).

Original skid plate

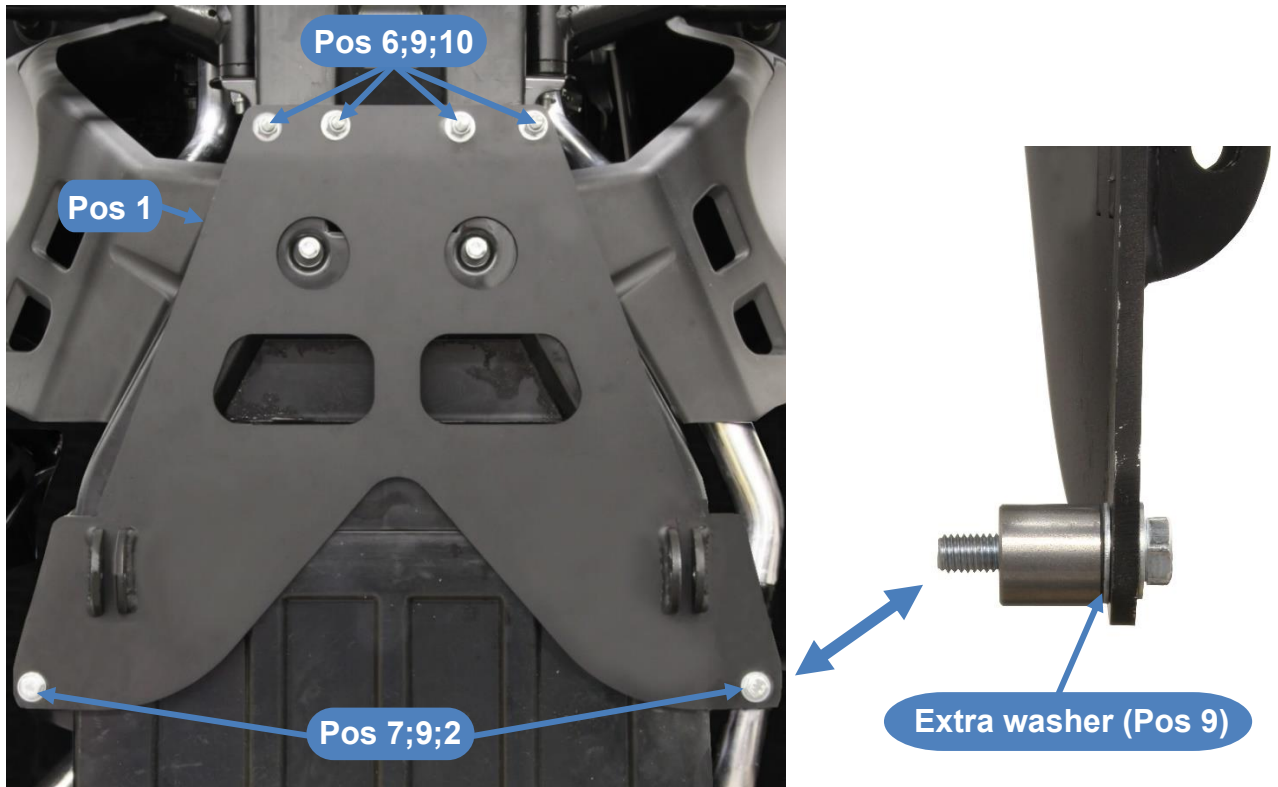


Iron Baltic aluminium skid plate

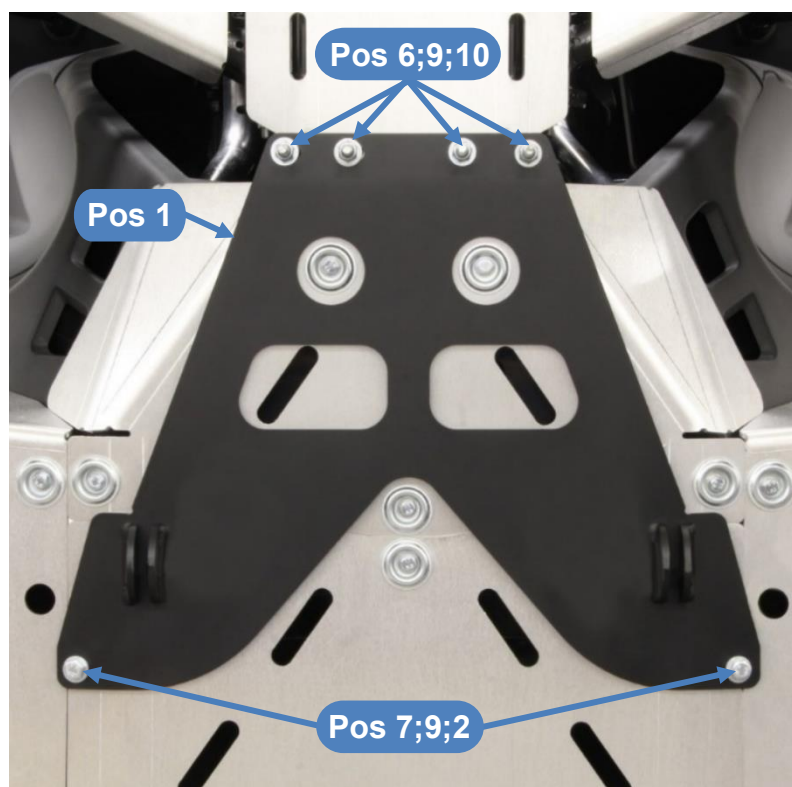

Step 3

Install 10x40 pins (Pos.4) to the adapter (Pos.1). Use cotter pins (Pos.5) to secure pins (Pos.4) in place.

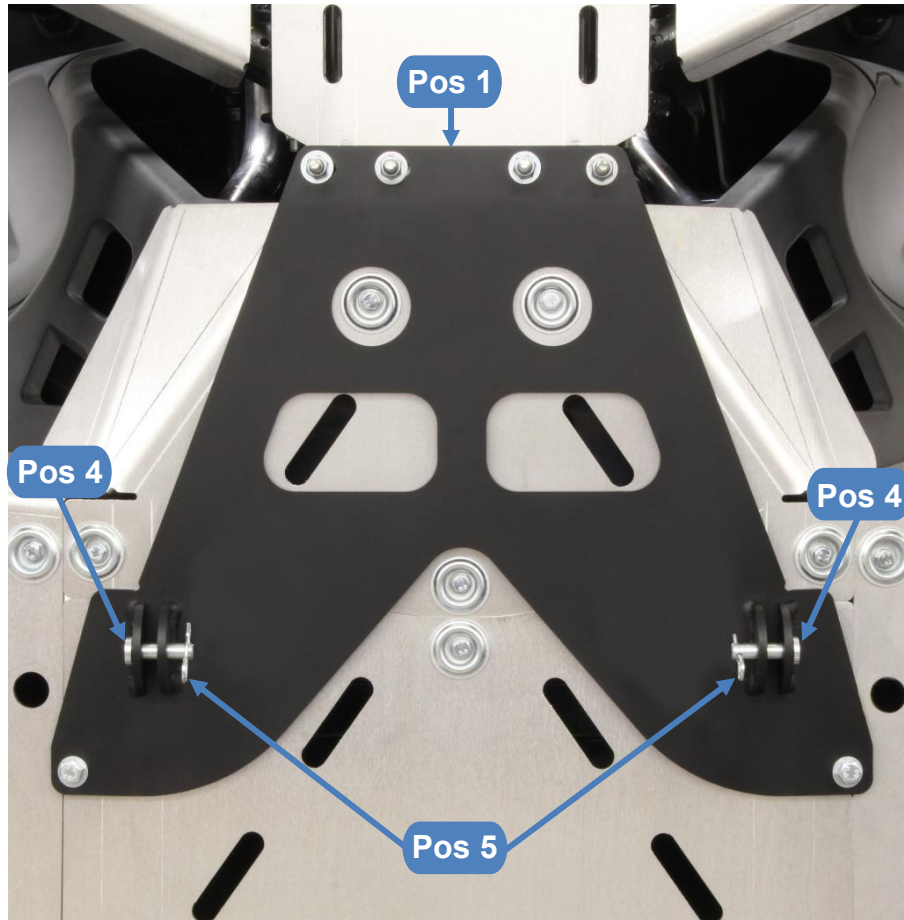

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd