

IRON BALTIC

MID-MOUNT ADAPTER

LONCIN

X-WOLF 1000

Code 03.16800

Version 15042025



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/ujsO53cO


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.16801K	1
2	Pin 10 x 40	14.003	2
3	U-clamp M8 x 38	14.009	4
4	Cotter pin 2 mm DIN11024	OT.07.01.010	2
5	Washer Ø8/20 SFS3738	OT.04.03.030	8
6	Nyloc nut M8 DIN985	OT.03.02.040	8

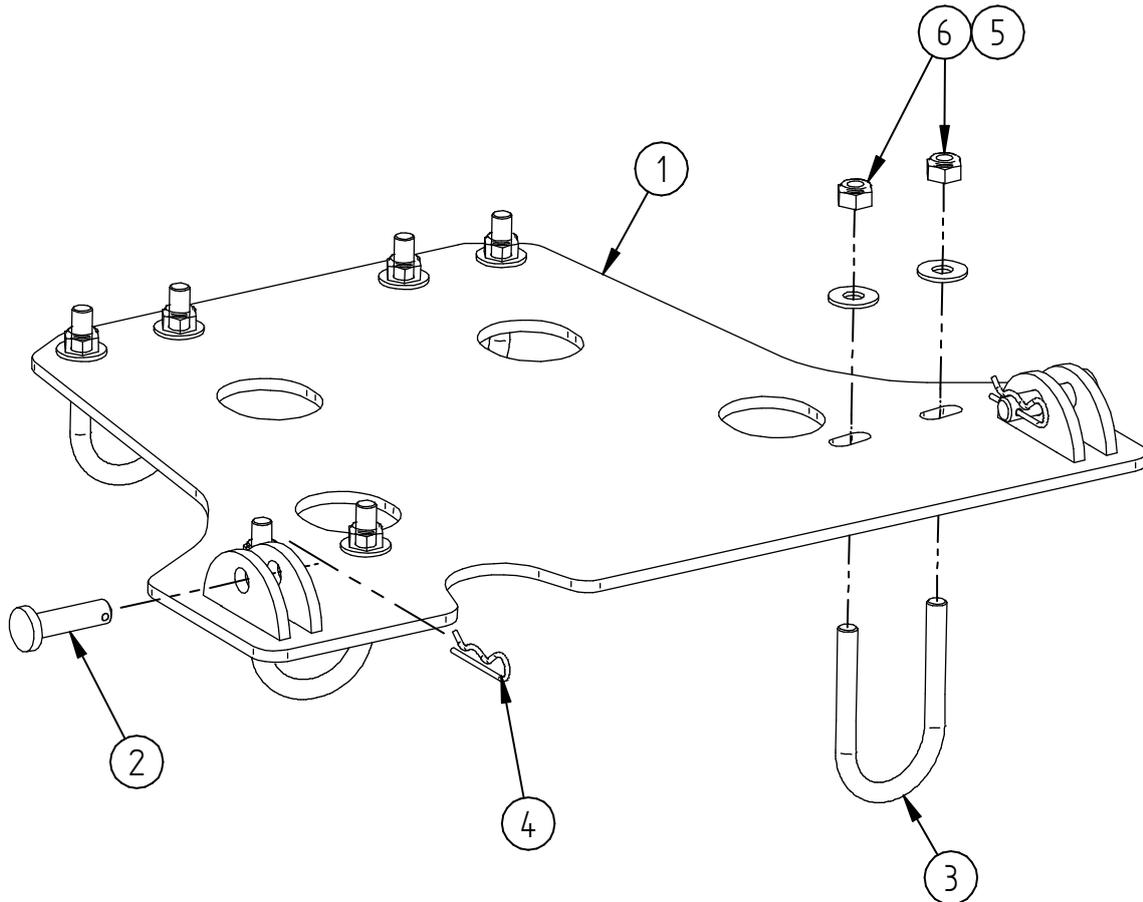

Numbers on drawing correspond to Pos numbers on specification table



TOOLS REQUIRED FOR INSTALLATION:

- Socket wrench 10mm
- Socket wrench 13mm




NB!

Designing the adapter, original/factory tires were taken into consideration! Front: 27x9.00-14 and rear: 27x11.00-14.


FITTING INSTRUCTIONS

Step 1

Remove original front and middle plastic. If you want to use the adapter with original plastic skid plate, make cut-outs for the U-clamps. If using adapter with Iron Baltic skid plate, then remove middle protection.


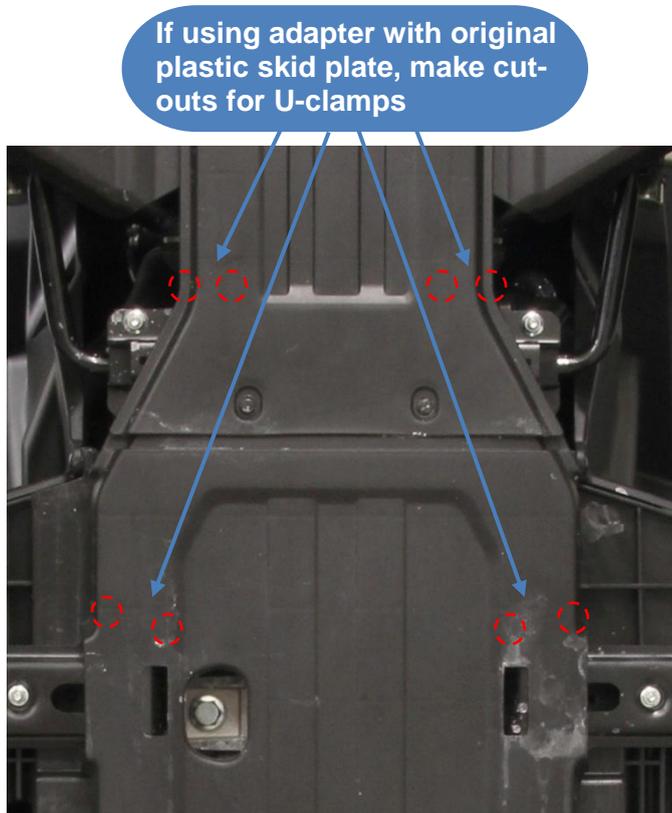


Iron Baltic skid plate:

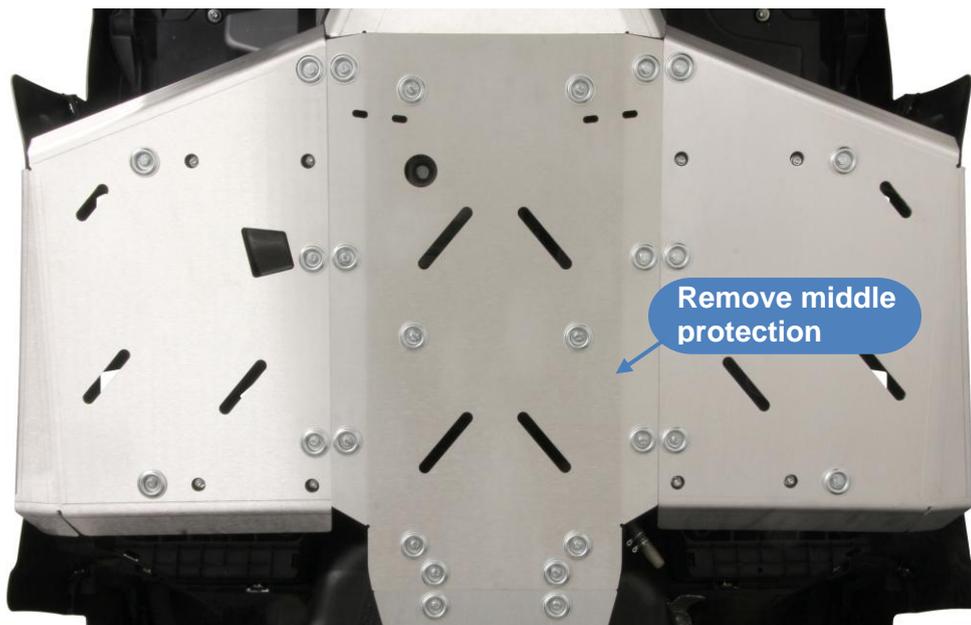




Step 2

Install rear U-clamps (Pos. 3). If desired, reinstall original plastics (with cut-outs). If you are using adapter with the Iron Baltic skid plate, then reinstall middle protection.

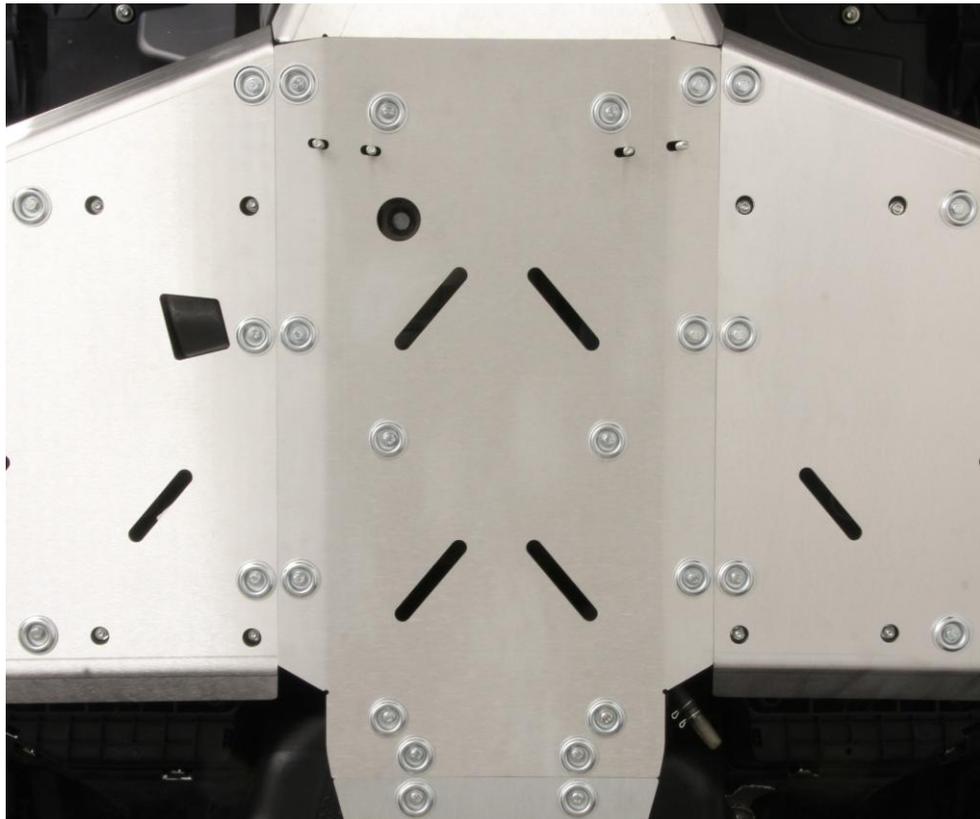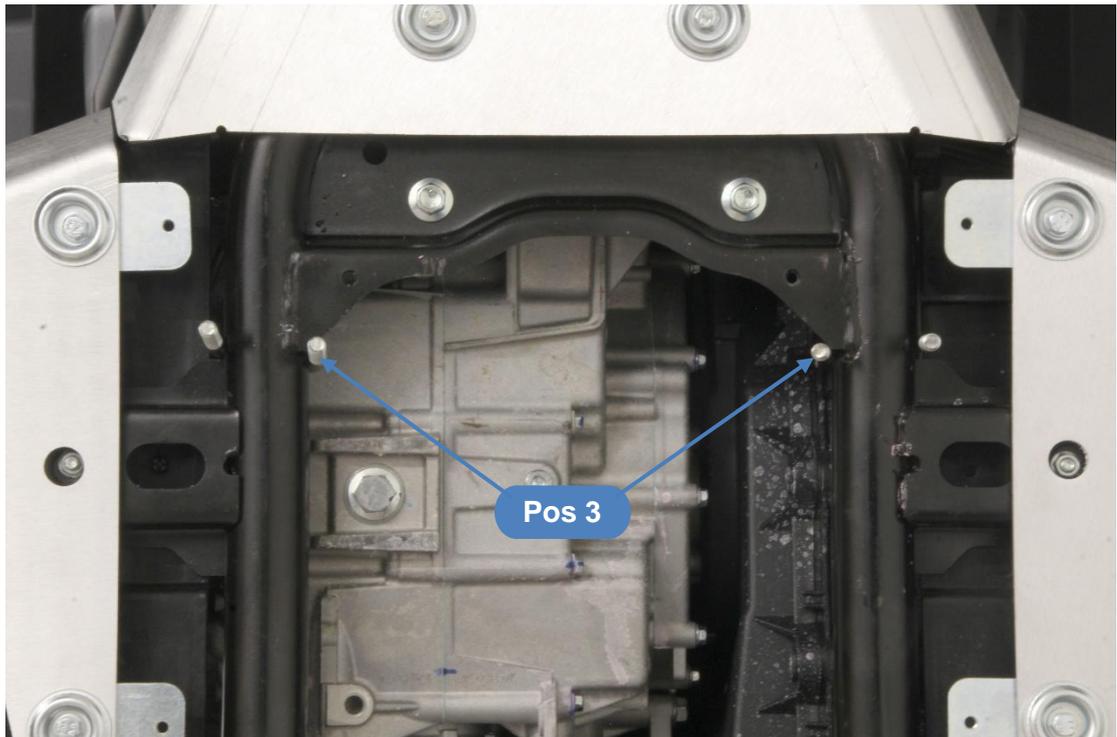



Step 3

Install adapter (Pos. 1) and front U-clamps (Pos. 3). For fastening use Ø8 mm washers (Pos. 5) and M8 nyloc nuts (Pos. 6).

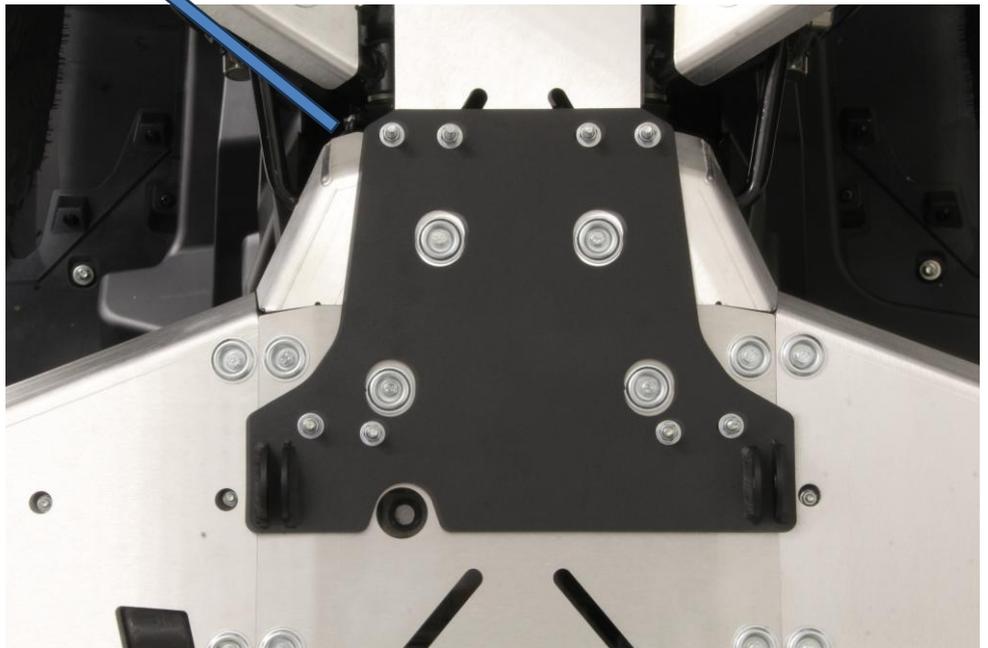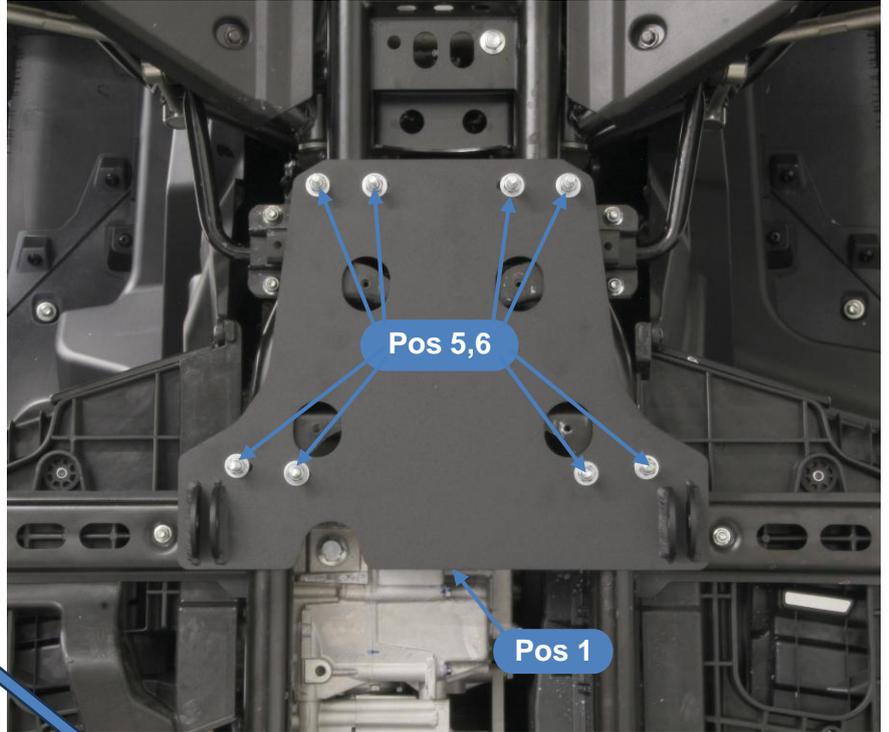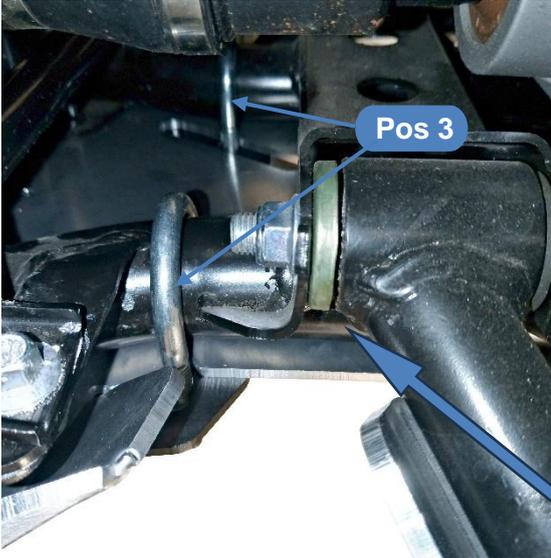

Step 4

Install pins (Pos. 2) to the adapter. Use cotter pins (Pos. 4) to fix the pins.

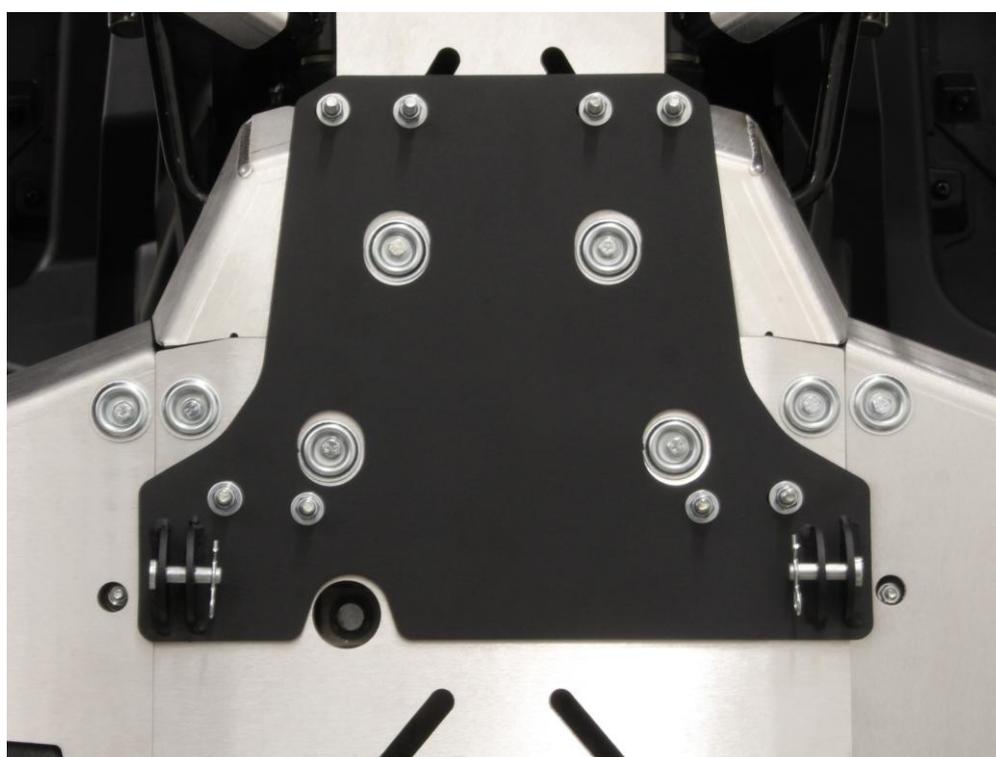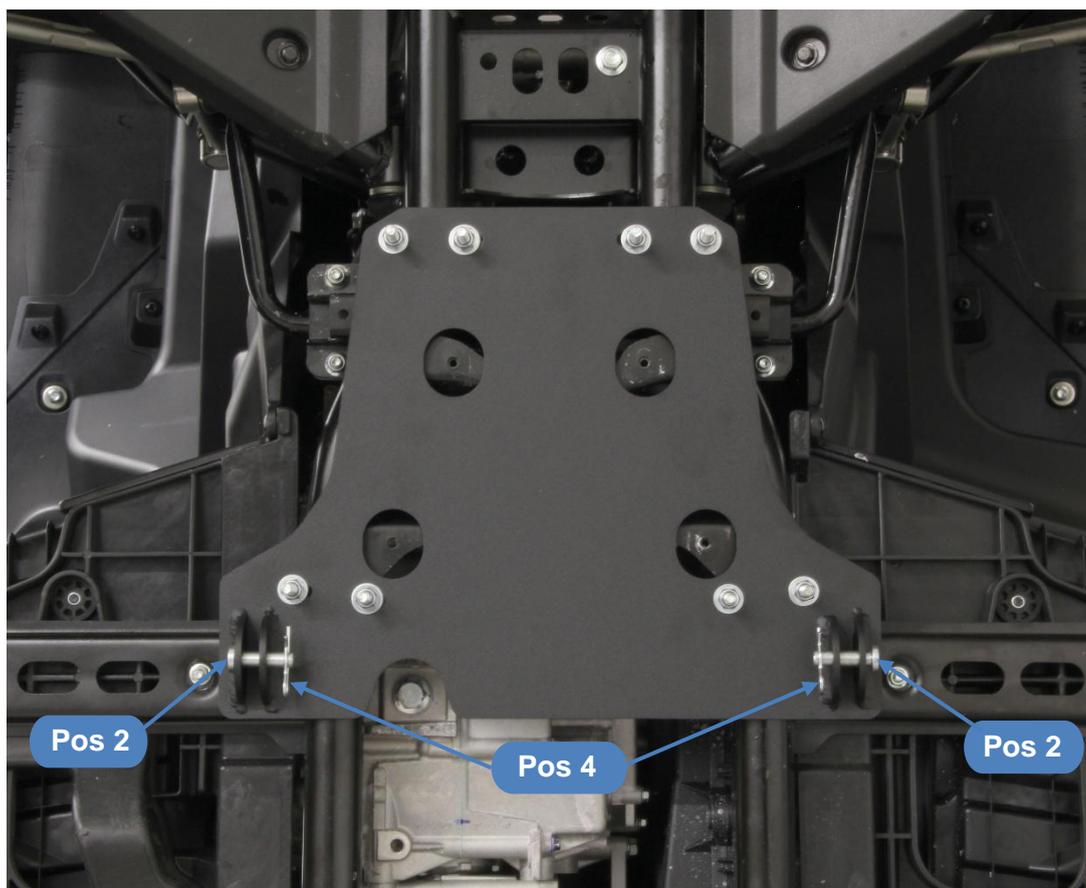

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

