



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/JCg96kYC

FRONT-MOUNT ADAPTER

AODES

Pathcross 525L

Code 03.17300

Version 31082025




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Snow plow adapter	03.17301K	1
2	Bushing	03.5906	2
3	U-bolt M8x26	OT.05.01.005	2
4	Bolt M8x16 DIN933	OT.02.02.170	4
5	Bolt M10x50 DIN931	OT.02.01.042	2
6	Washer Ø8/20 SFS3738	OT.04.03.030	8
7	Washer Ø10 DIN125	OT.04.01.040	4
8	Nyloc nut M8 DIN985	OT.03.02.040	4
9	Nyloc nut M10 DIN985	OT.03.02.050	2

- Designing the front-mount adapter, original/factory tires were taken into consideration (front: 26x9.00-12 and rear: 26x11.00-12).

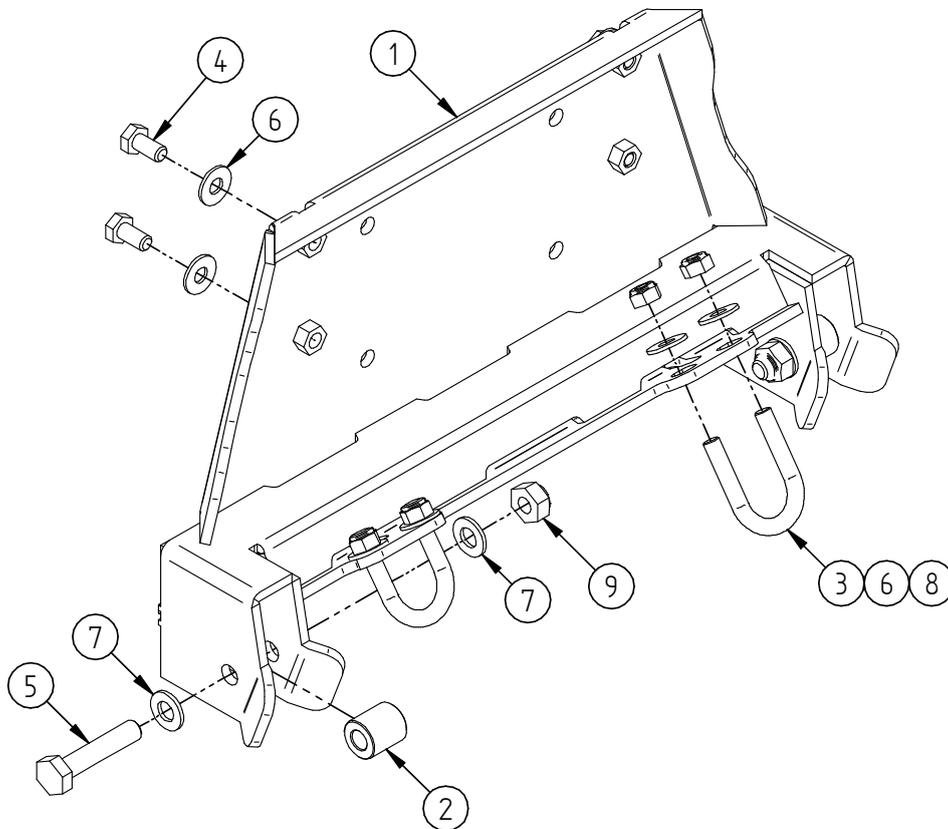

* Numbers on drawing correspond to Pos numbers on specification table.



TOOLS REQUIRED FOR INSTALLATION:

- Torx key T30
- Hex key 6 mm
- Spanner 10 mm
- Spanner 13 mm
- Spanner 17 mm
- Socket wrench 10 mm
- Socket wrench 13 mm
- Socket wrench 17 mm

FITTING INSTRUCTIONS



NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

All pictures in this manual are for illustration purposes only and may differ from real product due to the changes made to the product during improvements!


Step 1

Remove the winch fairlead. For additional space, remove the front bumper, the front plastic cover and the radiator cover. Pull off the radiator cover. When installing the Iron Baltic skid plate, also remove the the front protection with reinforcement and the control arm protectors.

Original skid plate




Iron Baltic skid plate

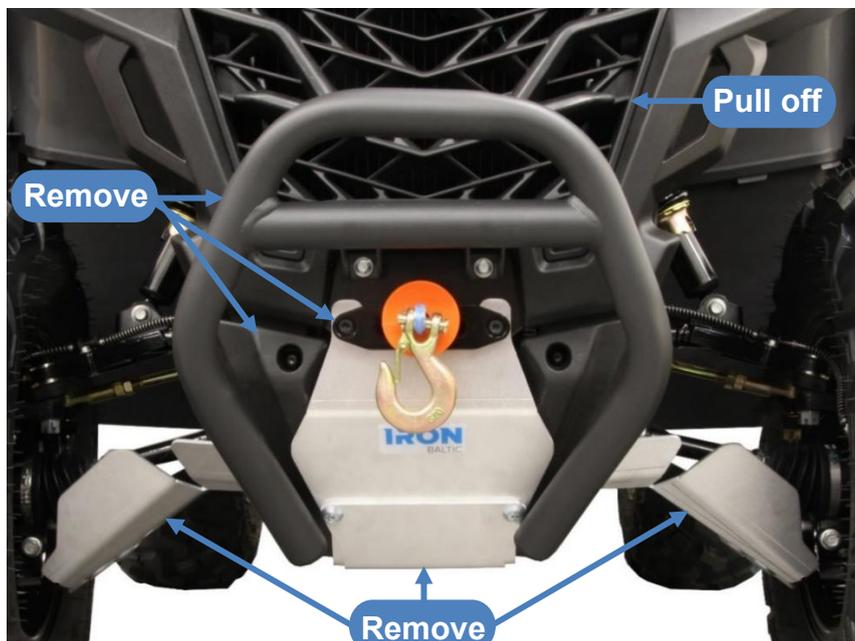


Step 2

Remove the winch with the original adapter. To do this, disconnect the power wires and remove the original adapter bolts on both sides.

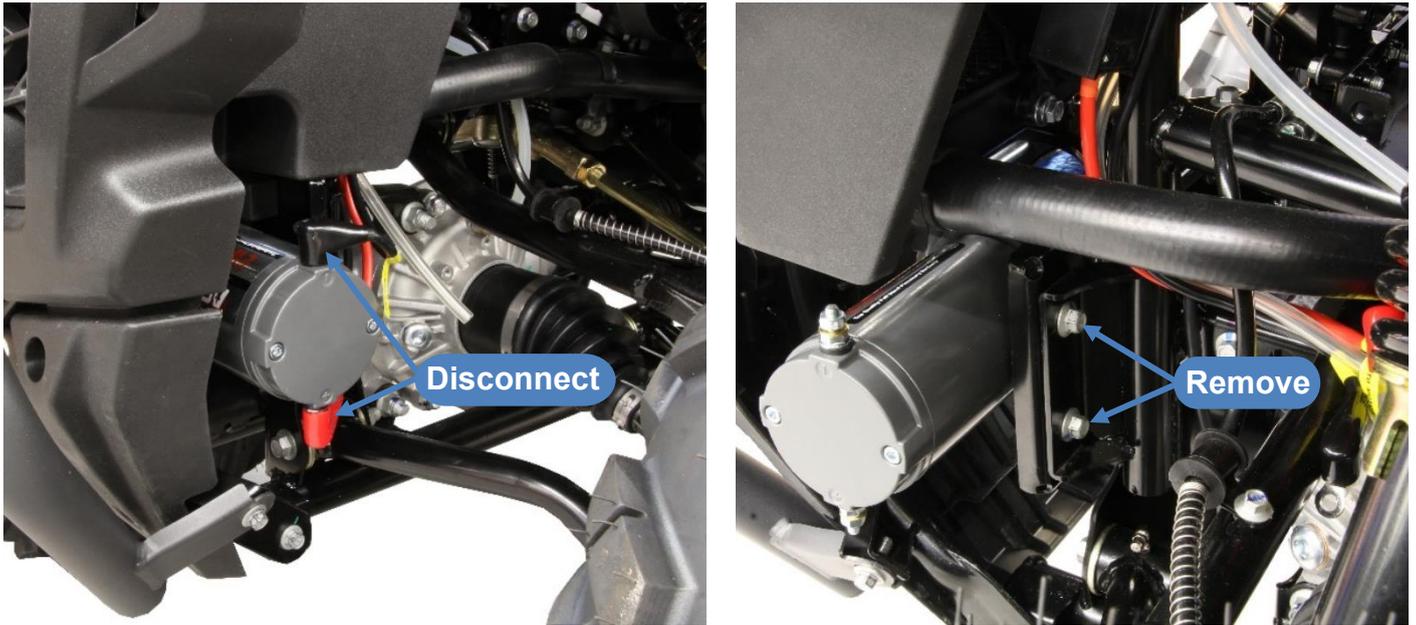


Step 3

Remove the winch from the original adapter.

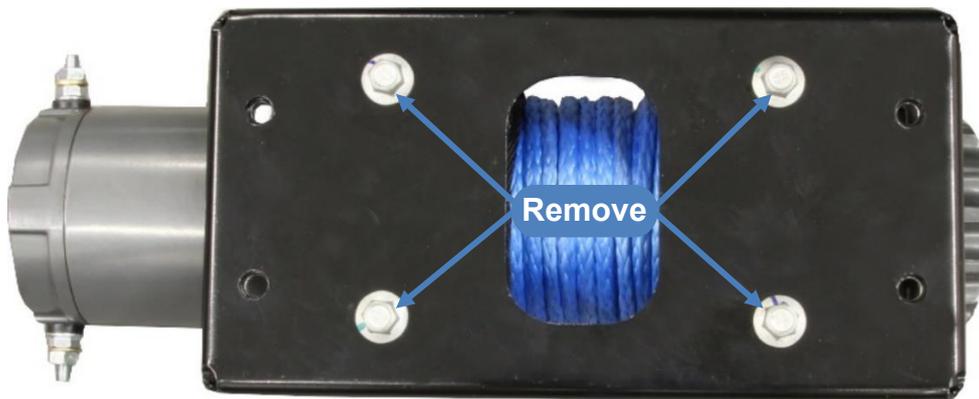


Step 4

Install the winch to the adapter (Pos.1) using original bolts.

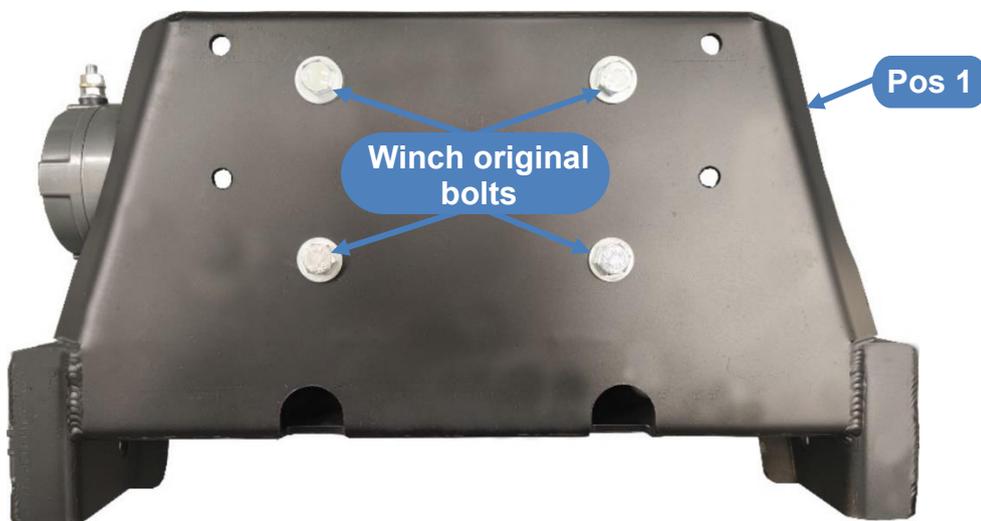

Step 5

To install the adapter on the ATV, remove the radiator support plate. Next, lift the adapter together with the winch into the frame as shown in the picture. This can only be done from the left side of the ATV.


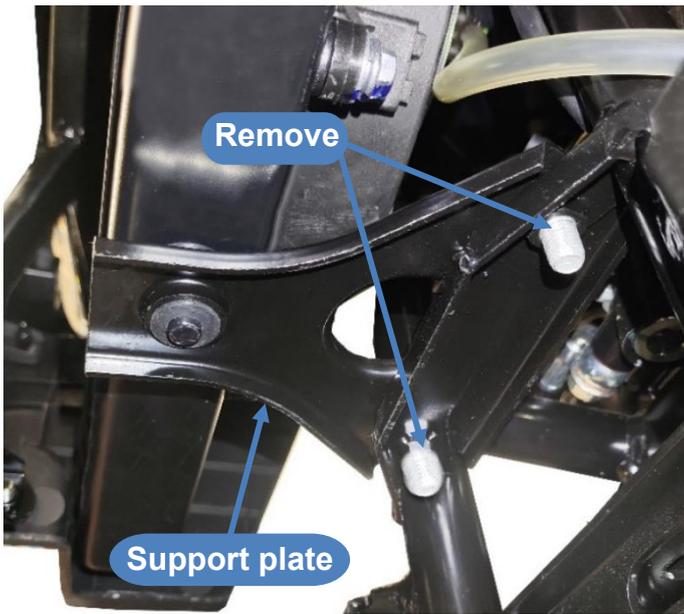


Step 6

Reinstall the radiator support plate.


Step 7

Secure the adapter to the frame. For fastening use M8x16 bolts (Pos.4) and Ø8 mm washers (Pos.6) on both sides of ATV.

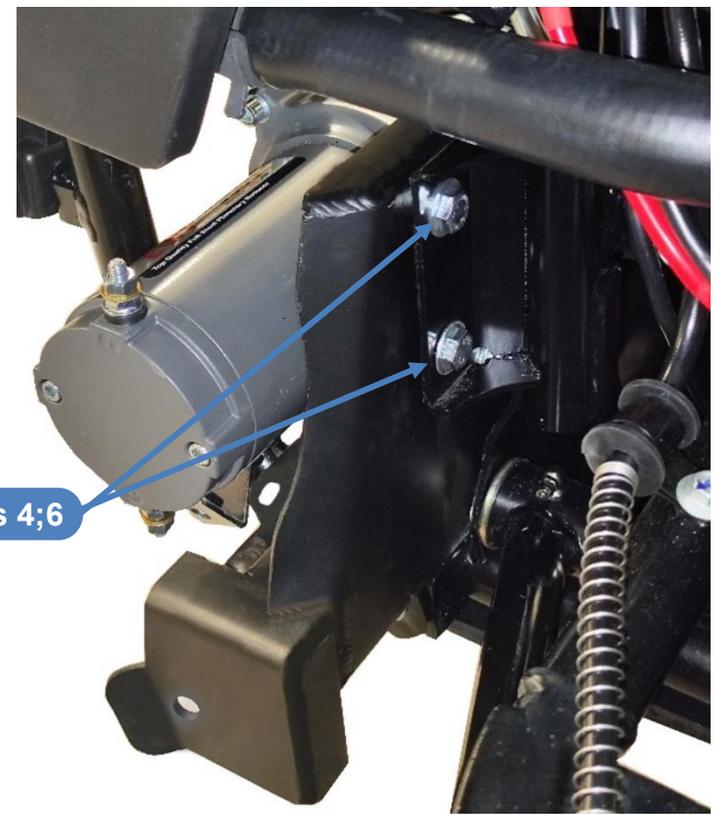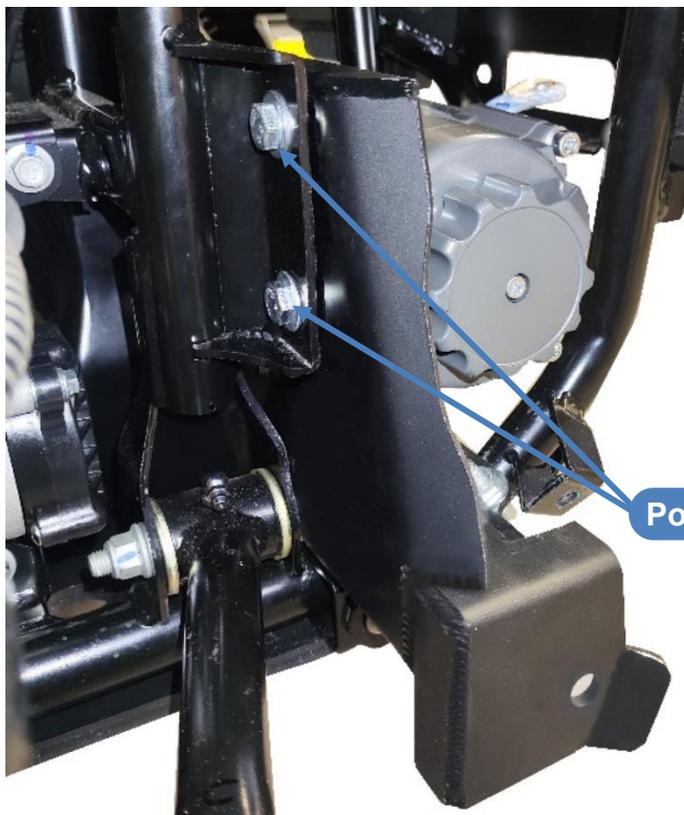


Step 8

Install the snow plow adapter (Pos.1) onto the front frame tube. Secure it on both sides of the ATV using M8x26 U-bolts (Pos.3), Ø8 mm washers (Pos.6) and M8 nyloc nuts (Pos.8).

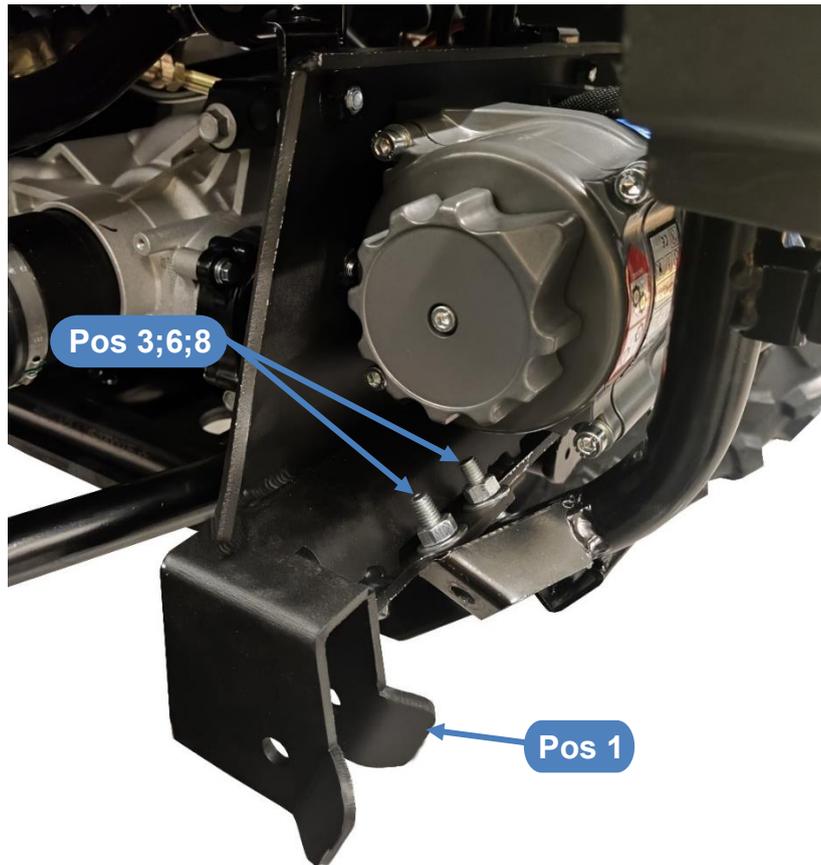

Step 9

Install bushes (Pos.2) to the snow plow adapter. For fastening use M10x50 bolts (Pos.5), Ø10 mm washers (Pos.7) and M10 nyloc nuts (Pos.9).

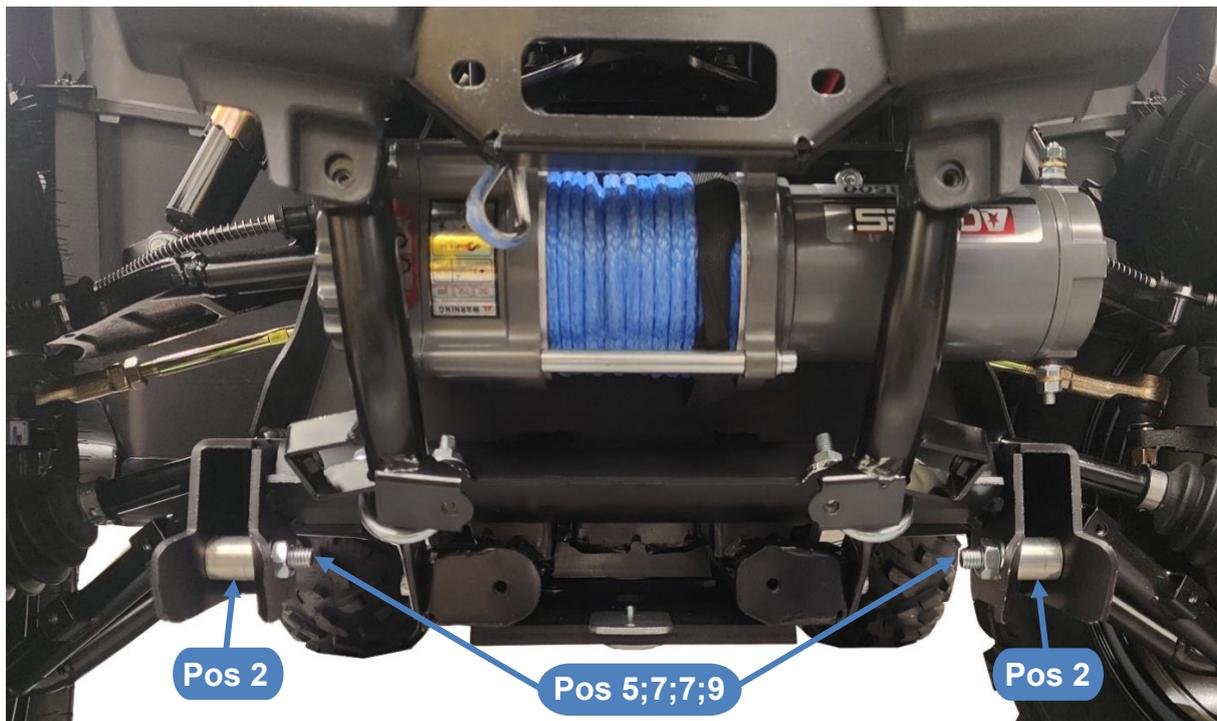

Step 10 Reconnect the winch power wires.

Step 11 Reinstall the original front plastic cover, front bumper, winch fairlead and radiator cover.
If you are using the Iron Baltic skid plate, also reinstall the control arm protectors and the front protection with reinforcement.

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd