

IRON BALTIC


SNOW PLOW MOUNTING KIT

CAN AM

Renegade 1000 / Outlander 1000

Code 03.3500

Version 03112023

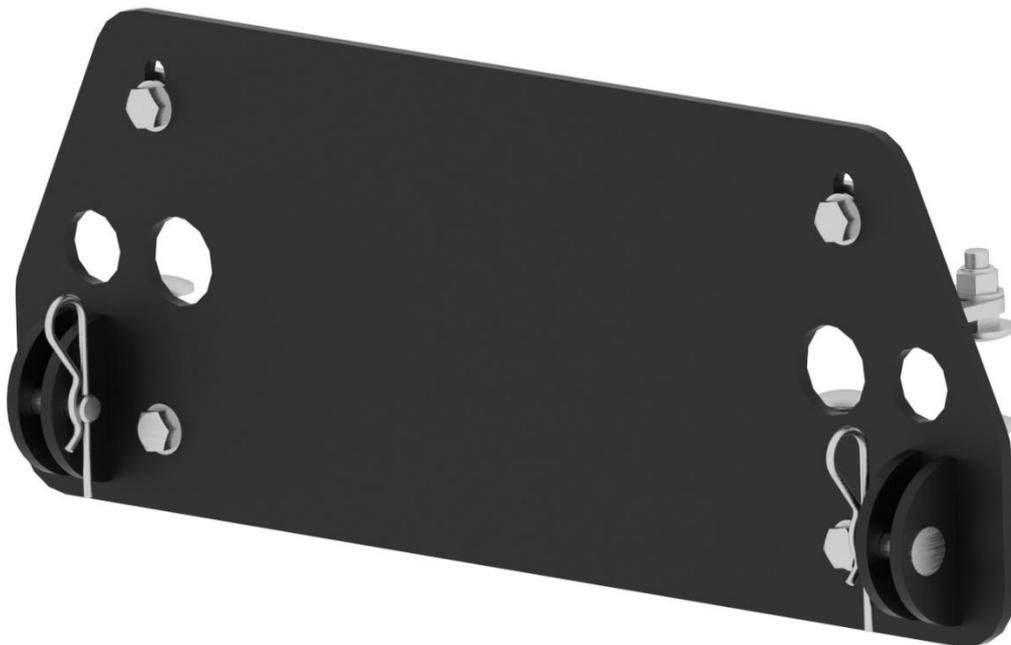

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/VkxMWifA

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.3501K	1
2	Bracket for adapter	03.3502	4
3	Washer 8/24 DIN 9021	OT.04.02.040	12
4	Bolt M8x25 DIN 933	OT.02.02.190	4
5	Pin 10x40 mm DIN 1444	14.003	2
6	Cotter pin 2 mm DIN 11024	OT.07.01.010	2
7	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
8	Nut M8 Nyloc DIN 985	OT.03.02.040	8

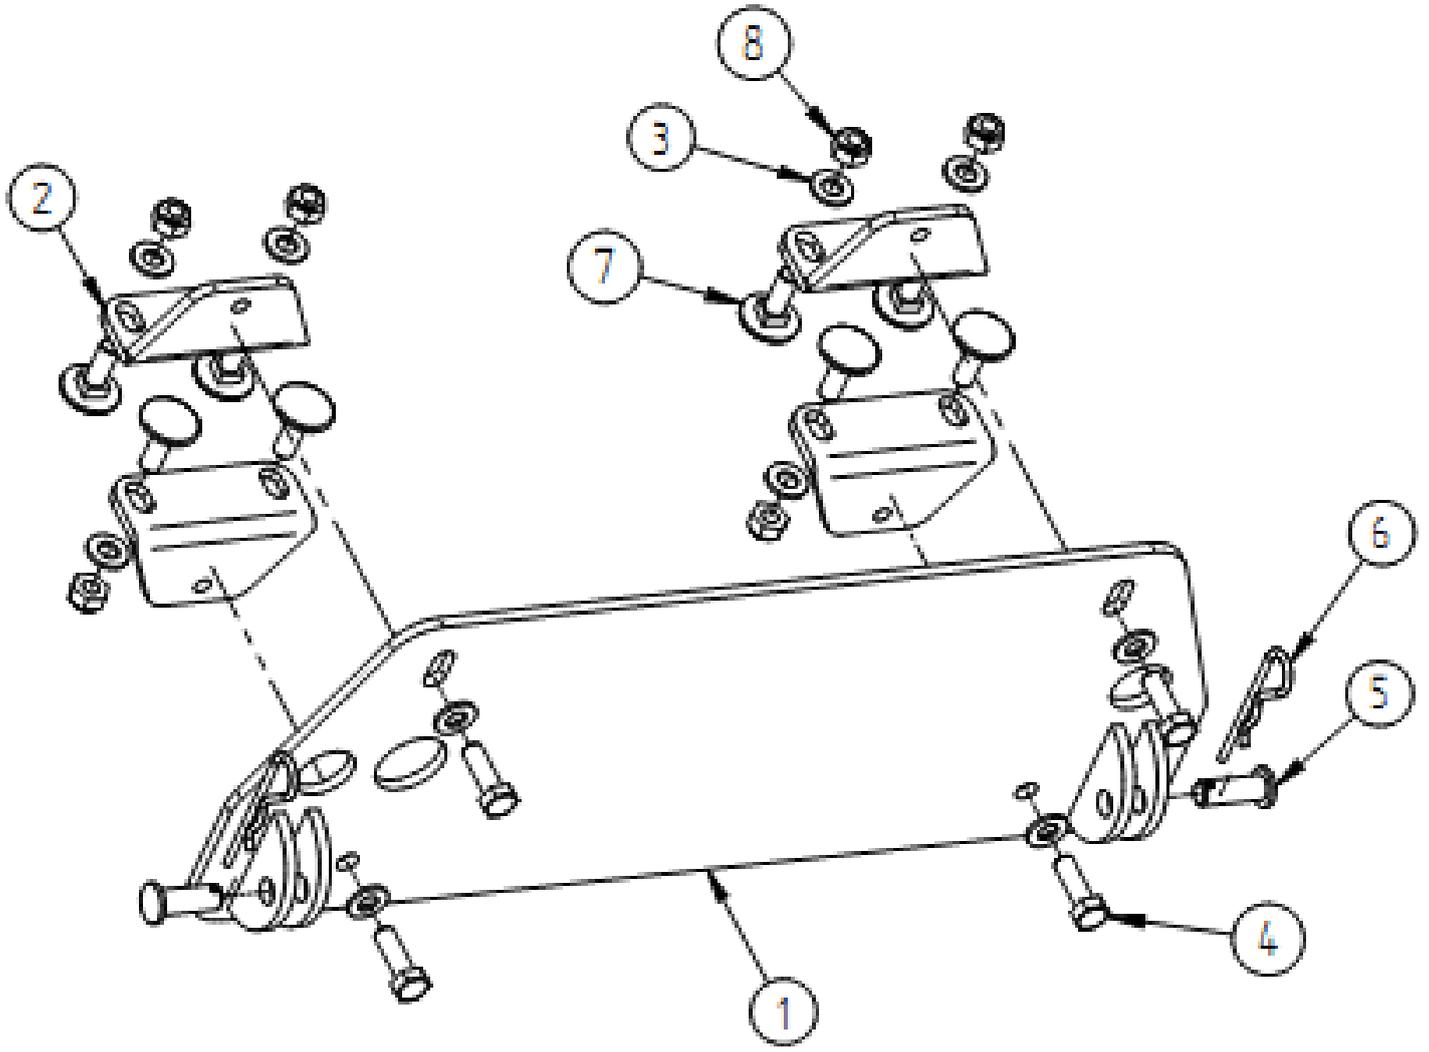


FITTING INSTUCTIONS

Step 1 Remove standard plastic covers.





Step 2 Remove original bolts.

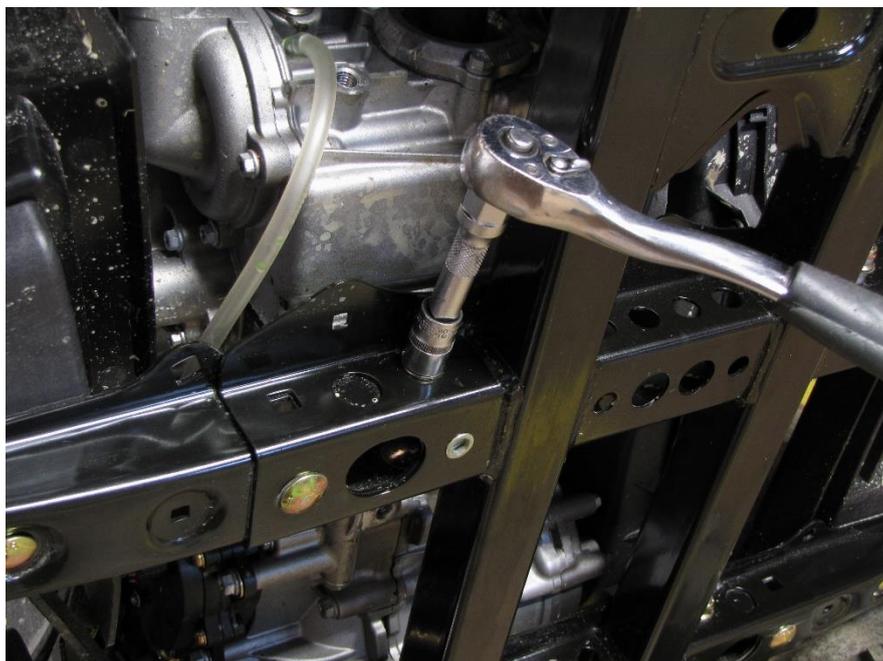



Step 3

Install brackets for adapter 03.3502, use carriage bolts M8x25 and nylock nuts.

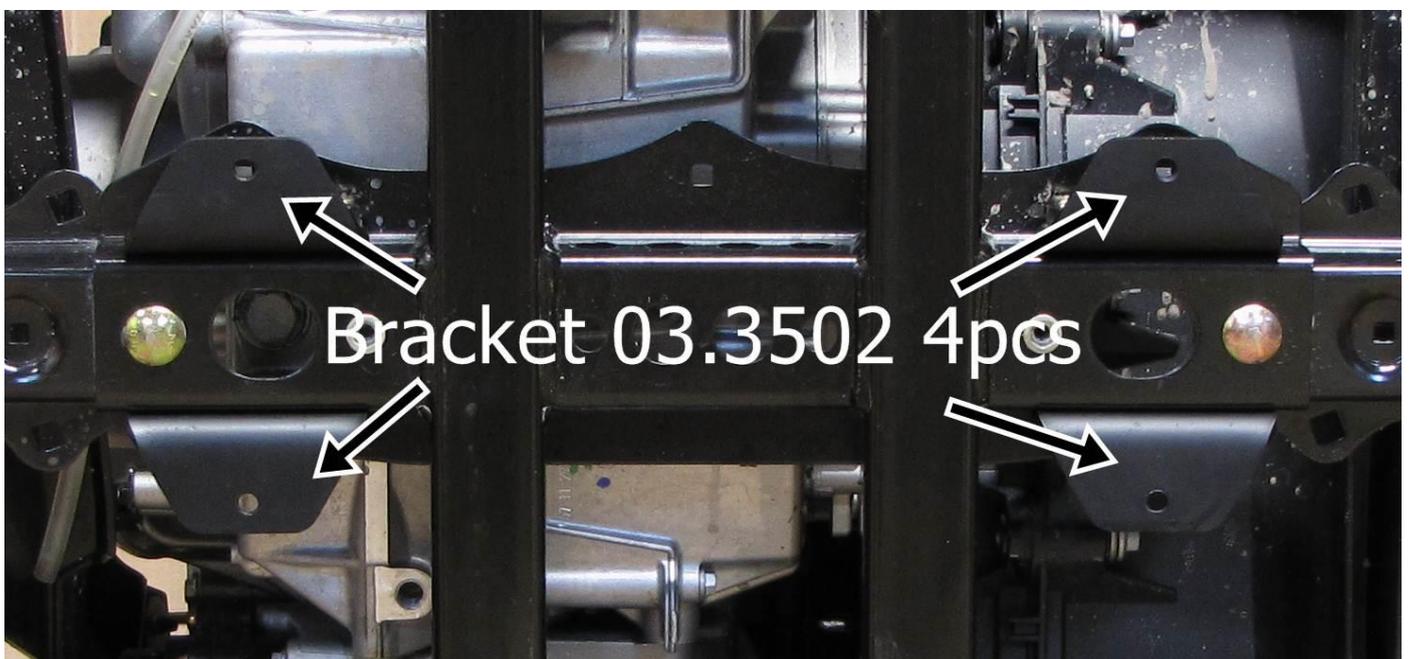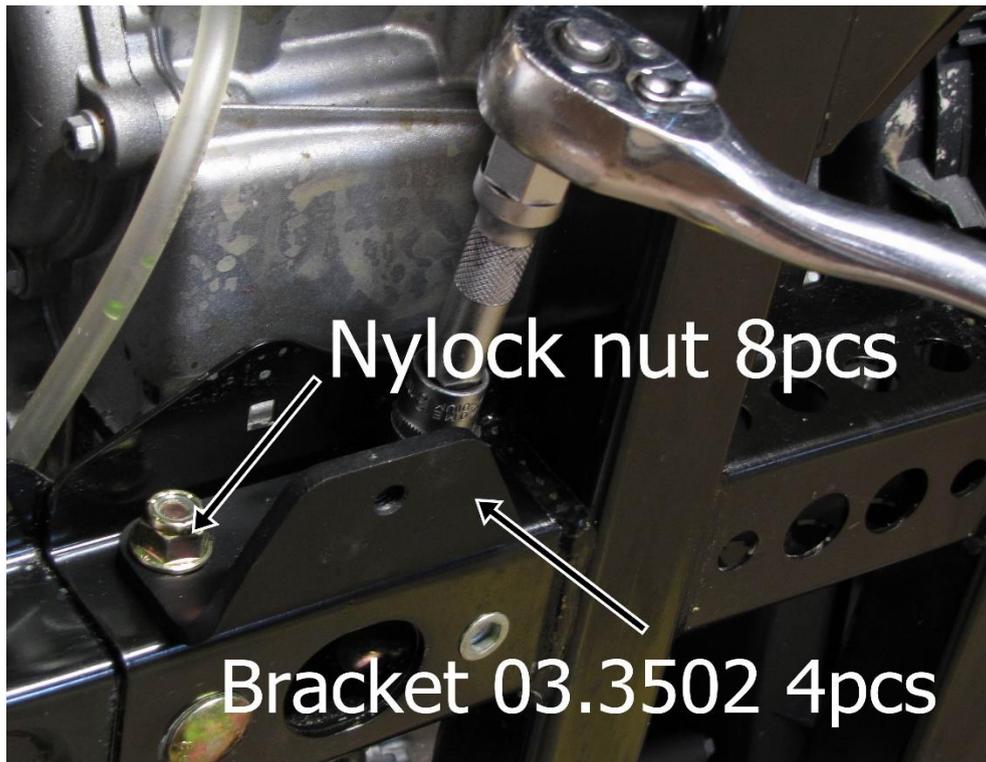

Step 4

Install adapter 03.3501K, use bolts M8x25.

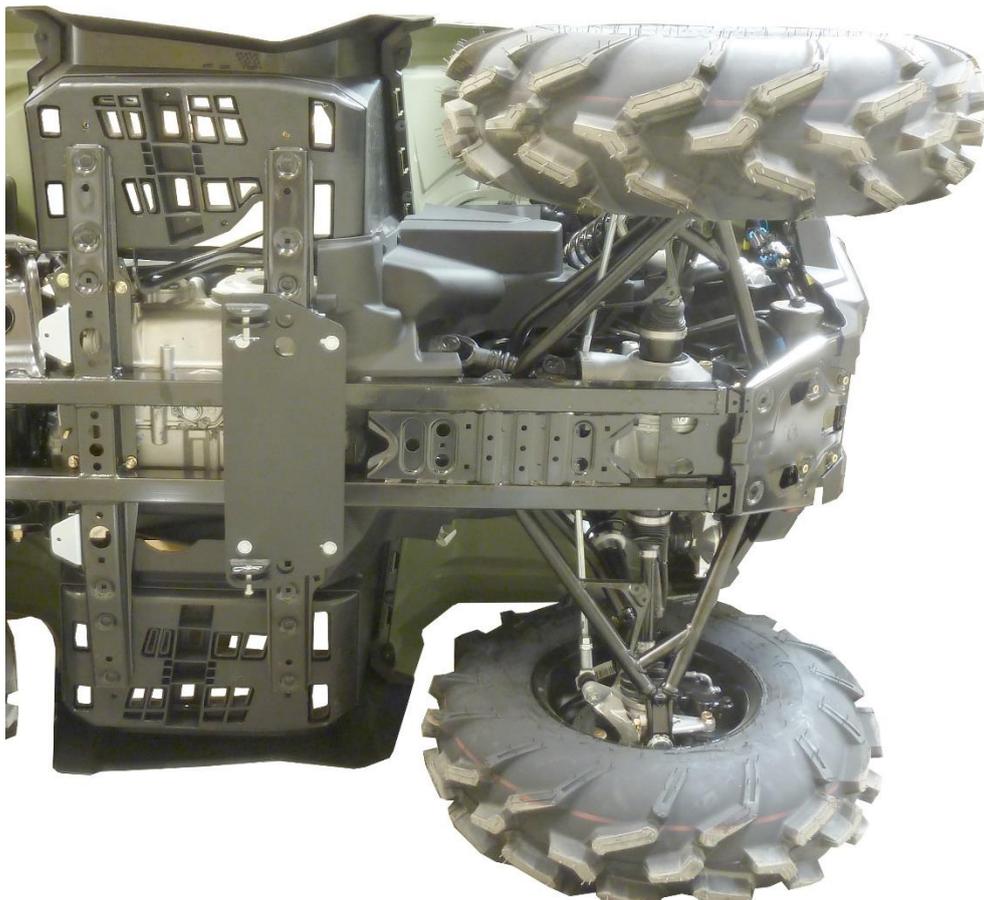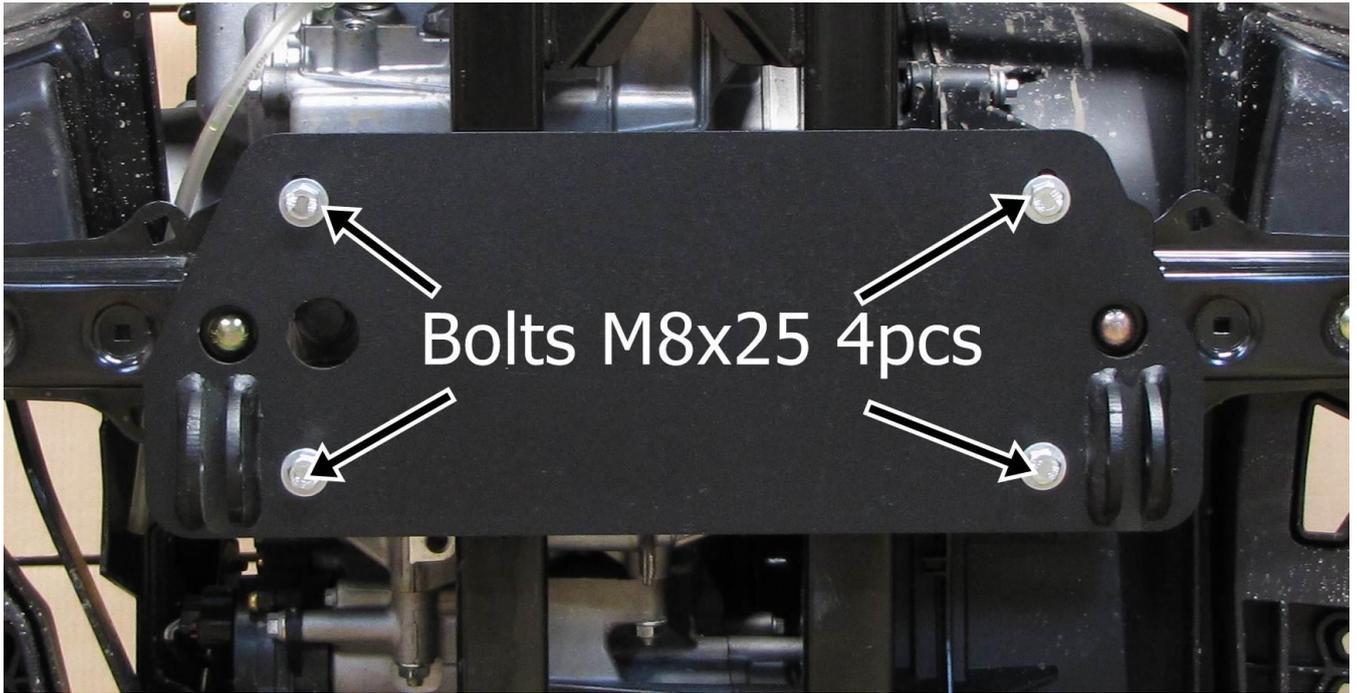

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

