



MID-MOUNT ADAPTER

POLARIS

XP 900 / XP 1000 Ranger

Code 03.4800

Version 04112023



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/k359YnXs


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.4801K	1
2	installation plate	03.4802	2
3	Bracket	03.4803	1
4	Left bracket	03.4804	1
5	Right bracket	03.4805	1
6	Distance bush	05.5405	2
7	Pin 10x40 mm DIN 1444	14.003	2
8	Cotter pin 2 mm DIN 11024	OT.07.01.010	2
9	Bolt M5x25 DIN 933	OT.02.02.010	2
10	Bolt M8x30 DIN 933	OT.02.02.200	2
11	Bolt M8x35 DIN 933	OT.02.02.210	2
12-1	Bolt M8x70 DIN 933	OT.02.02.260	2
12-2	Bolt M8x80 DIN 933	OT.02.02.270	2
13	Washer M5 DIN 125	OT.04.01.010	2
14	Washer M8/20 SFS 3738	OT.04.01.030	6
15	Nut M8 Nyloc DIN 985	OT.03.02.040	2


Polaris Ranger XP900

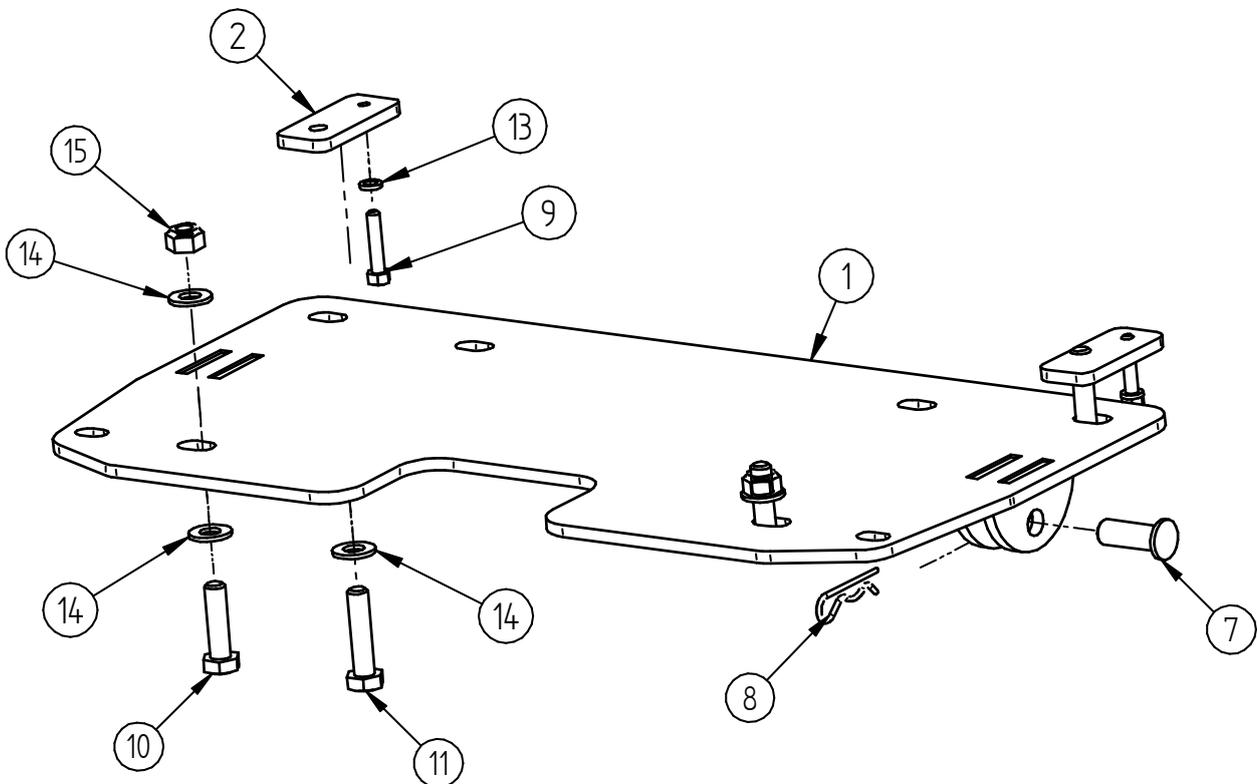

Polaris Ranger XP1000 (...-2020)

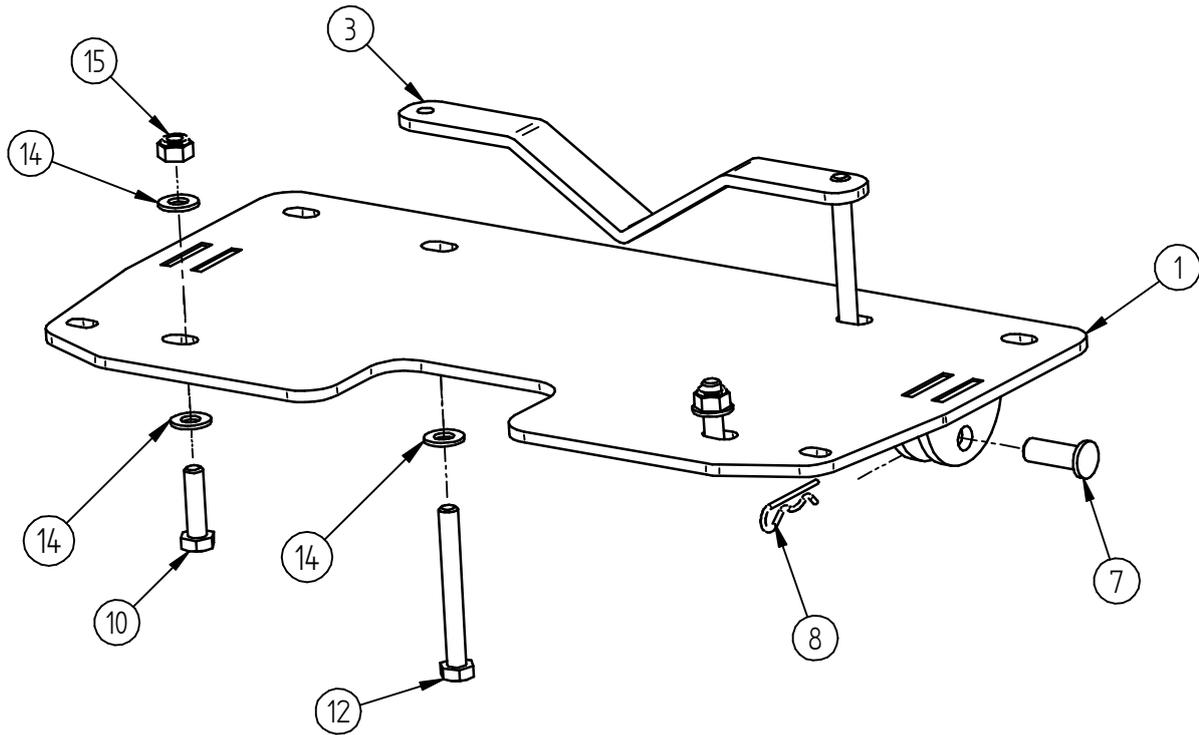

Polaris Ranger 1000 (2021-...)

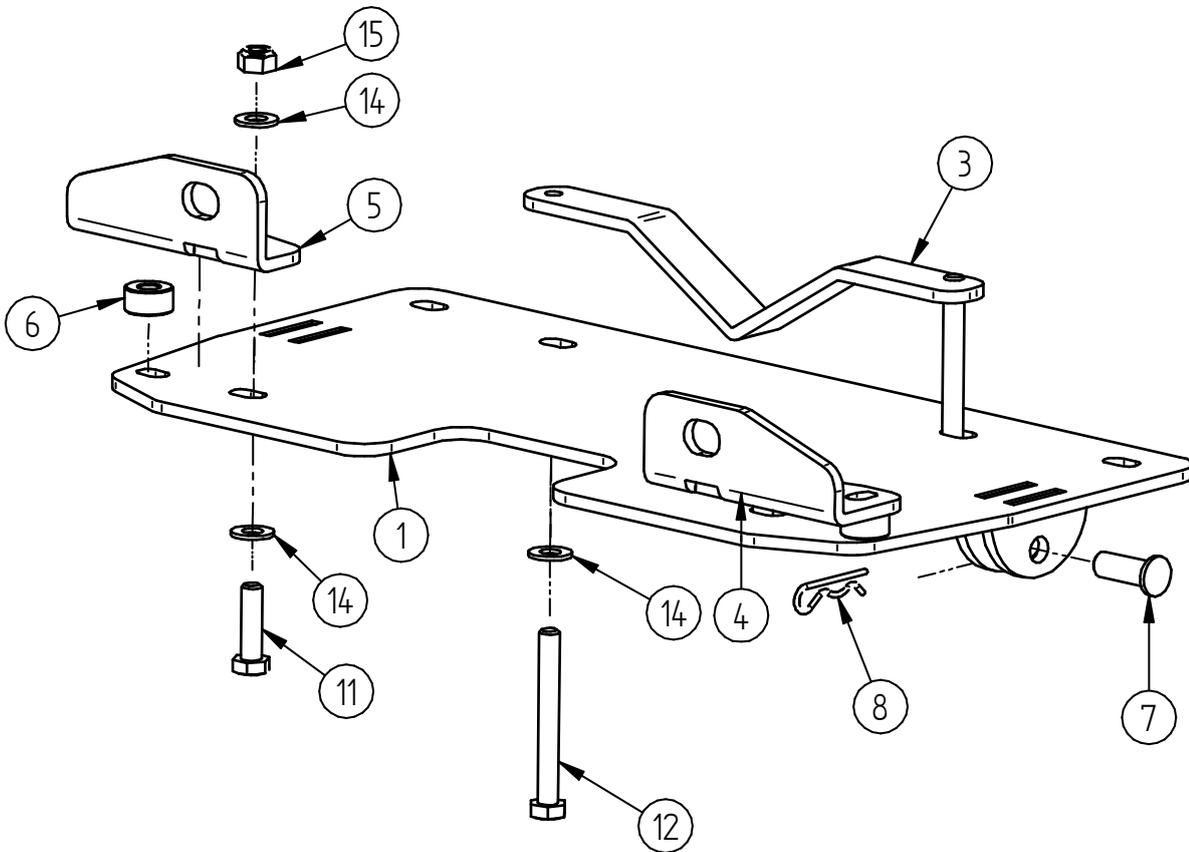


FITTING INSTRUCTIONS

Ranger XP900


Step 1

If you're using IronBaltic skid plate, then remove the front protection and bolts and washers on the middle part (indicated with arrows on the illustration below). Place the installation plate 03.4802 behind the frame tube and secure it with M5 bolt.

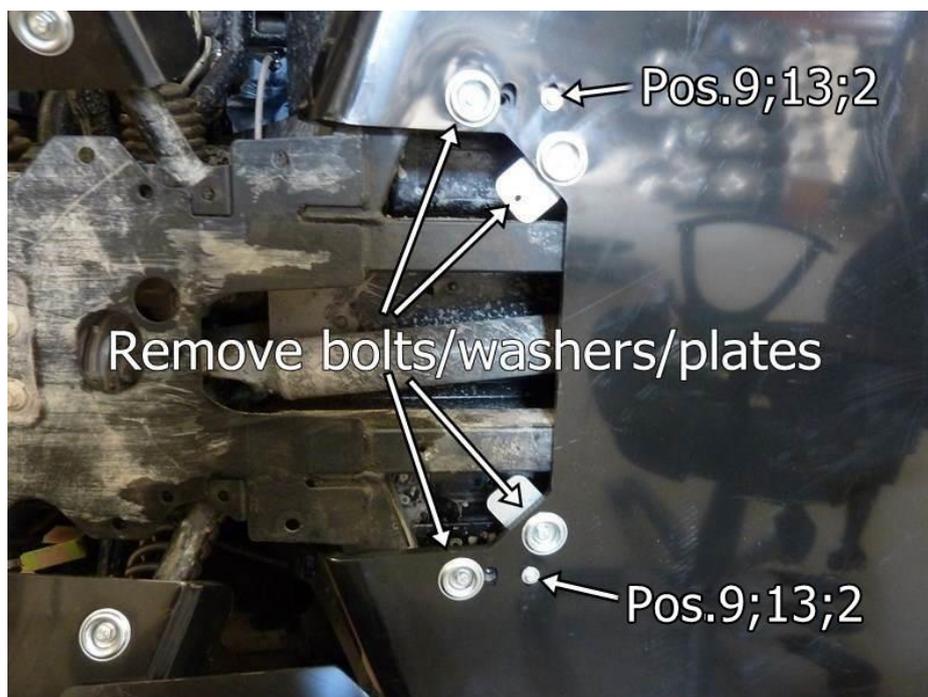

Step 2

Install adapter plate 03.4801K

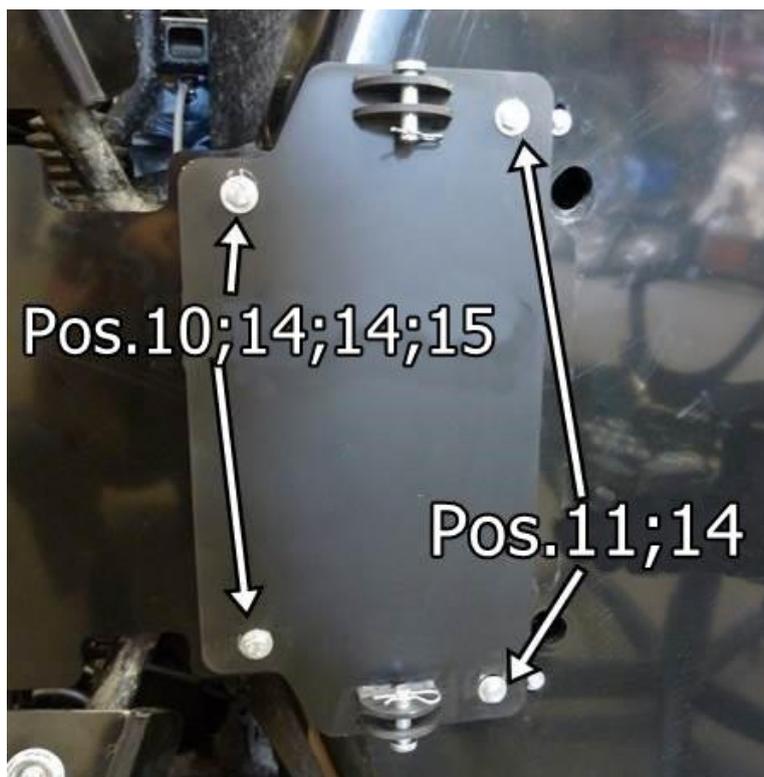


FITTING INSTRUCTIONS

Ranger XP1000 (...-2020)


Step 1

Place the bracket 03.4803 behind the frame tubes. Be careful with brake lines.

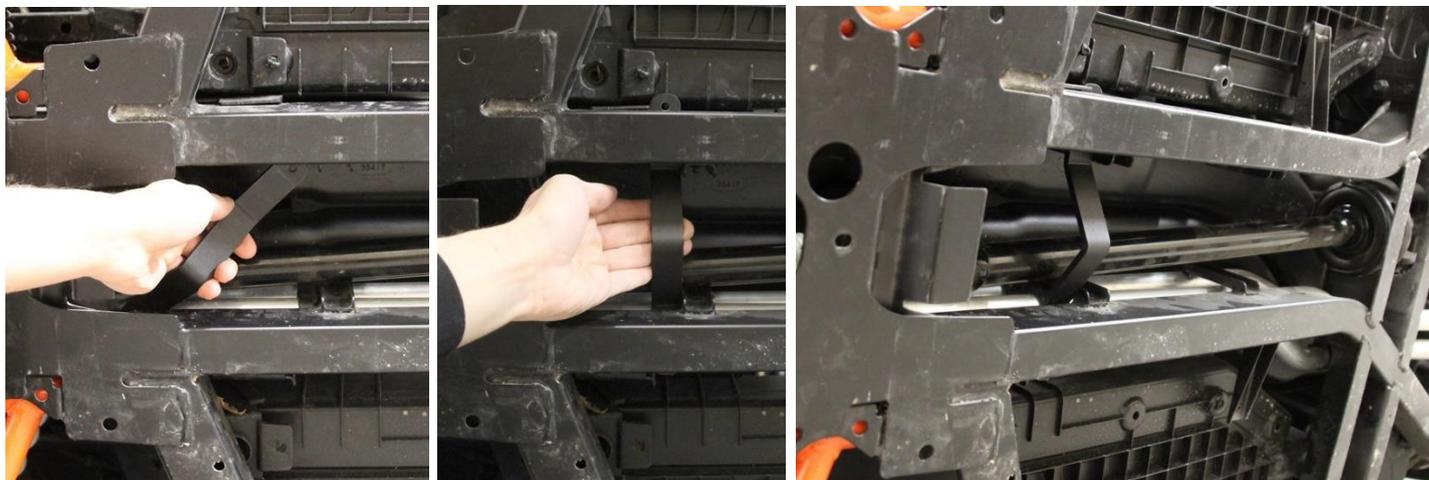


Step 2

Install adapter 03.4801K.

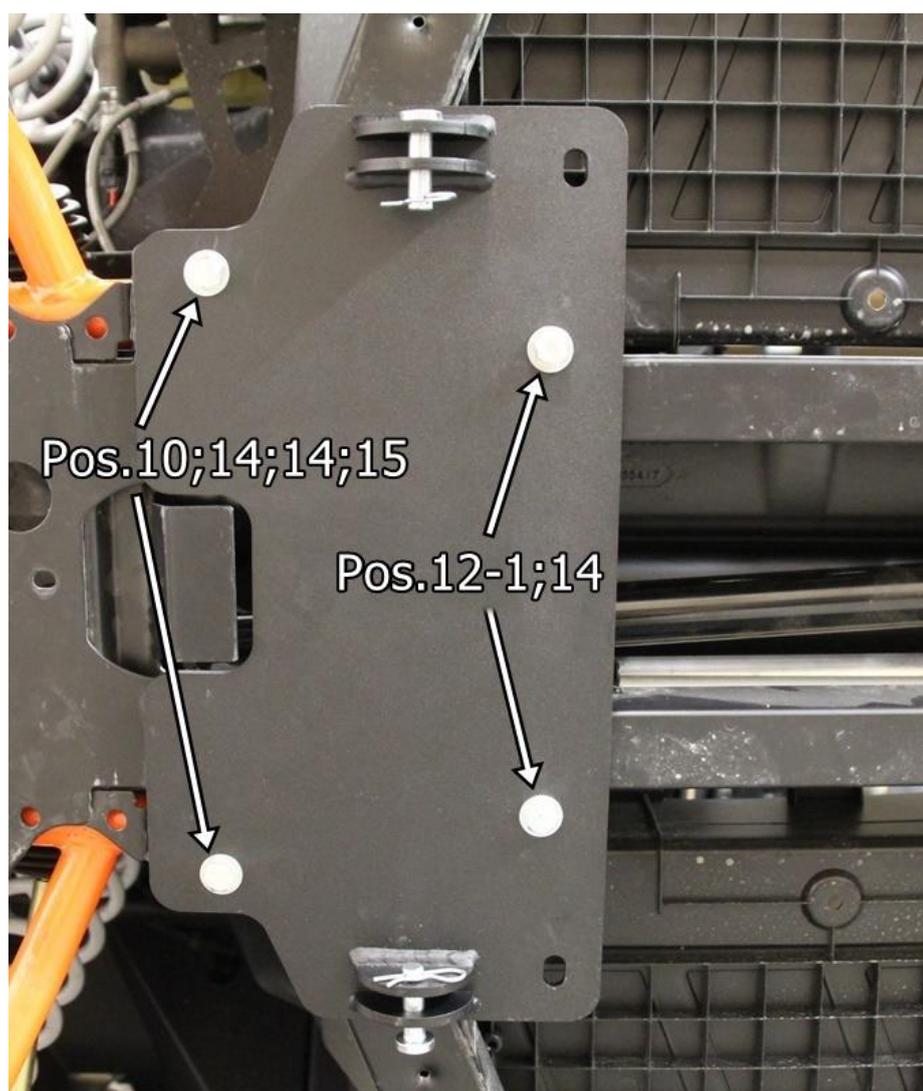


Step 1

If you are using Iron Baltic skid plate, remove the front protection and one of the side protections. Place the bracket 03.4803 behind the frame tubes. Be careful with brake lines.

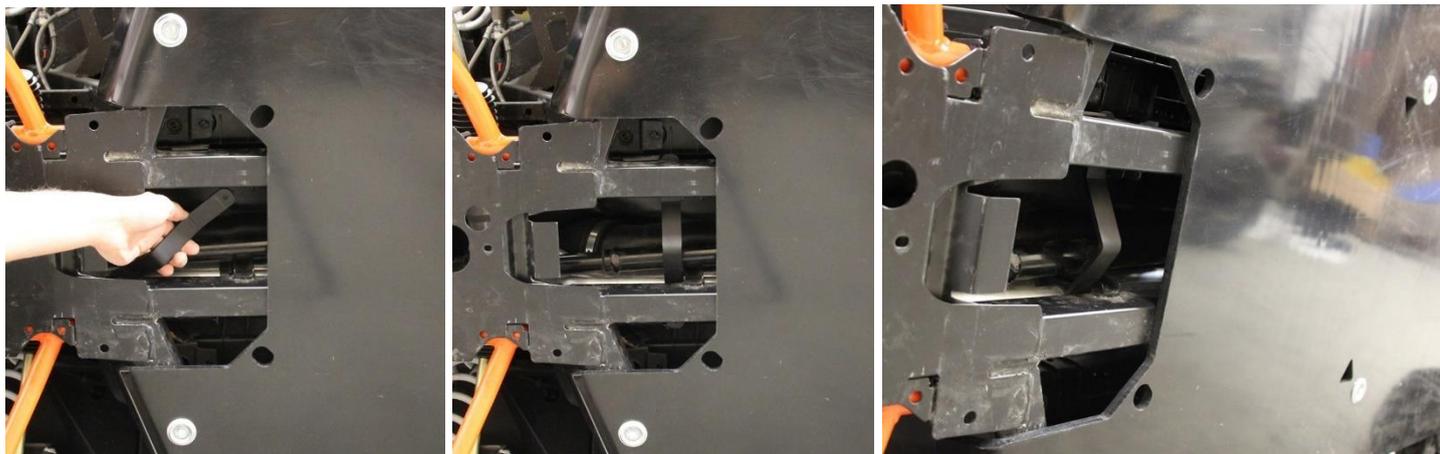

Step 2

Install skid plate front protection and then adapter plate 03.4801K. Hold bracket 03.4803 behind the skid plate mid part to install bolts (Pos. 12-2).

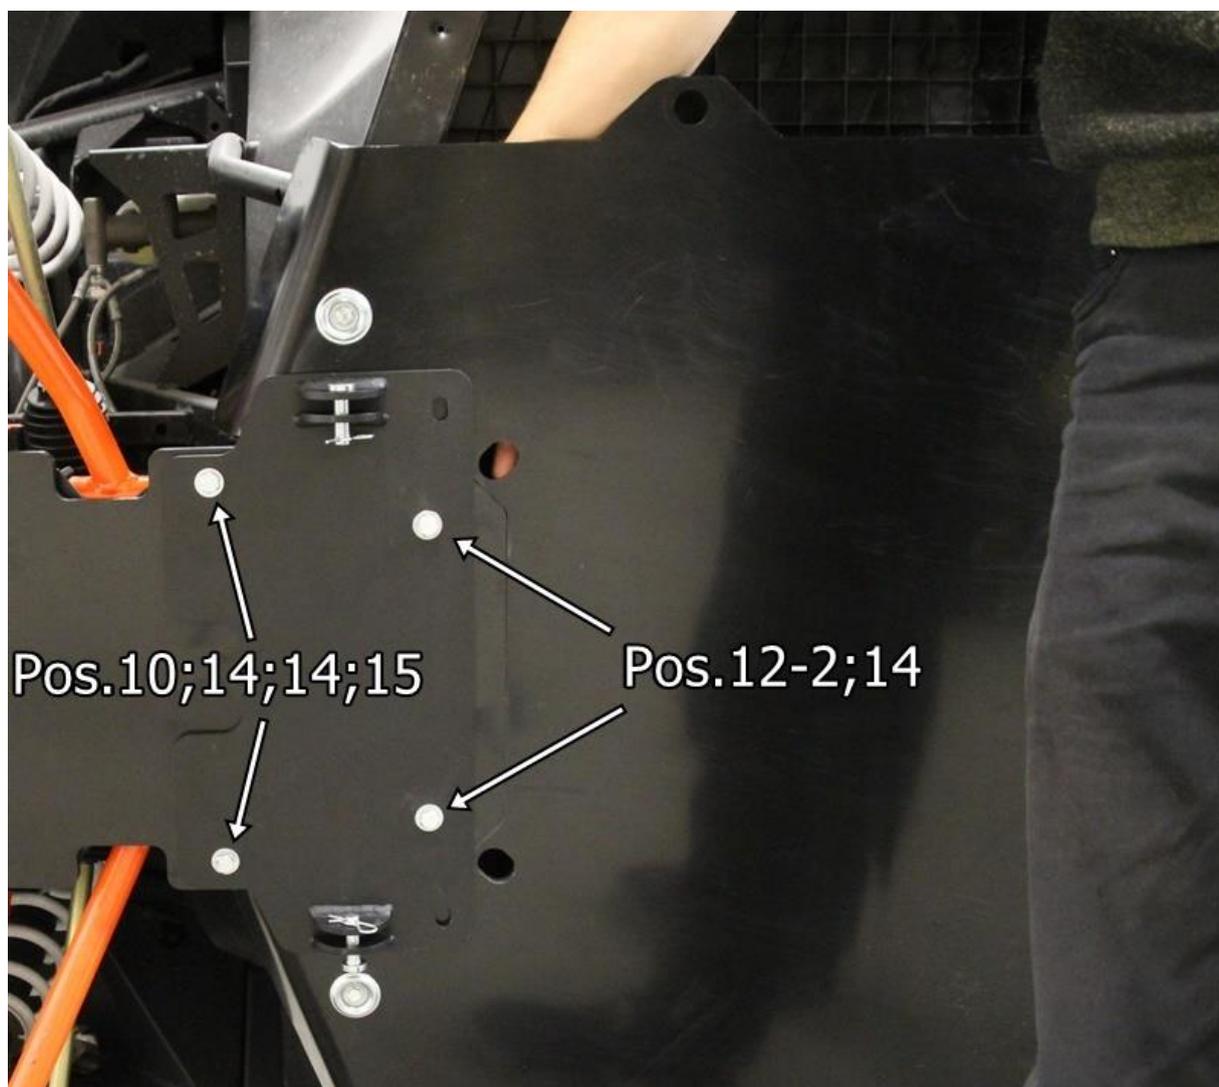


FITTING INSTRUCTIONS

Ranger 1000 (2021-...)


Step 1

Place the bracket 03.4803 behind the frame tubes. Be careful with brake lines.

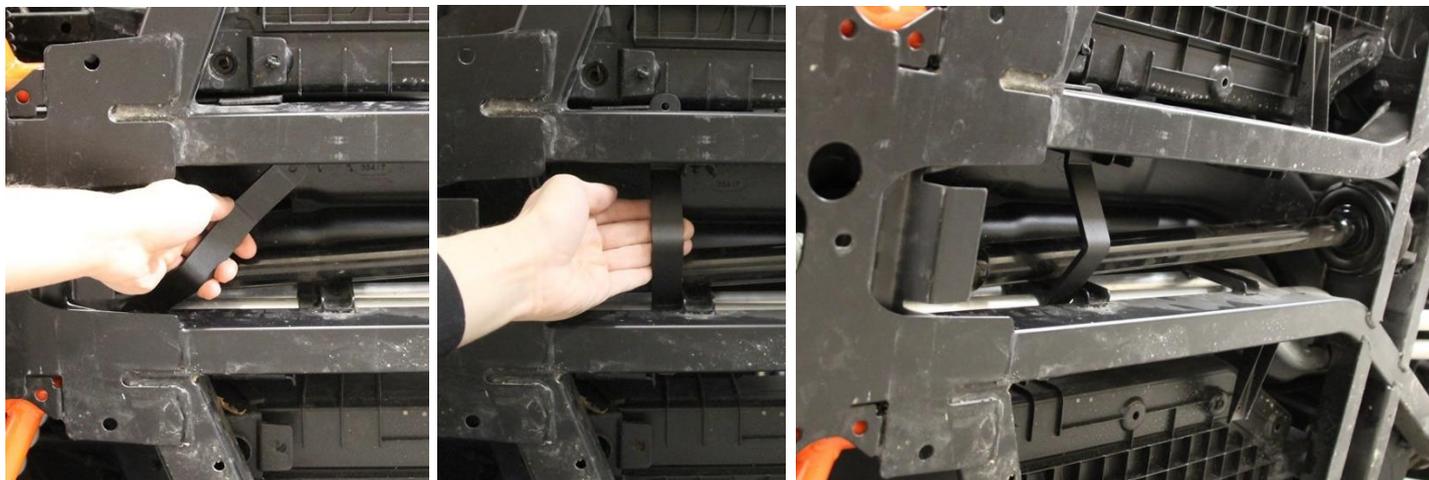



Step 2

Install left and right installation bracket under front a-arm bolt.

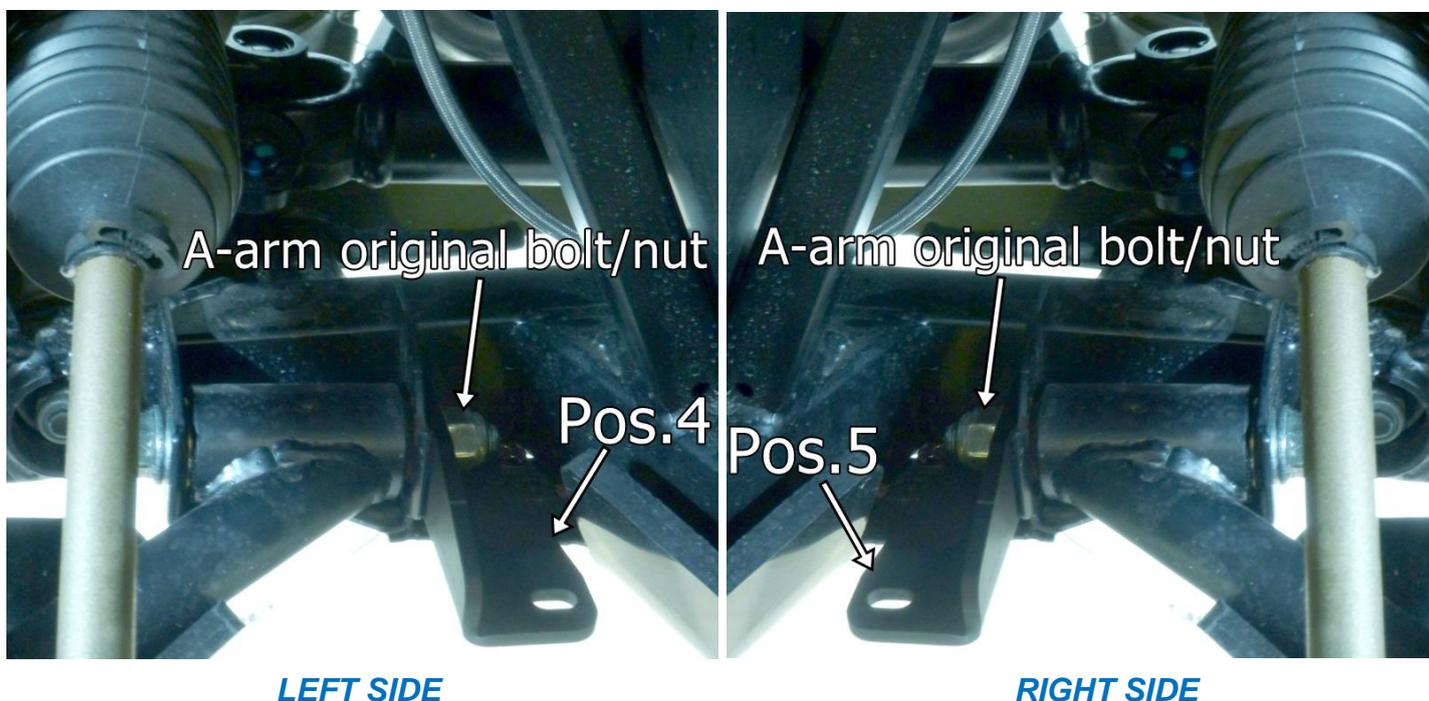

Step 3


Install adapter 03.4801K.

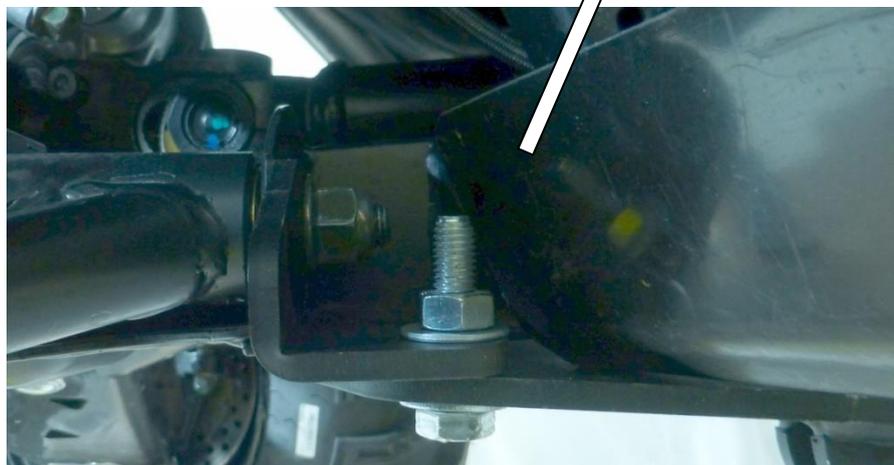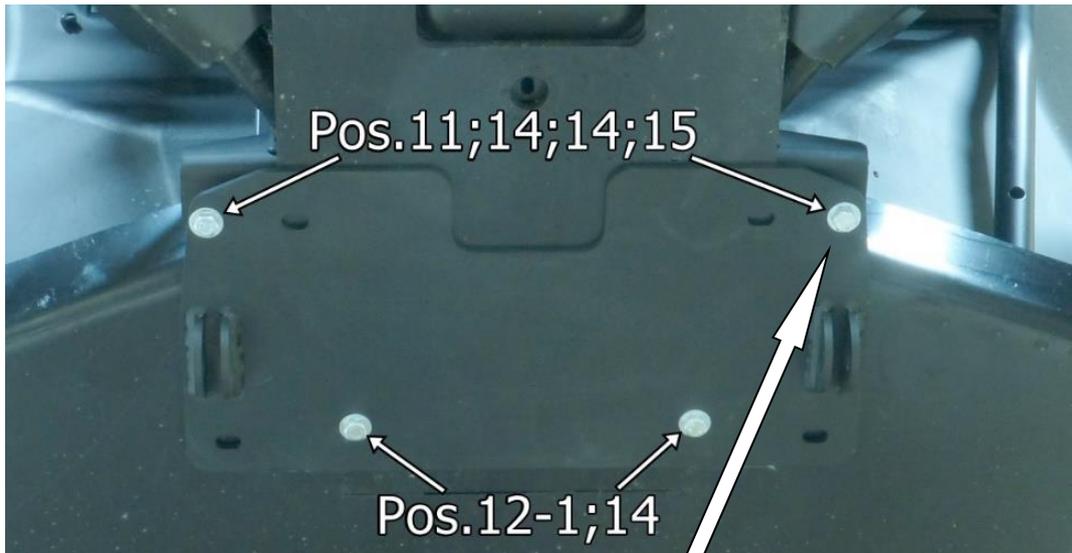

WITHOUT IRON BALTIC SKID PLATE



Step 1

If you are using Iron Baltic skid plate, remove the front protection and one of the side protections. Place the bracket 03.4803 behind the frame tubes. Be careful with brake lines.

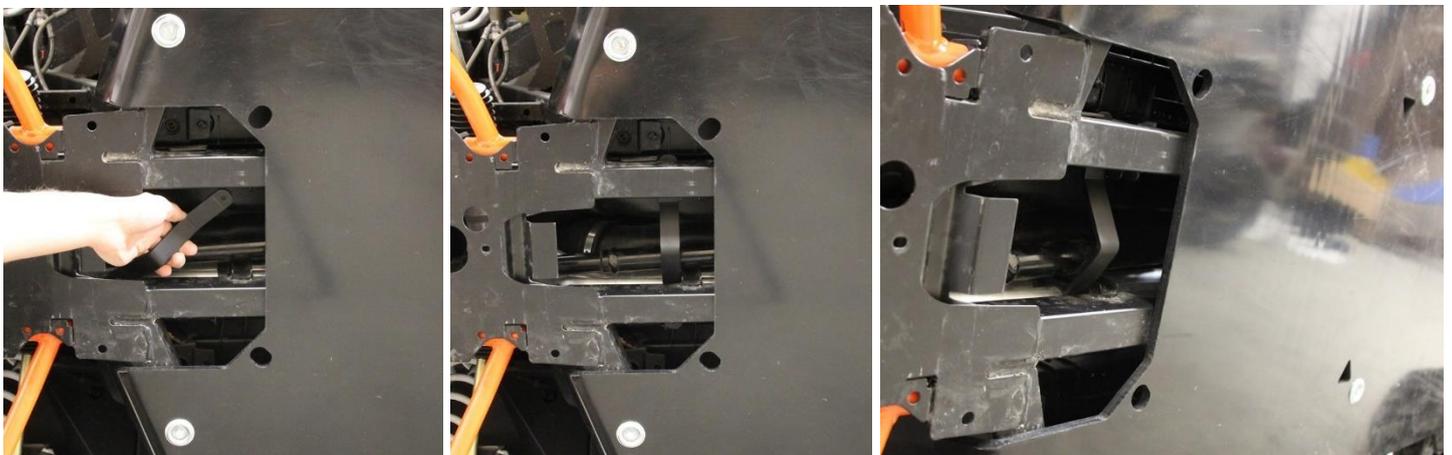

Step 2

Install skid plate front protection and then adapter plate 03.4801K. Hold bracket 03.4803 behind the skid plate mid part to install bolts (Pos. 12-2). Install distance bush (Pos.6) between adapter and installation brackets (Pos.4 and Pos.5)

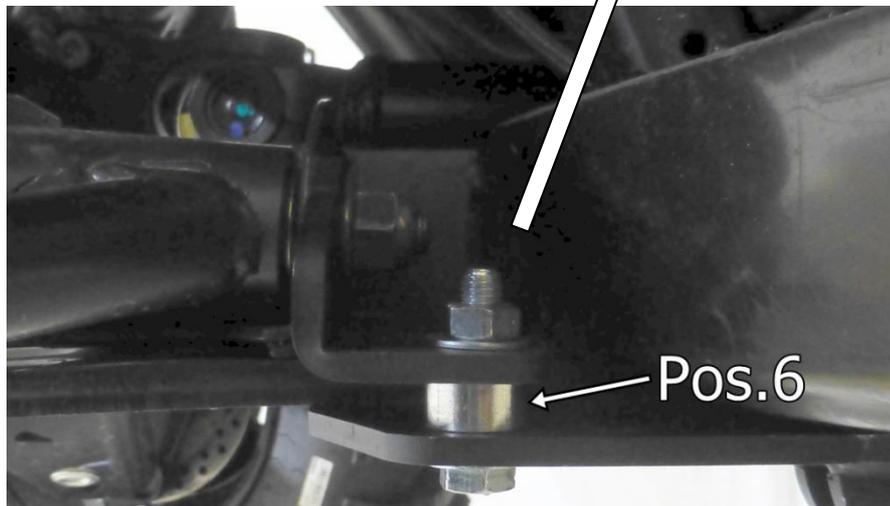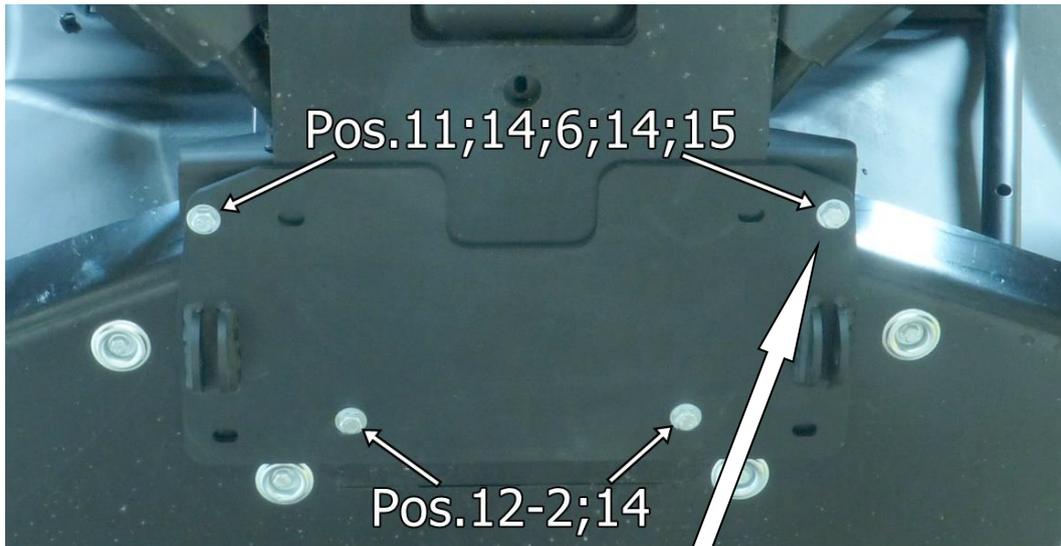

WITH IRON BALTIC SKID PLATE

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

