

IRON BALTIC


SNOW PLOW MOUNTING KIT

POLARIS

570 Sportsman Touring / 570 X2 Sportsman

Code 03.5400

Version 06112023

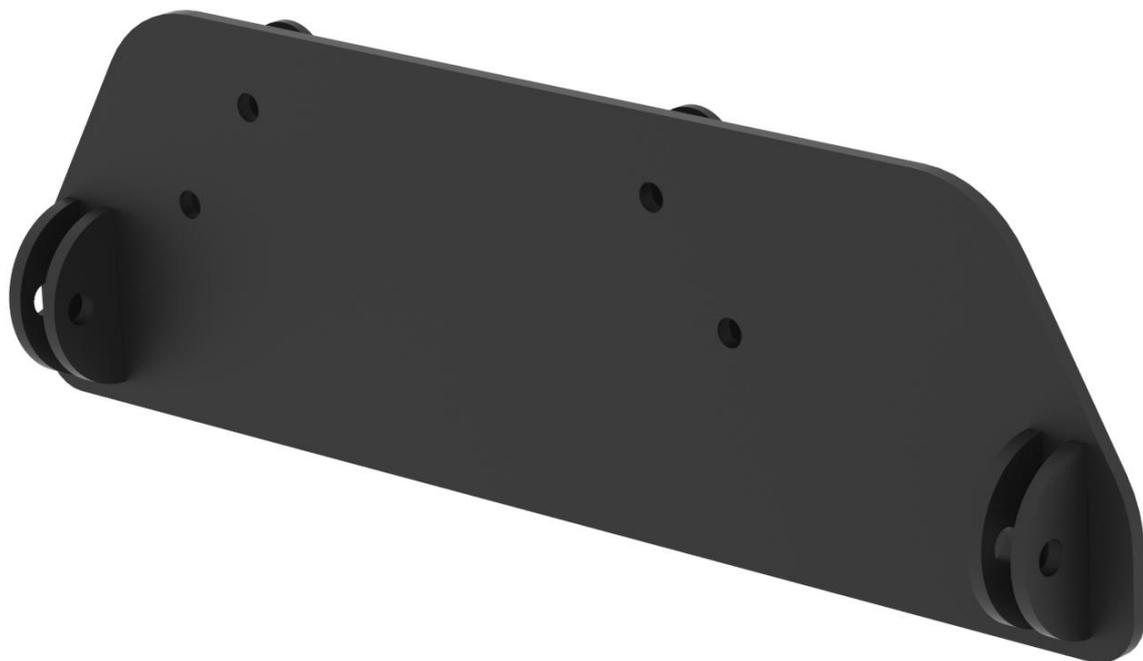

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/uHjP4M1J

SPECIFICATION




Pos.	Description	Code	Amount
1	Adapter	03.5401K	1
2	Installation plate	03.5402K	2
3	Pin 10x40 mm DIN 1444	14.003	2
4	Cotter pin 2 mm DIN 11024	OT.07.01.010	2
5	Washer M8/20 SFS3738	OT.04.03.030	4
6	Bolt M8x30 DIN933	OT.02.02.200	4

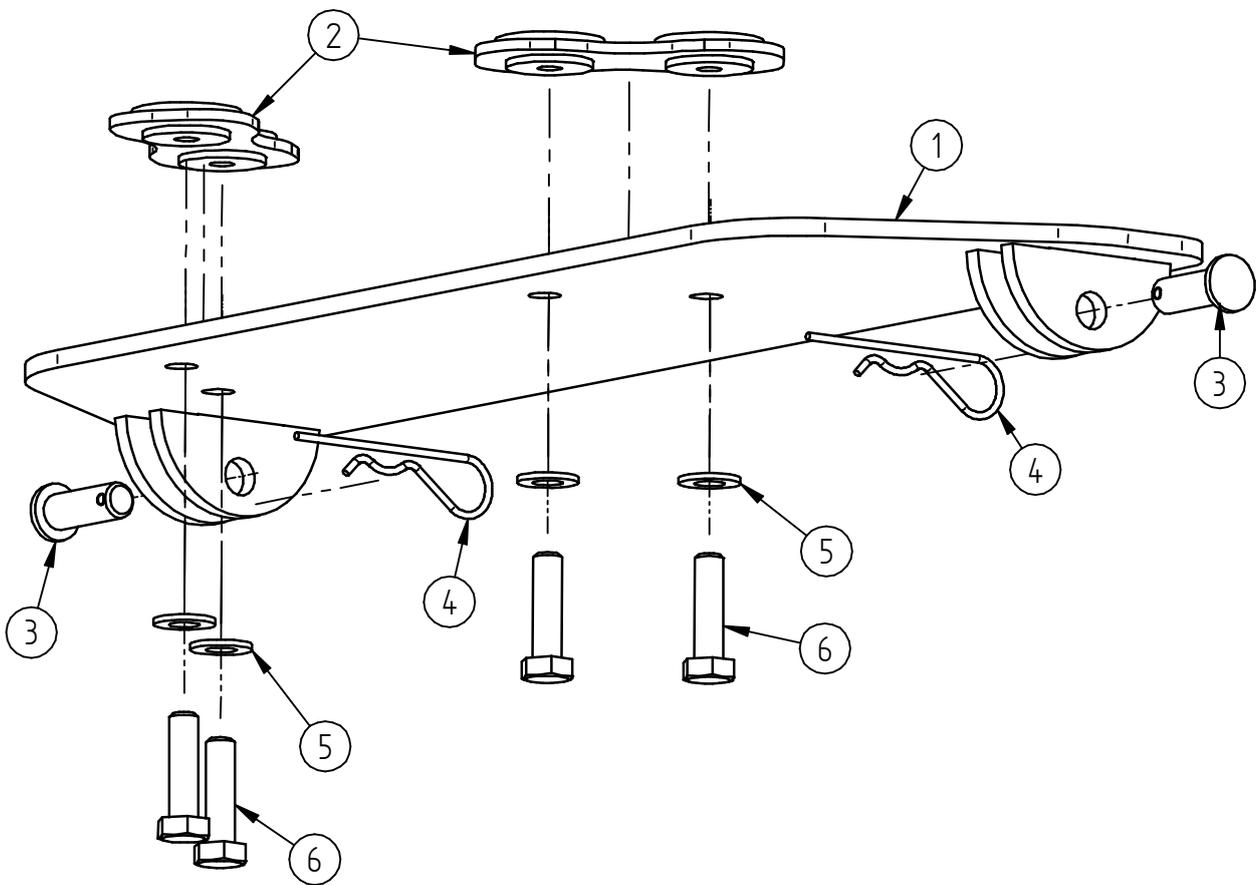

FITTING INSTRUCTIONS

Step 1

Place the installation plate 03.5402K behind the ATV frame. Installation plate will fit into the holes located on the ATV frame. Hold the installation plate in place and install the adapter with the bolts supplied.

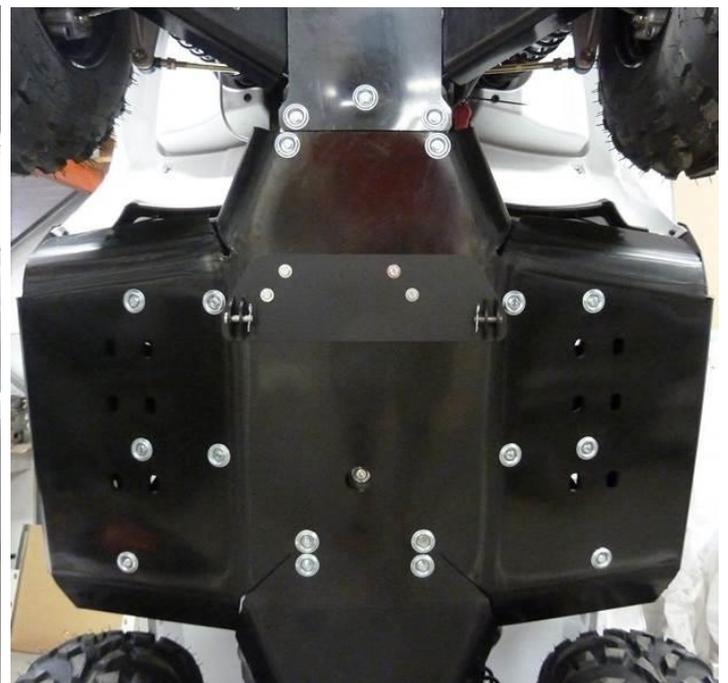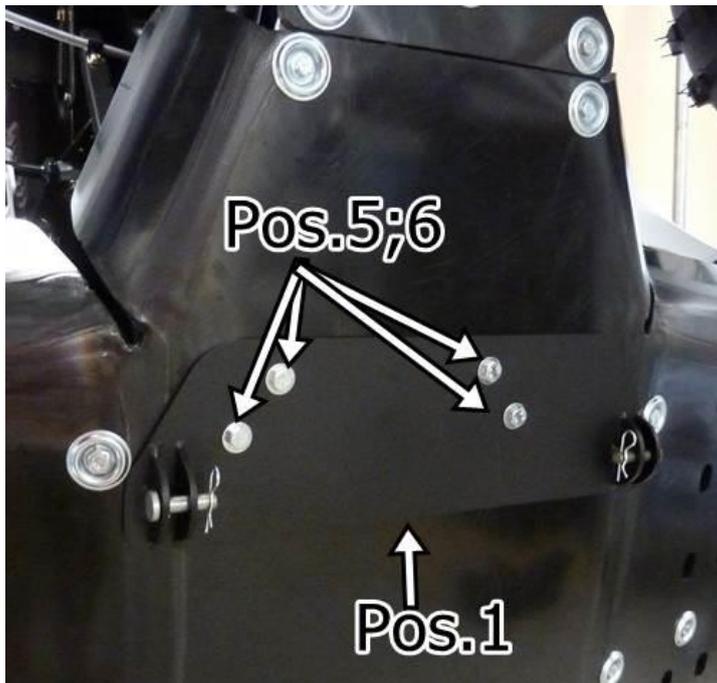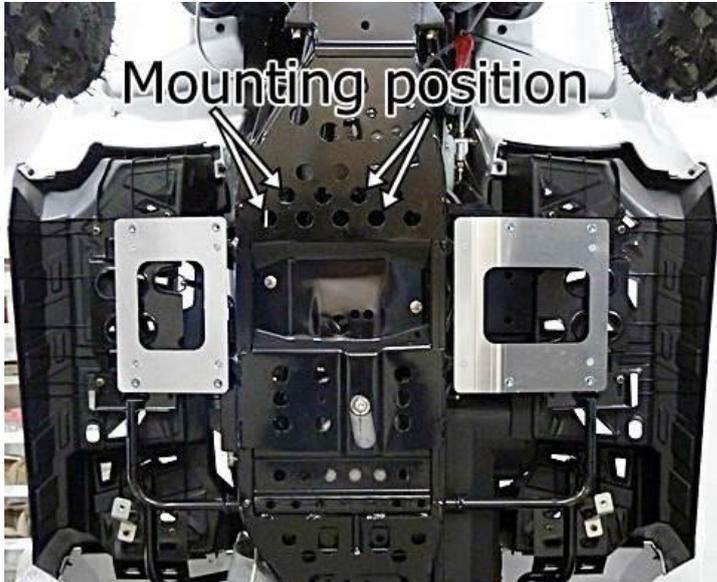

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

