

IRON BALTIC

SNOW PLOW MOUNTING KIT

POLARIS

RZR XP 1000 / 900S / 1000S

Code 03.5500

Version 06112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/YVkJjoFg

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.5501K	1
2	Distance plate	03.4003	2
3	Lifting plate	20.5001	2
4	Pin 10x40 mm	14.003	2
5	Locking pin 2 mm DIN11024	OT.07.01.010	2
6-1	Pipe clamp 38 mm	OT.05.01.030	2
6-2	Pipe clamp 45 mm	OT.05.01.042	2
7	Pipe clamp bracket 38 mm	OT.05.01.030	2
8	Pipe clamp 52 mm	OT.05.01.044	2
9	Bolt M8x20 DIN933	OT.02.02.180	4
10	Washer Ø8/20 SFS3738	OT.04.03.030	16
11	Nyloc nut M8 DIN985	OT.03.02.040	12

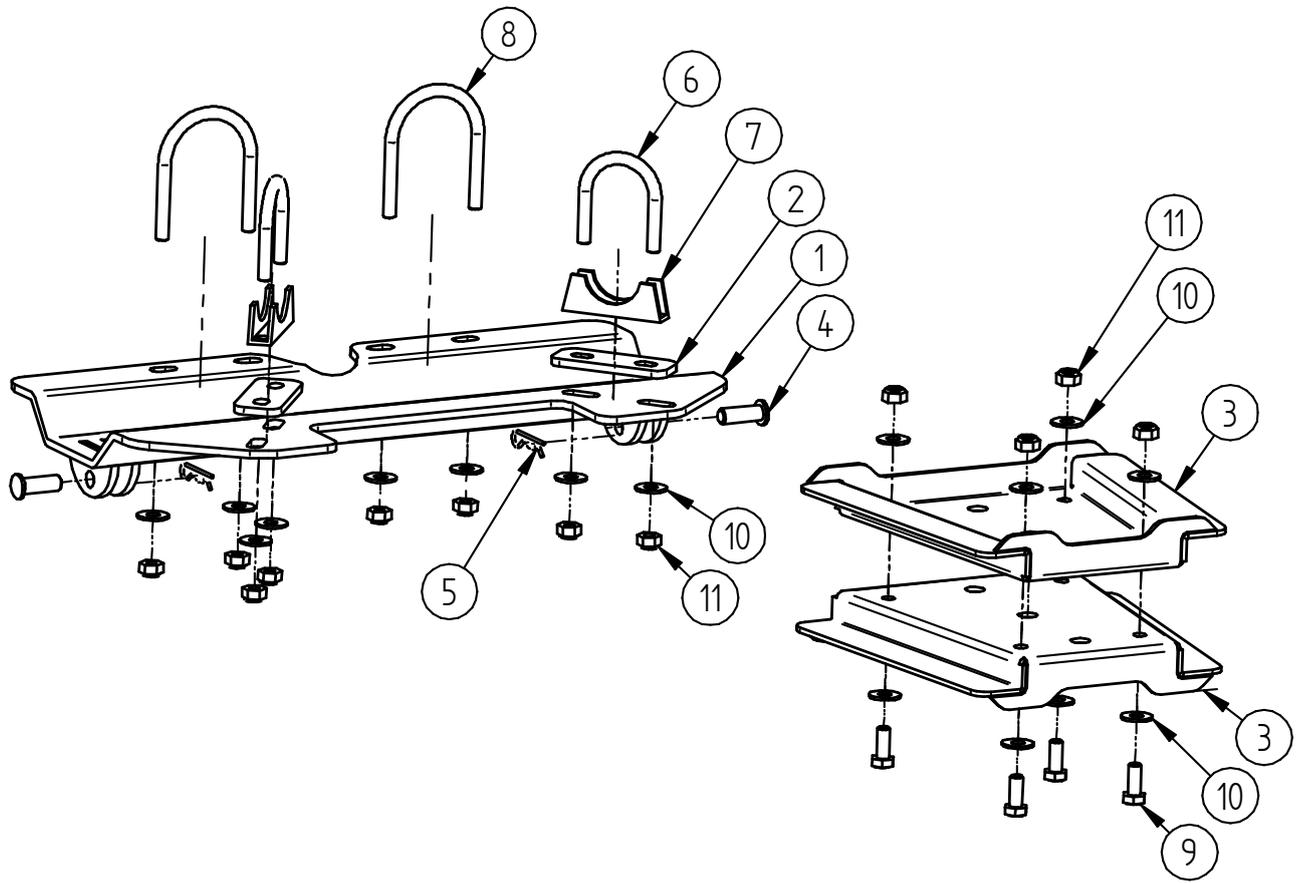


FITTING INSTRUCTIONS

Polaris RZR XP 1000


Step 1

Install snow plow adapter. Use 45 mm and 52 mm pipe clamps, Ø8/20 washers and M8 Nyloc nuts.

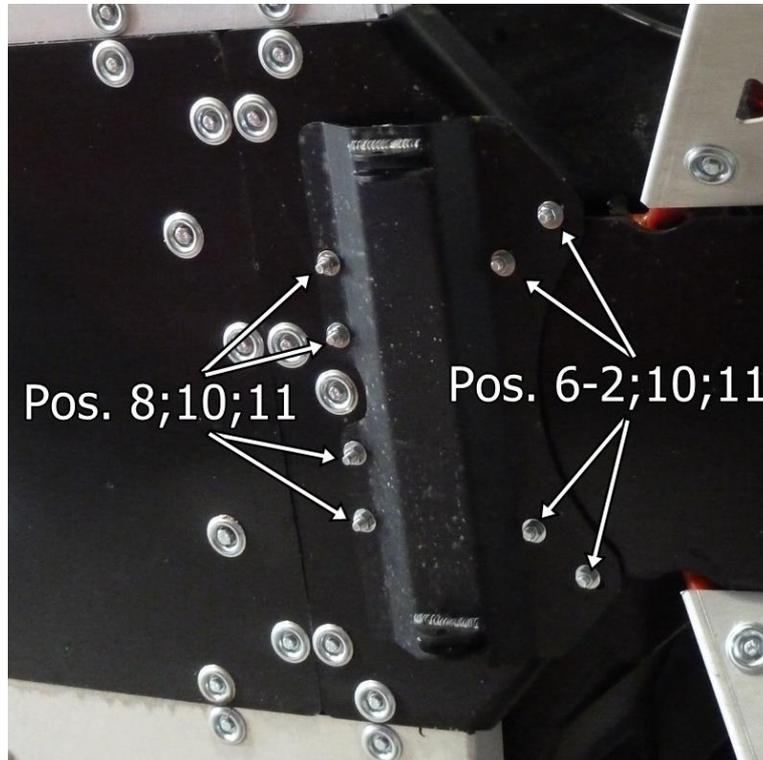

Step 2

Install lifting plates to the snow plow frame. Attach the lifting hook from the snow plow frame to the lifting plates, select one of three holes. Winch should lift straight up as possible.


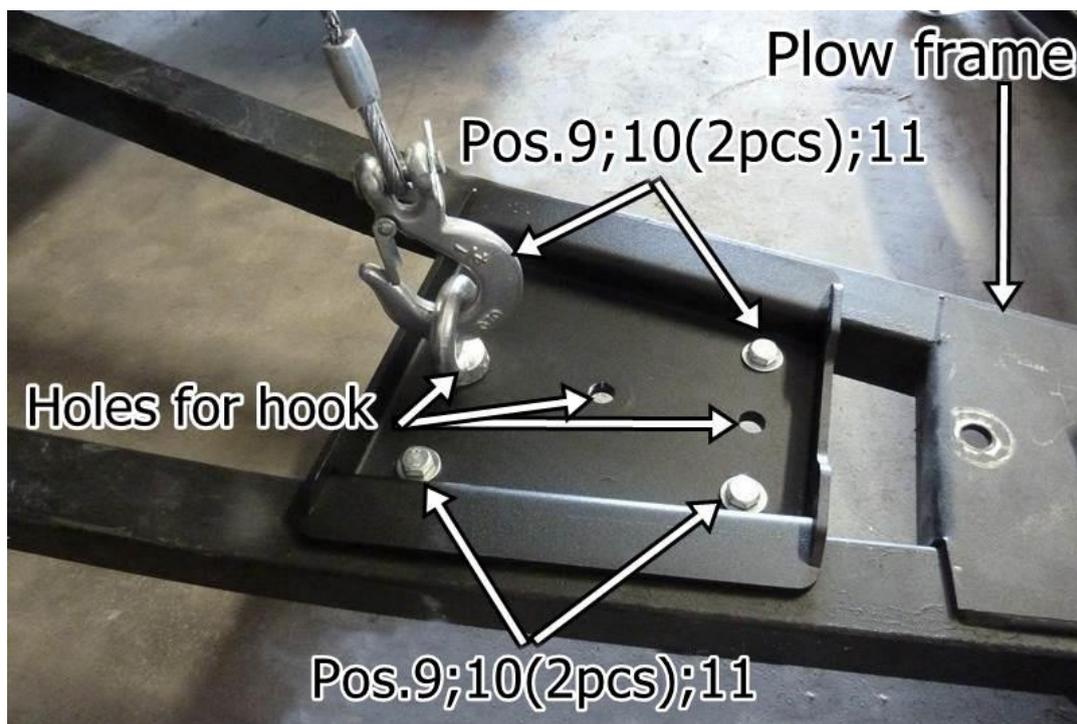


FITTING INSTRUCTIONS

Polaris RZR 900S / 1000S

Step 1

Install snow plow adapter. Use 38 mm and 52 mm pipe clamps, 38 mm pipe clamp brackets, distance plates 03.4003, Ø8/20 washers and M8 Nyloc nuts. Distance plate 03.4003 install between snow plow adapter and pipe clamp bracket!

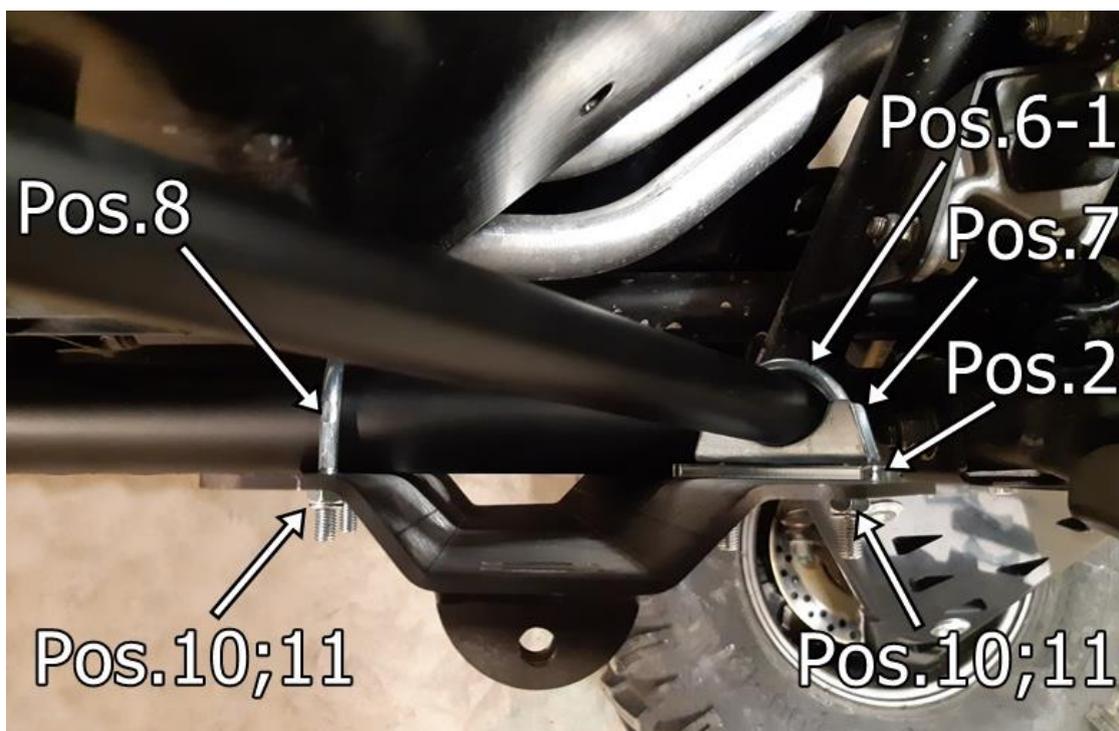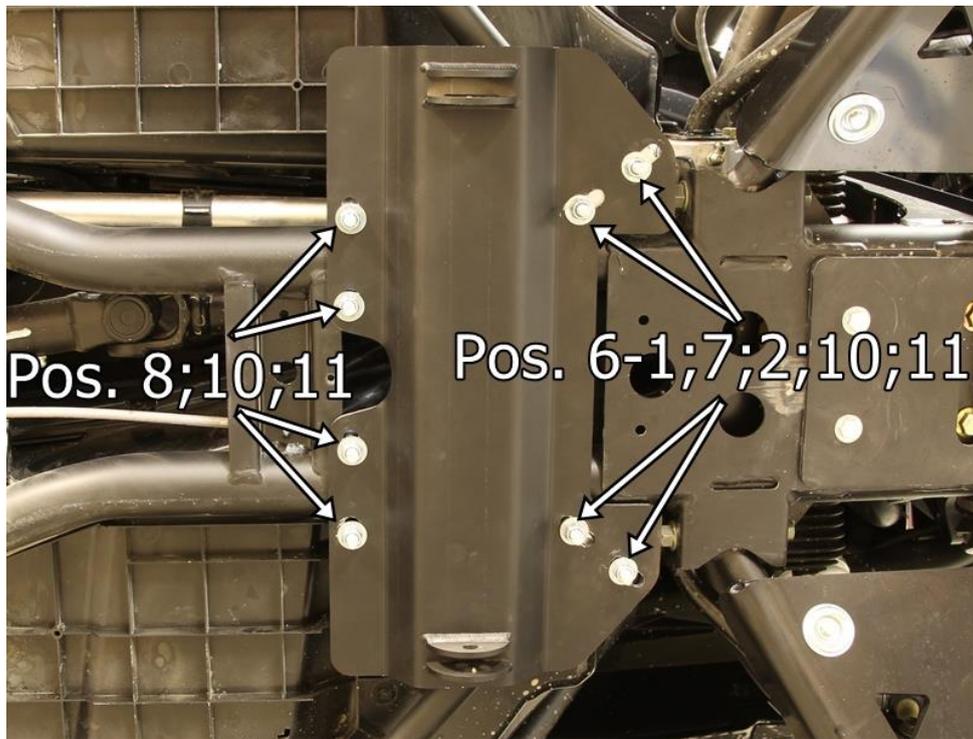

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

