

IRON BALTIC

SNOW PLOW MOUNTING KIT


HONDA

TRX 500 FA (IRS)

TRX 500 FE / TRX 420 (2014-...)

Code 03.6000

Version 06112023

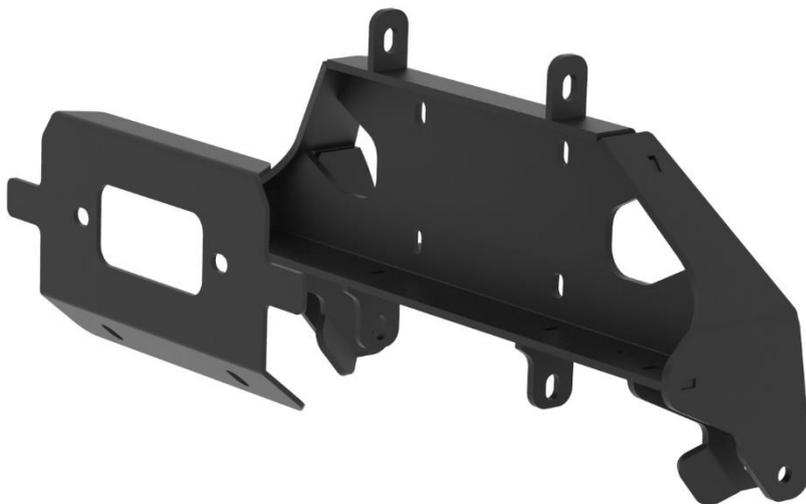

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/aDiNF5Or


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Adapter	03.6001K	1
2	Fairlead holder	05.6102	1
3	Left bracket	03.6008	1
4	Right bracket	03.6009	1
5	Bush	05.5406	2
6	Bush	03.5906	2
7	Bolt M8x16 DIN 933	OT.02.02.170	2
8	Bolt M8x20 DIN 933	OT.02.02.180	4
9	Bolt M8x30 DIN 933	OT.02.02.200	2
10	Bolt M10x50 DIN 933	OT.02.02.340	2
11	Washer M8 DIN 125	OT.04.01.031	12
12	Washer M10 DIN 125	OT.04.01.041	4
13	Nut M8 Nyloc DIN 985	OT.03.02.040	4
14	Nut M10 Nyloc DIN 985	OT.03.02.050	2

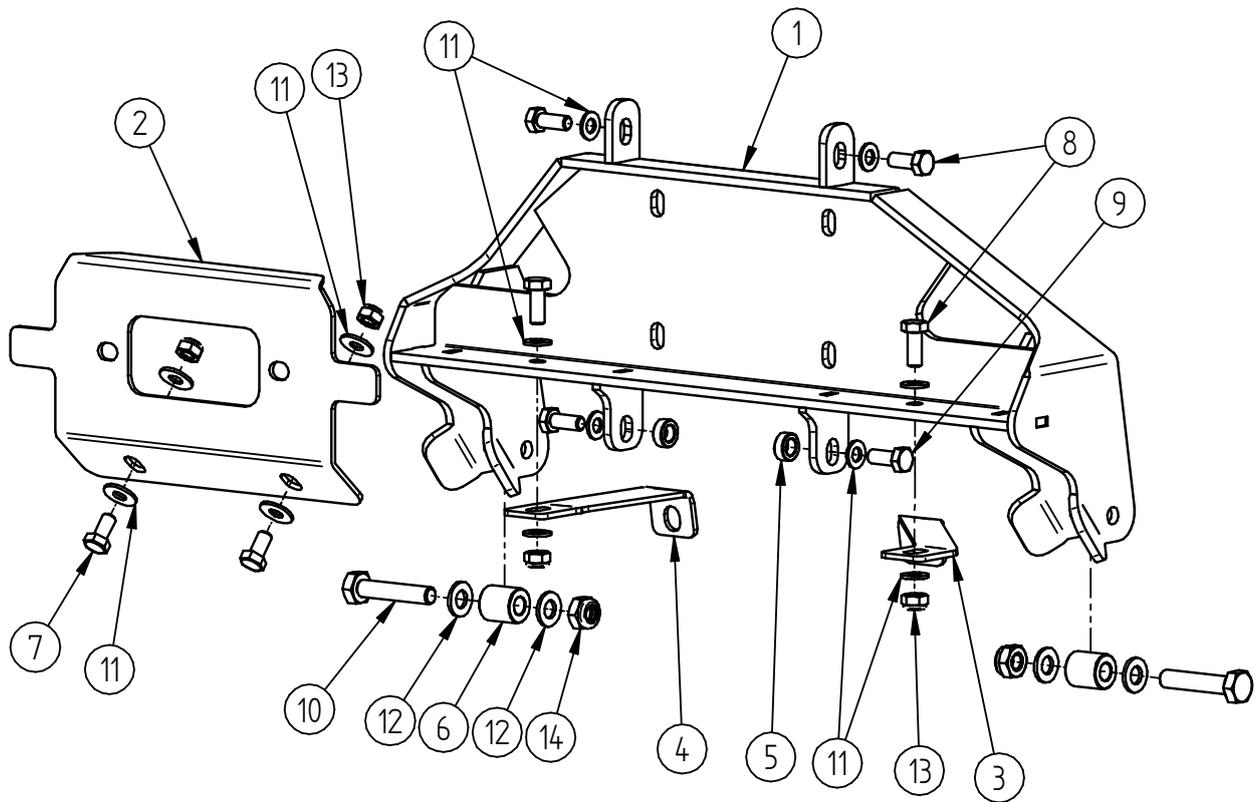

FITTING INSTRUCTIONS

Step 1


Remove front plastic

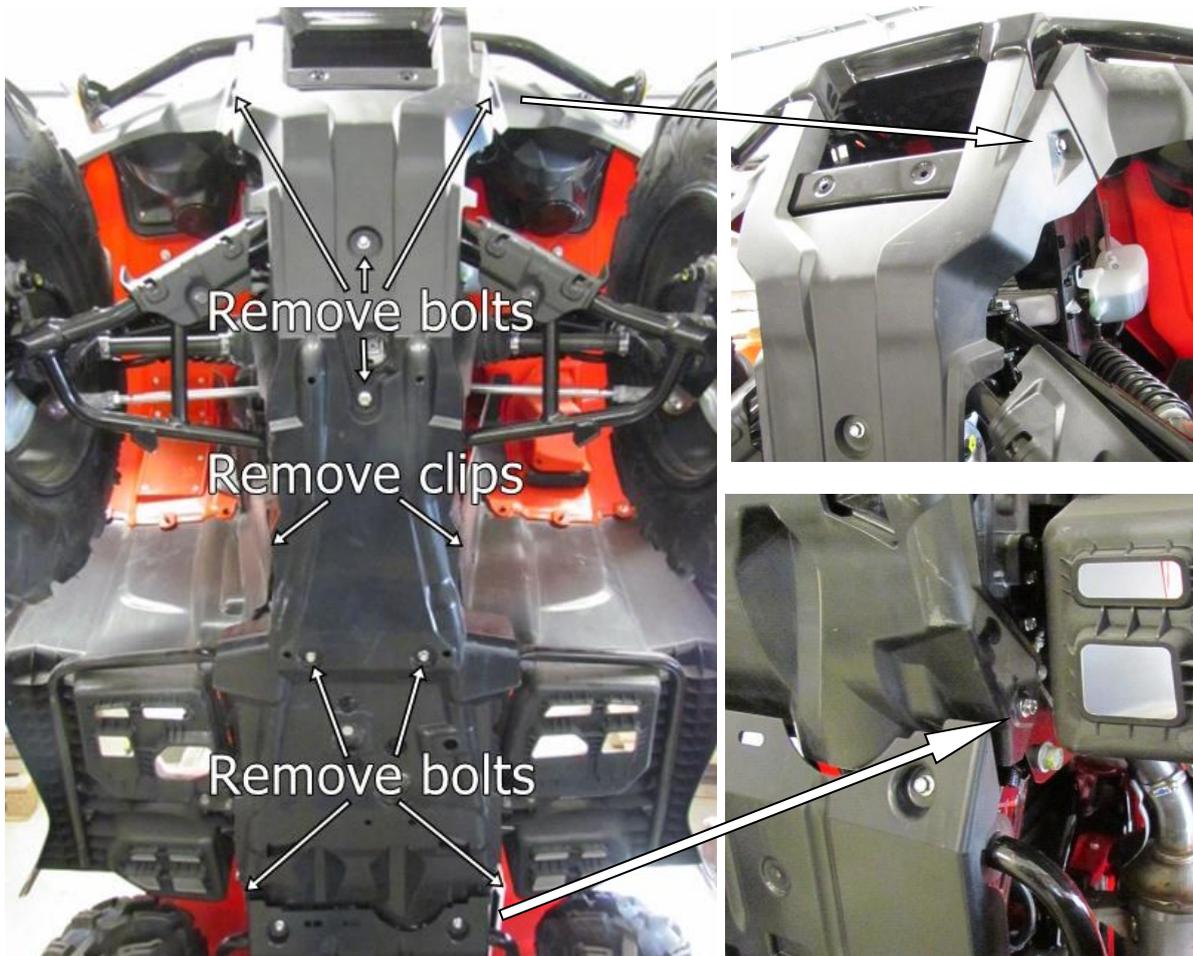

Step 2


Mount the fairlead holder (05.6102), under the bars.

If you're using IronBaltic aluminium skidplate then it's not necessary to install fairlead holder. In that case the fairlead will be installed onto the front skidplate. If using plastic skidplate, install the fairlead holder under the plastic protection and use bolts supplied with skidplate.

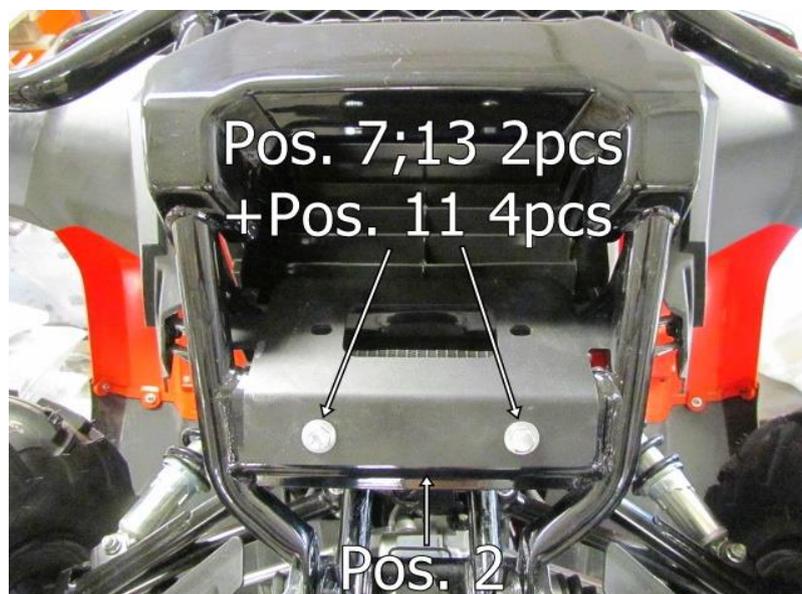


Step 3

Mount the winch fairlead onto holder 05.6102.

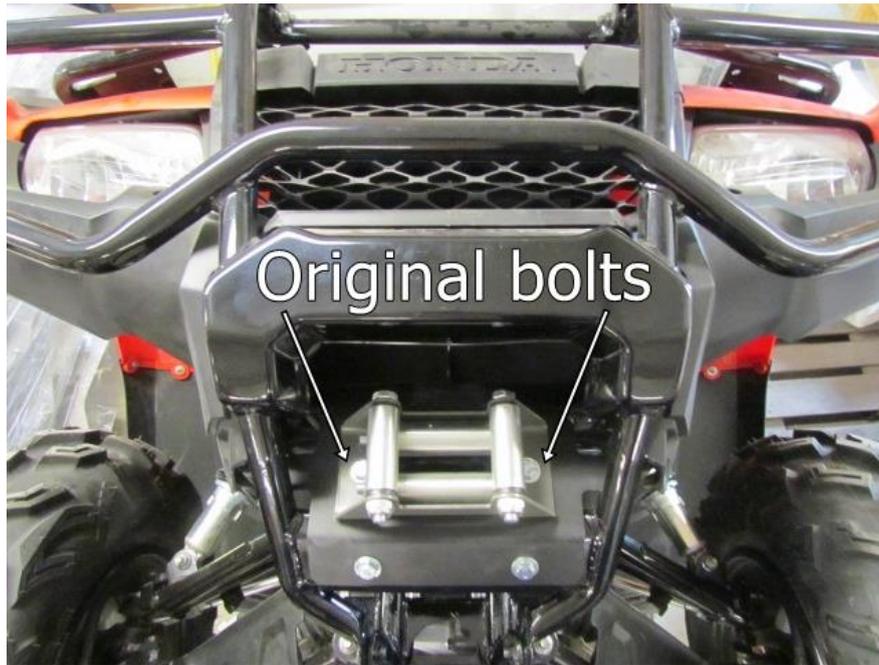



Step 4

Turn wishbone bolts around.

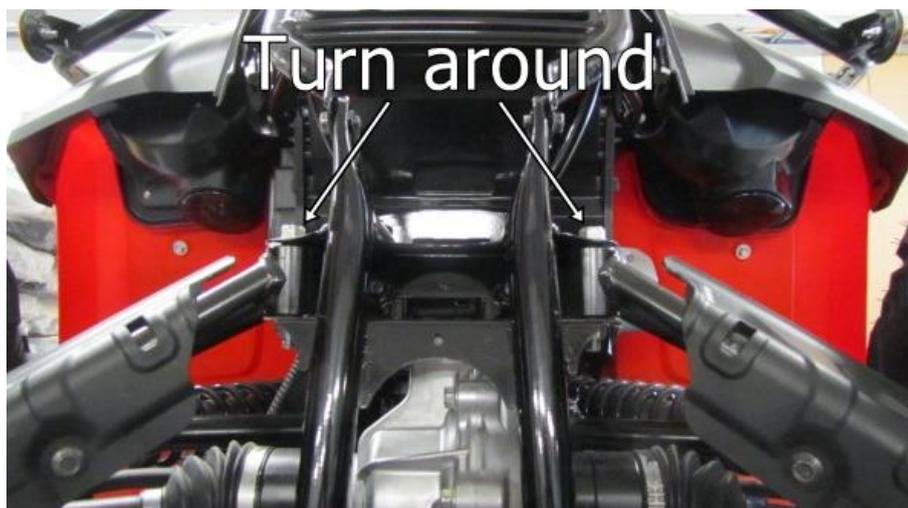


Step 5

Loosen luggage carrier bolts.

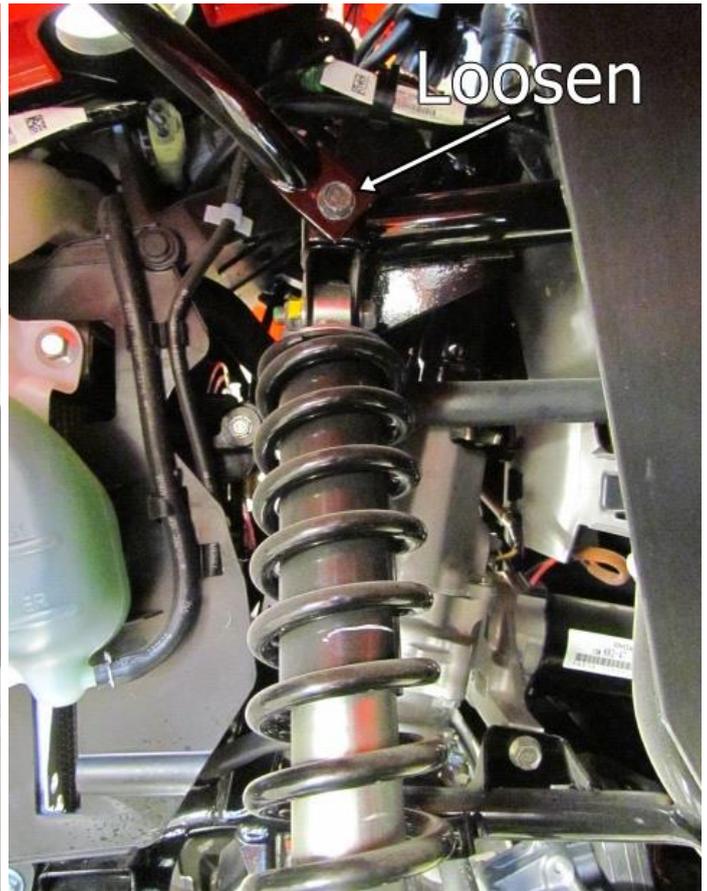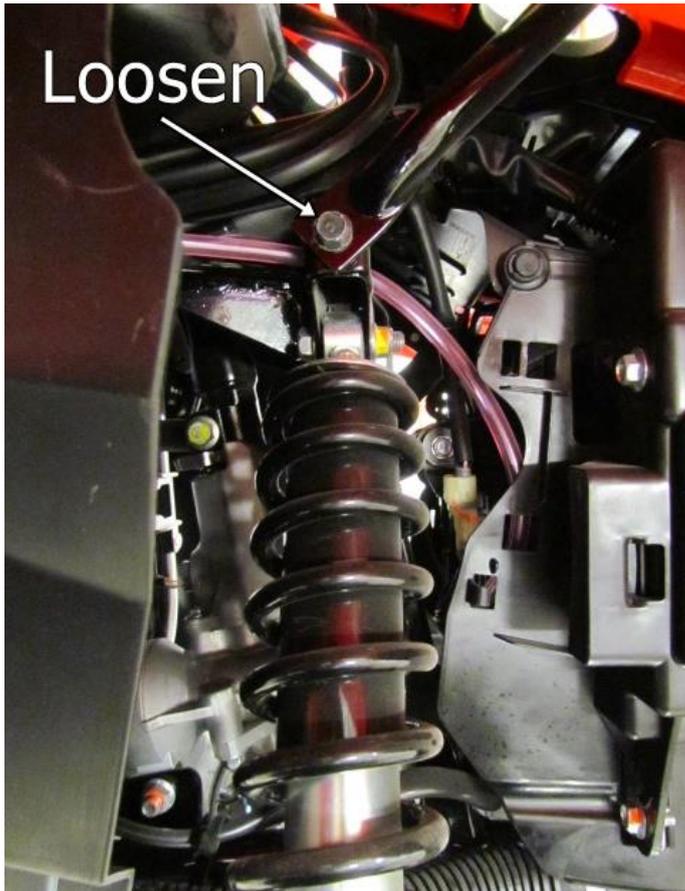



Step 6

Remove bolts holding the front bars in place and lift the bars up as high as possible.

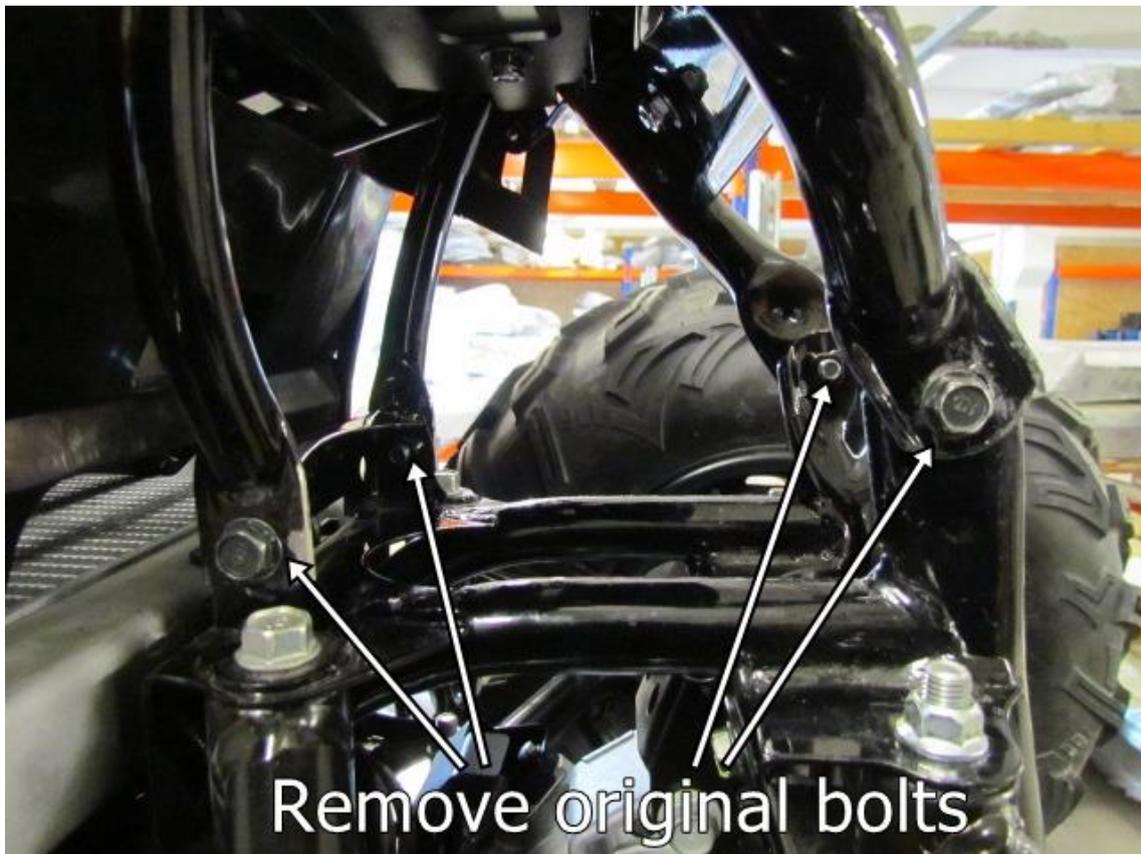


Step 7


Attach winch to the adapter, use original bolts.

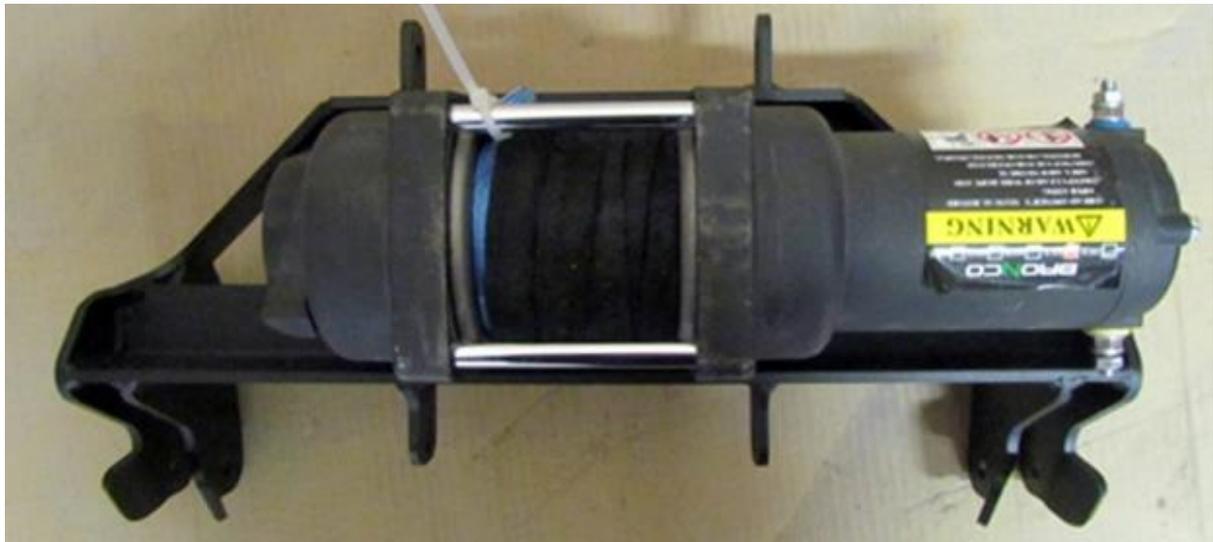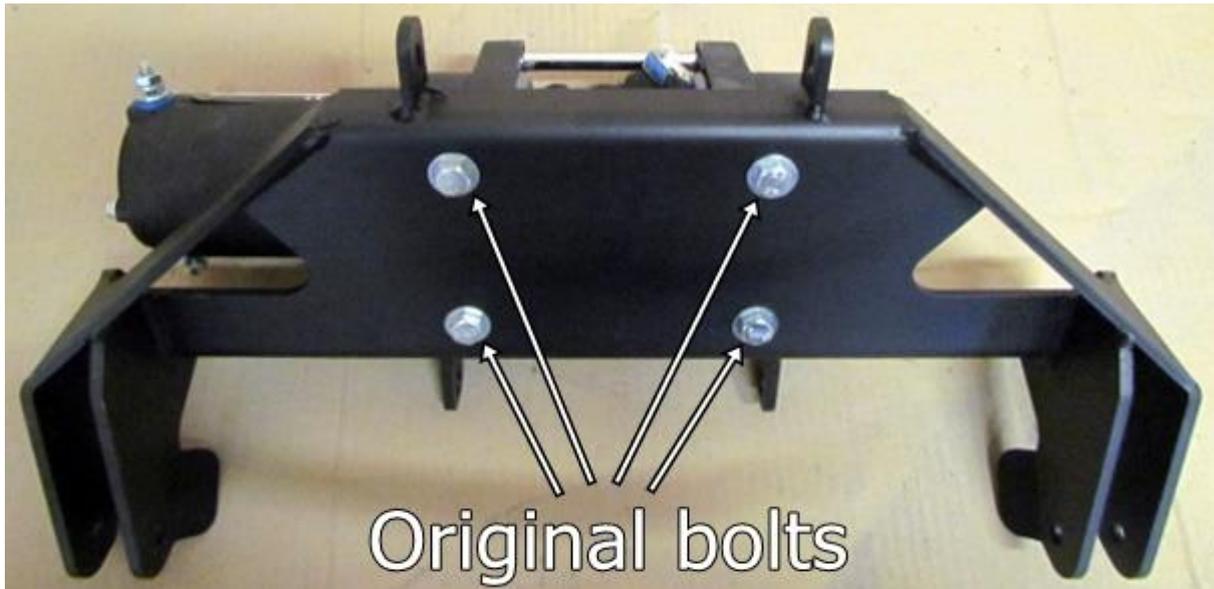

Step 8



Install the winch adapter under the front bars. Release the front bars and secure the winch adapter with bolts. Place the distance bushes between the winch adapter and the frame.

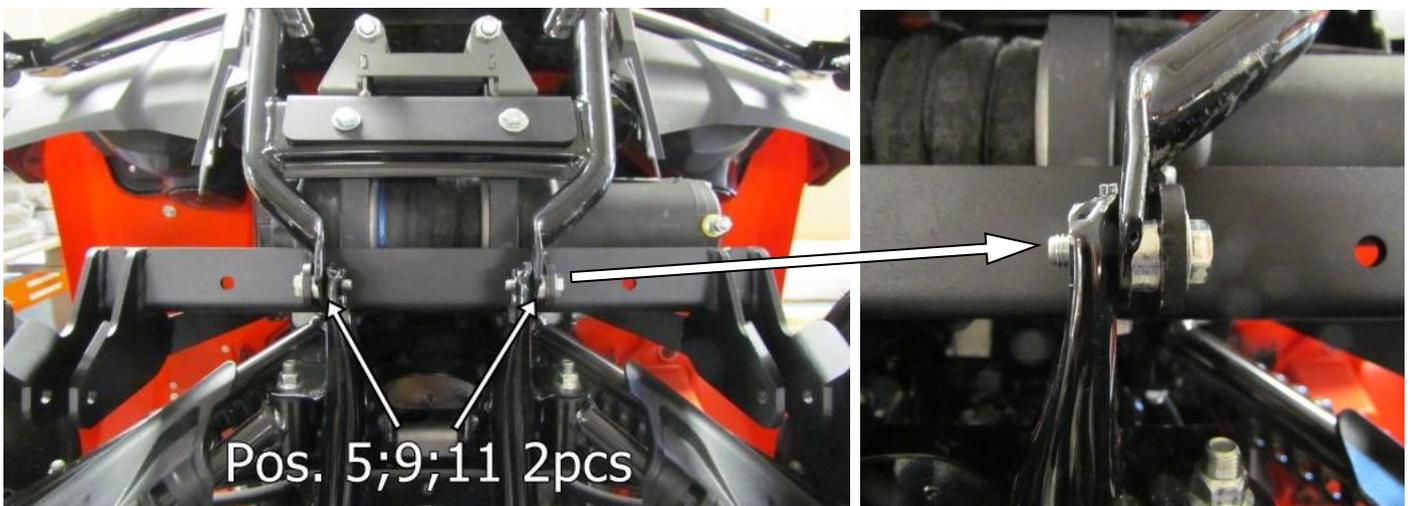

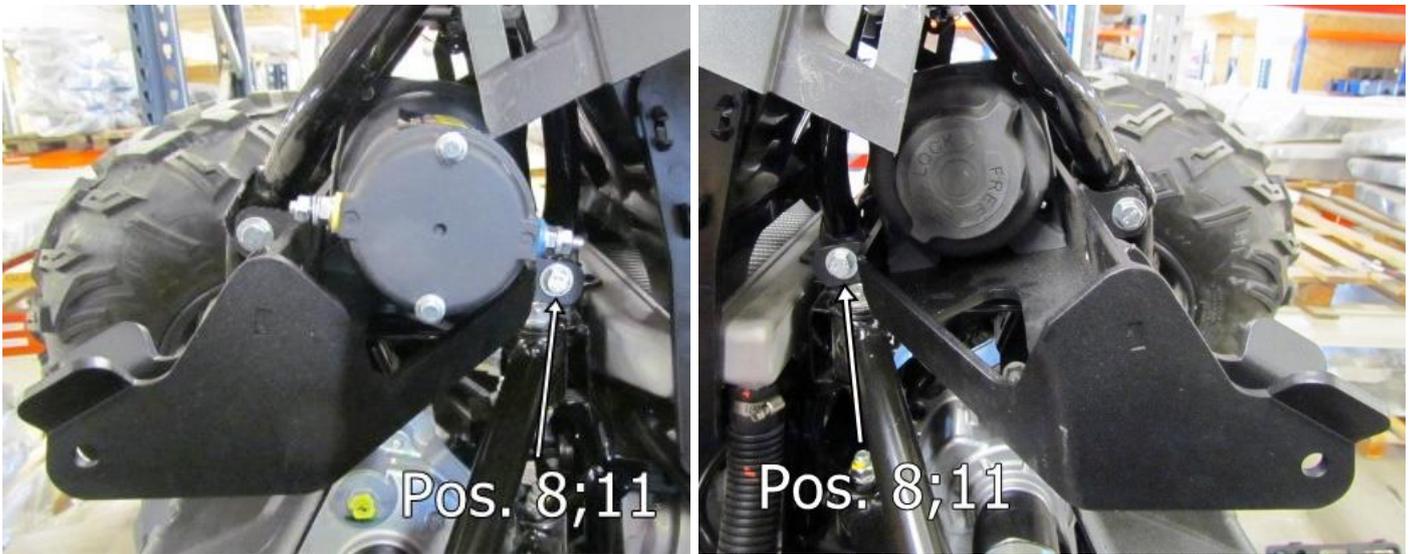


Step 9

Install reinforcement brackets.

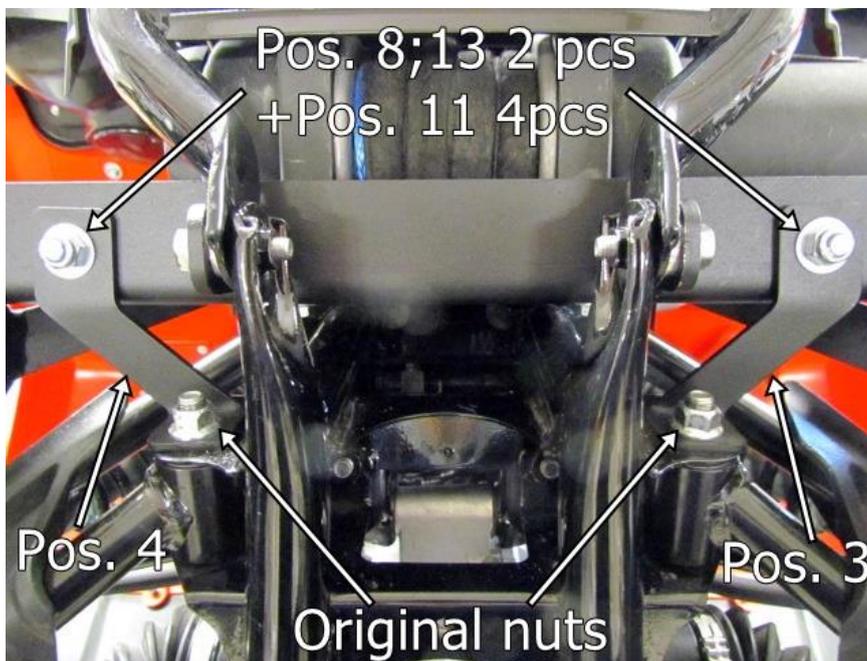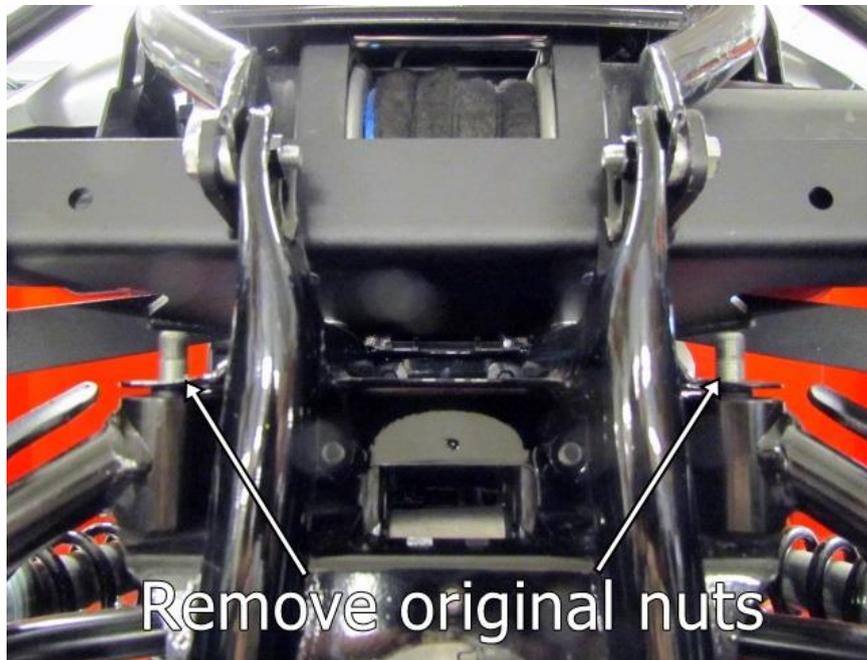


Step 10

Install bushes.

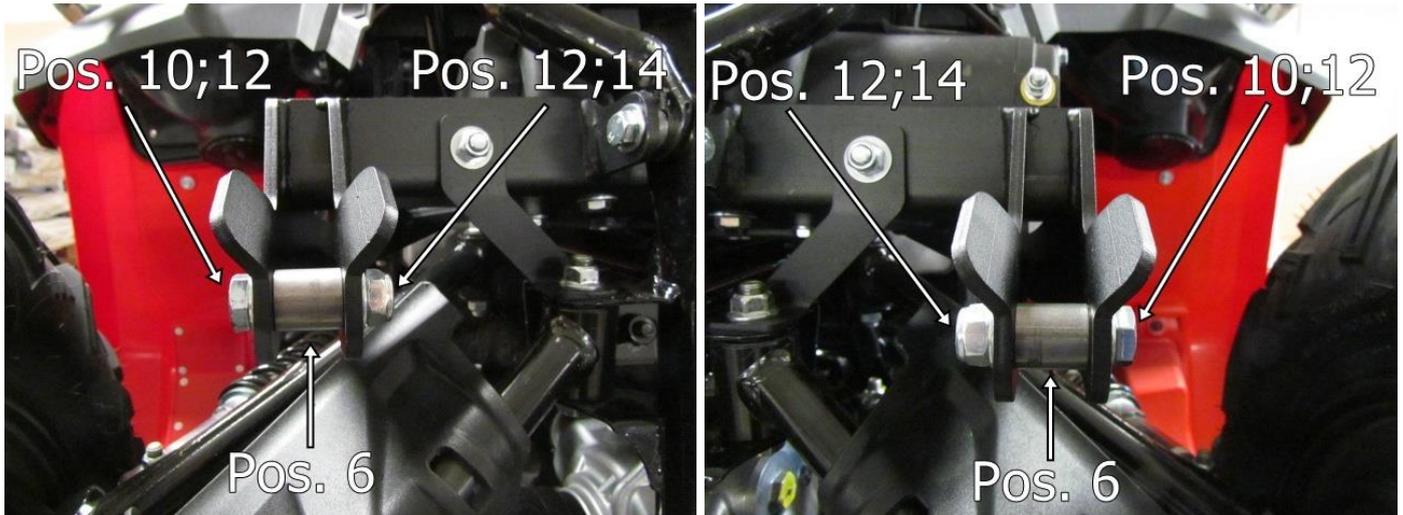


Step 11

Tighten luggage carrier bolts.

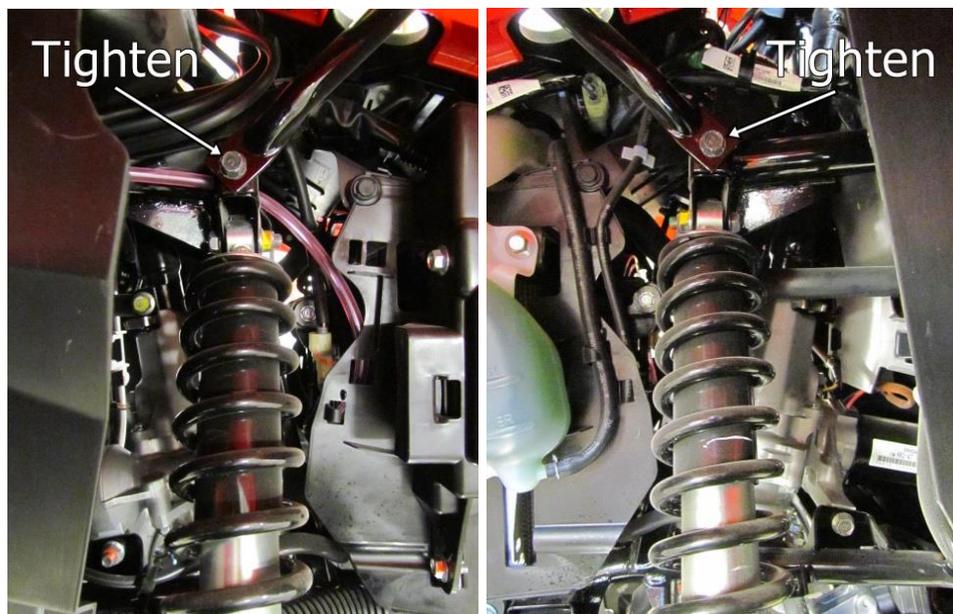


Step 12

Front part of the original skid plate needs to be cut to fit the winch with mounting plate underneath the front plastic. No modification needed when Iron Baltic skid plate is used.

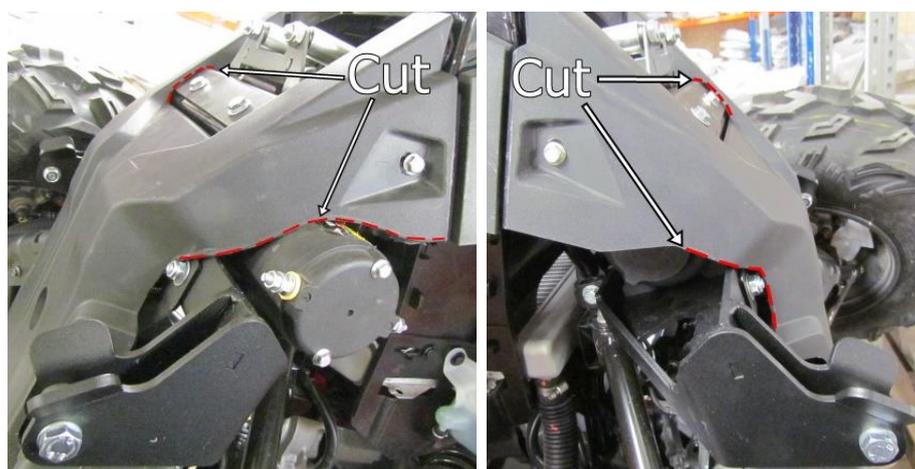

Step 13

Reinstall front plastic cover.

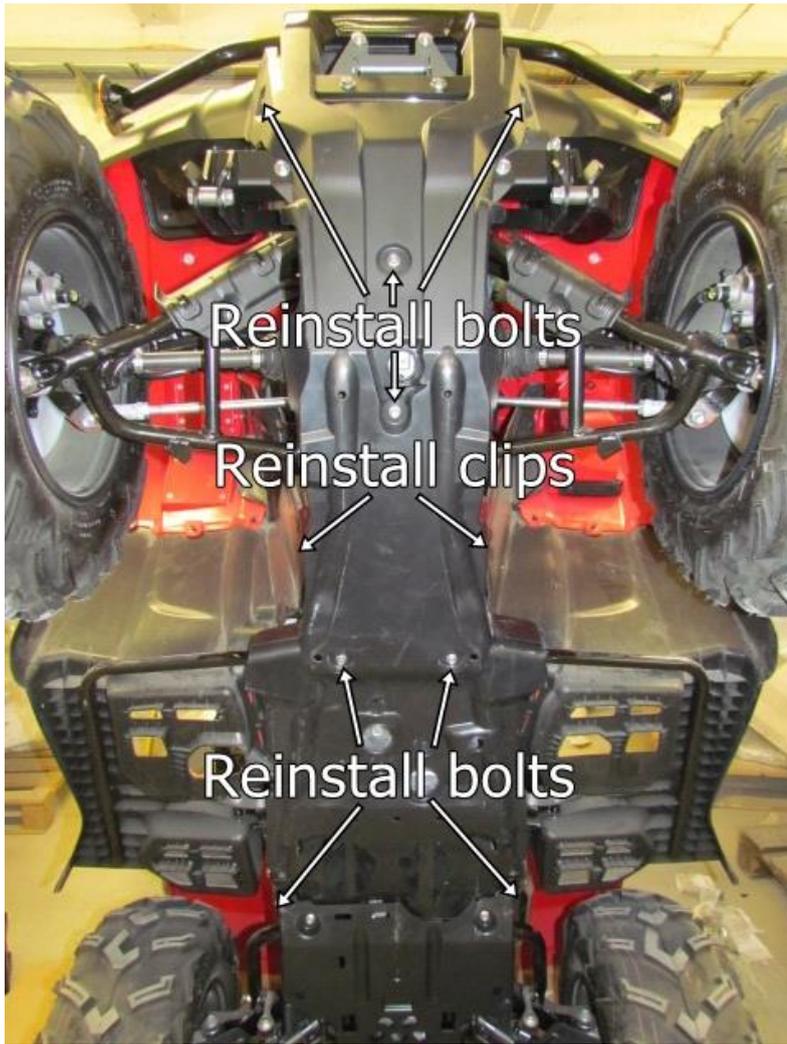

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

