

IRON BALTIC

SNOW PLOW MOUNTING KIT

SUZUKI

LTA 450 / 500 / 700 / 750

Code 03.6100

Version 06112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/p7ra7YmR

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.6100K	1
2	Bush	05.5405	2
3	Bush	03.5906	2
4	Bolt M8x30 DIN 933	OT.02.02.200	2
5	Bolt M10x50 DIN 933	OT.02.02.340	2
6	Washer M8 DIN 125	OT.04.01.031	2
7	Washer M10 DIN 125	OT.04.01.041	4
8	Nut M10 Nyloc DIN 985	OT.03.02.040	2

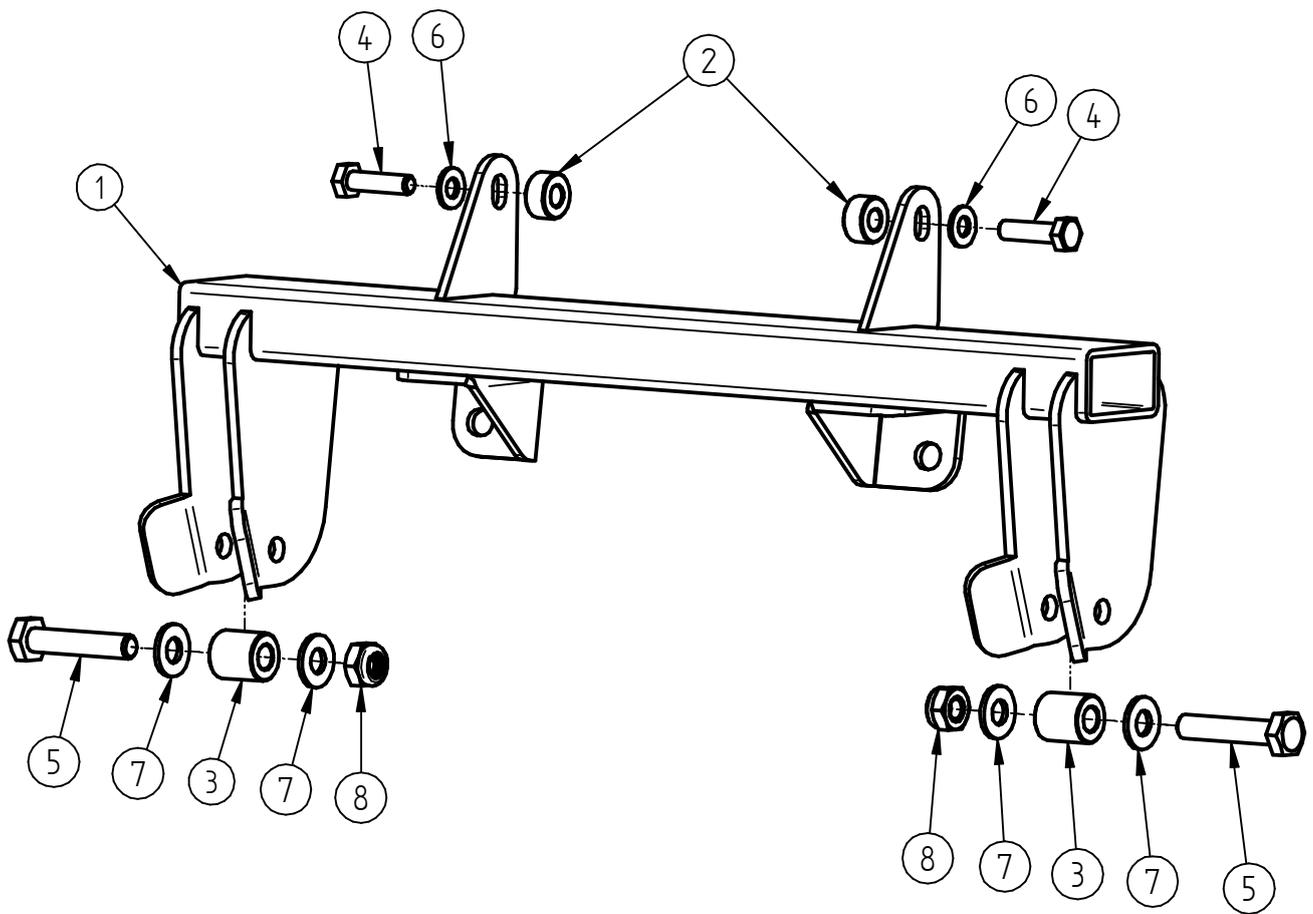

FITTING INSTRUCTIONS




NB!

If winch mounting is previously installed, then remove winch mount U-bolts M8x28 and pass steps 2 and 3.


Step 1

Remove front plastic.

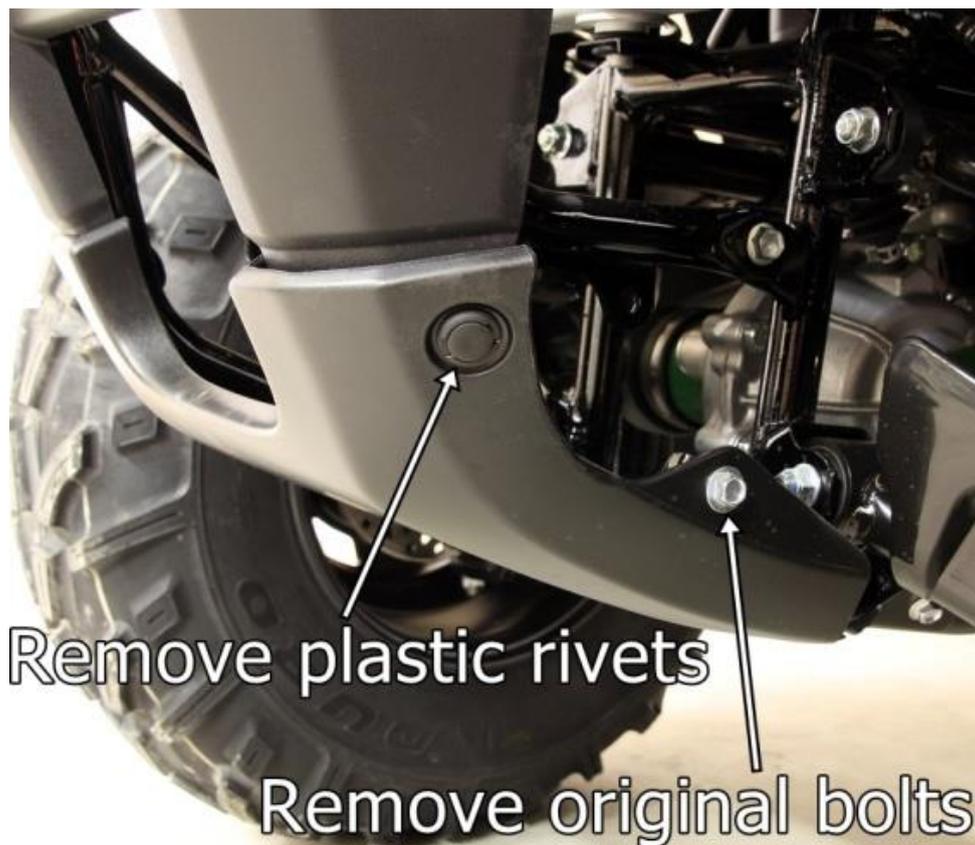


Step 2

Install winch mounting kit (05.301), use original bolts.

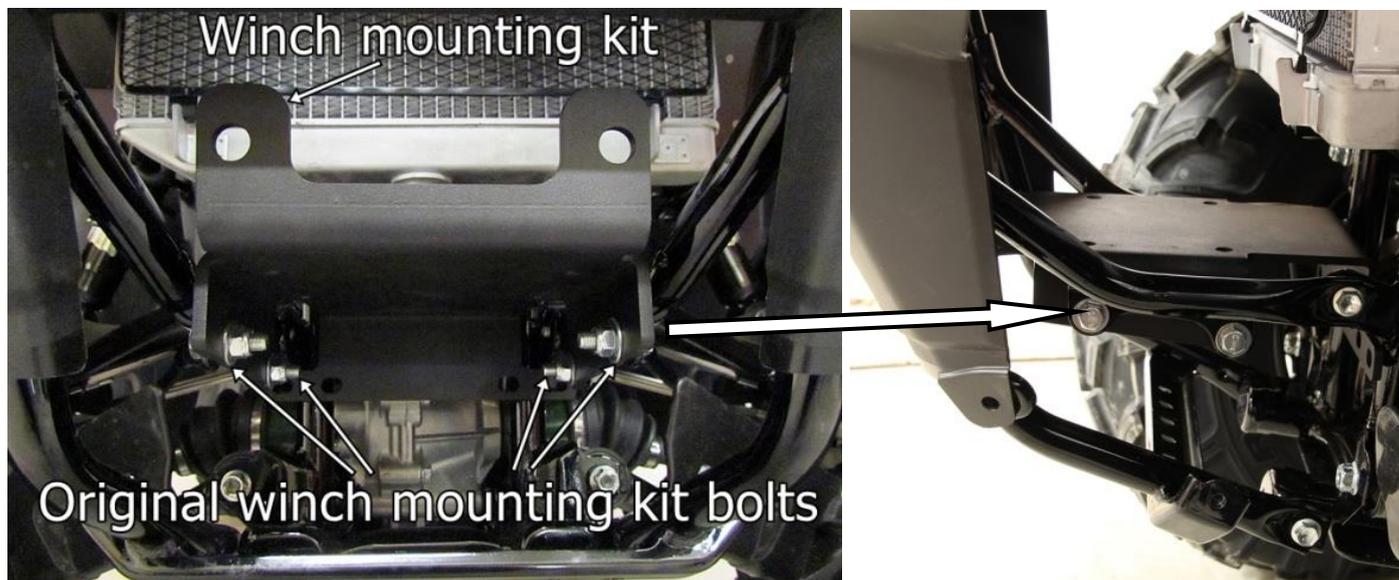



Step 3

Attach winch to the adapter (05.301), use original bolts.

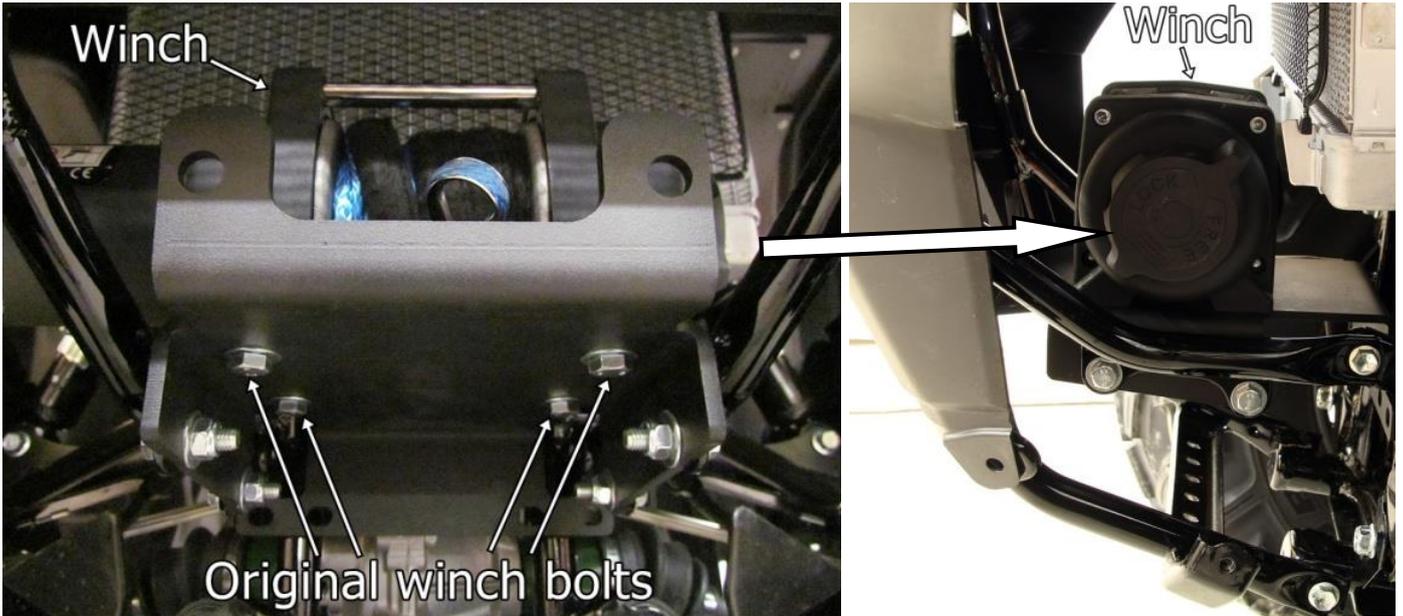


Step 4

Remove original bolts and wishbone nuts.

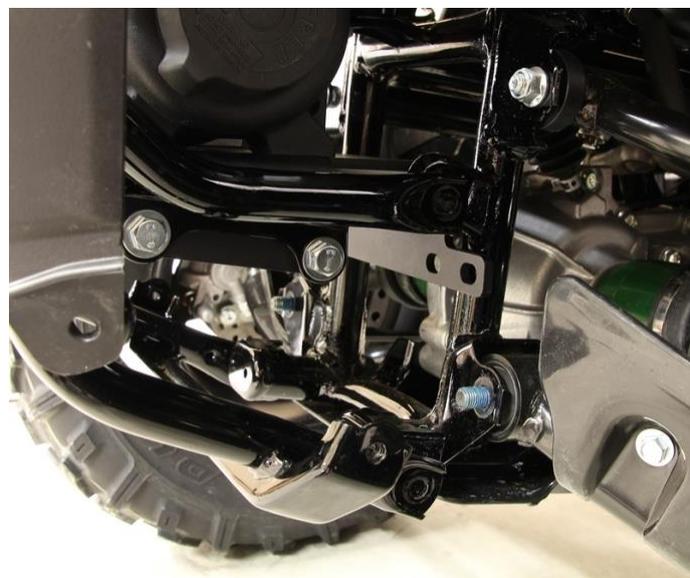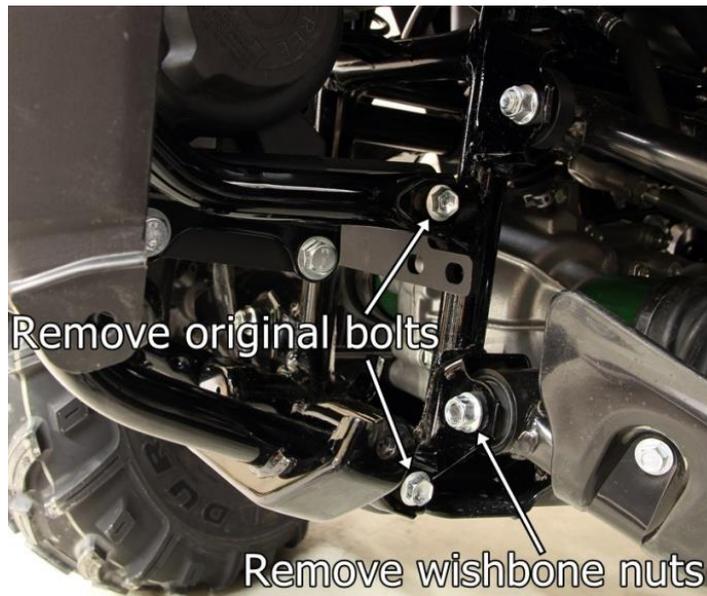


Step 5

Install bushes (03.5906).

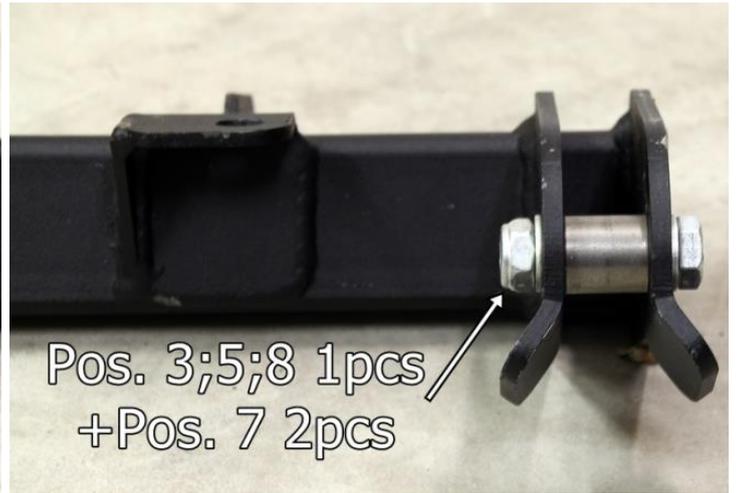


Step 6

Pull front bumper, install plow mount behind front bumper, push front bumper back, install bushes (05.5405) between front bumper and plow mount and fix it with bolts.

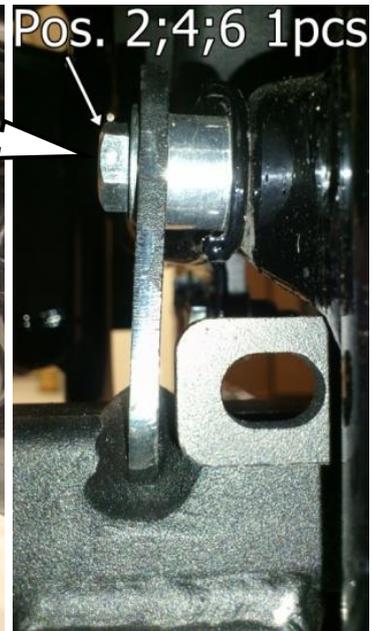


Step 7

Install winch mounting kit U-clamps.

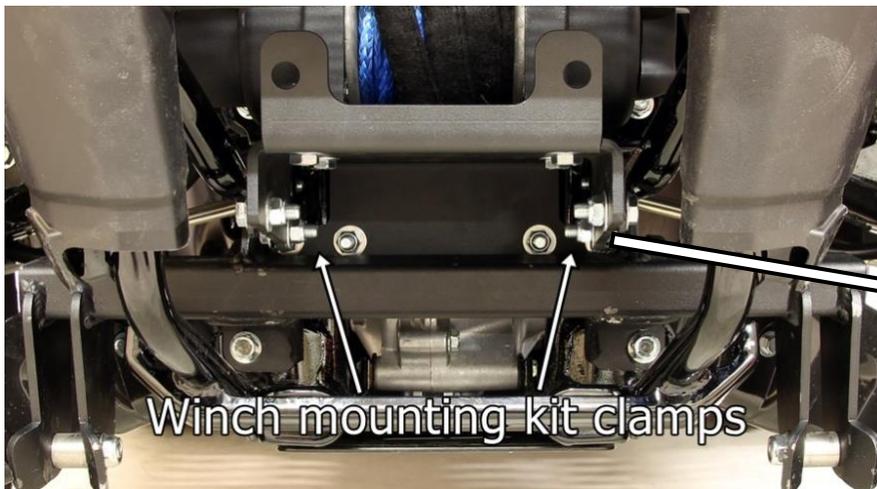


Samm 8

Reinstall front plastic cover.

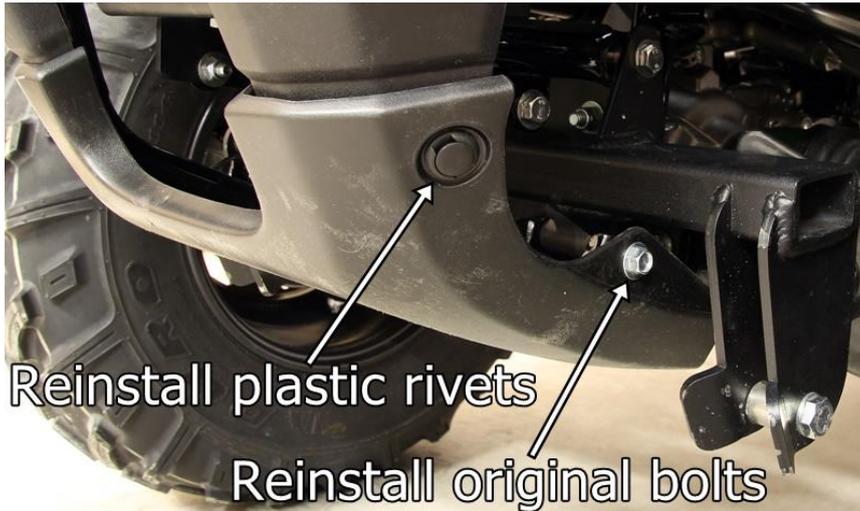


Samm 9

Install winch fairlead.

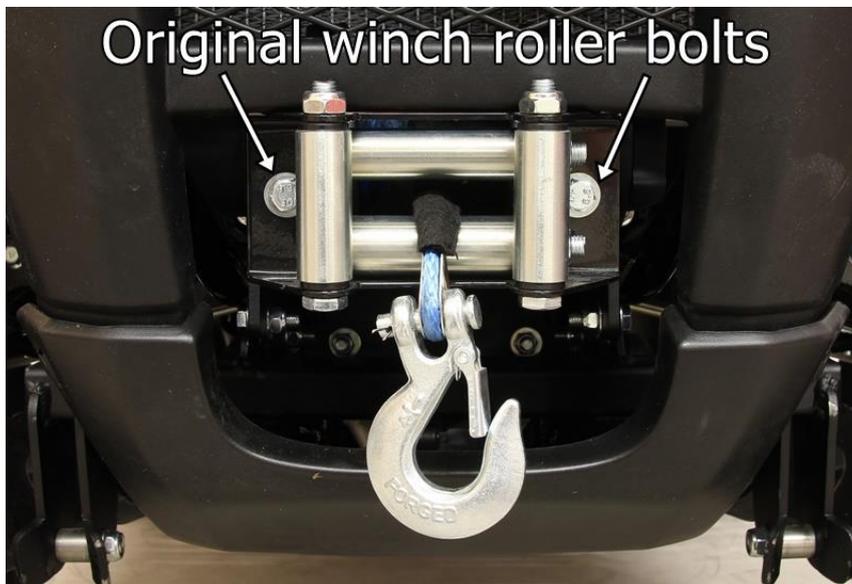

Samm 10

If you are using Iron Baltic skid plate, then cut out sections that are pre-marked with option holes. (on picture marked CUT).

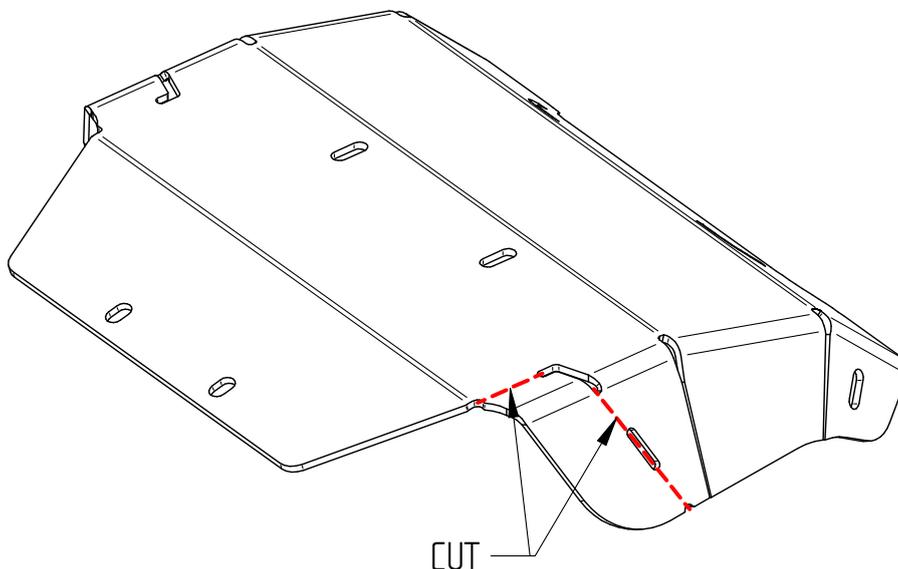

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

