

# IRON BALTIC

## SNOW PLOW MOUNTING KIT

## POLARIS

## XP Sportsman / Scrambler

Code 03.6200

Version 08112023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)


DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/rHjpf9VO](https://code.ironbaltic.com/u/rHjpf9VO)


# SPECIFICATION

Pos.	Description	Code	Amount
1	Snow plow mount	03.6201K	1
2	Bracket	03.6208	2
3	Bush	03.5906	2
4	Bolt M8x20 DIN933	OT.02.02.180	4
5	Bolt M10x20 DIN933	OT.02.02.310	2
6	Bolt M10x50 DIN933	OT.02.02.340	2
7	Washer Ø8/20 SFS3738	OT.04.03.030	4
8	Washer M10 DIN125	OT.04.01.040	6
9	Nyloc nut M10 DIN985	OT.03.02.050	2

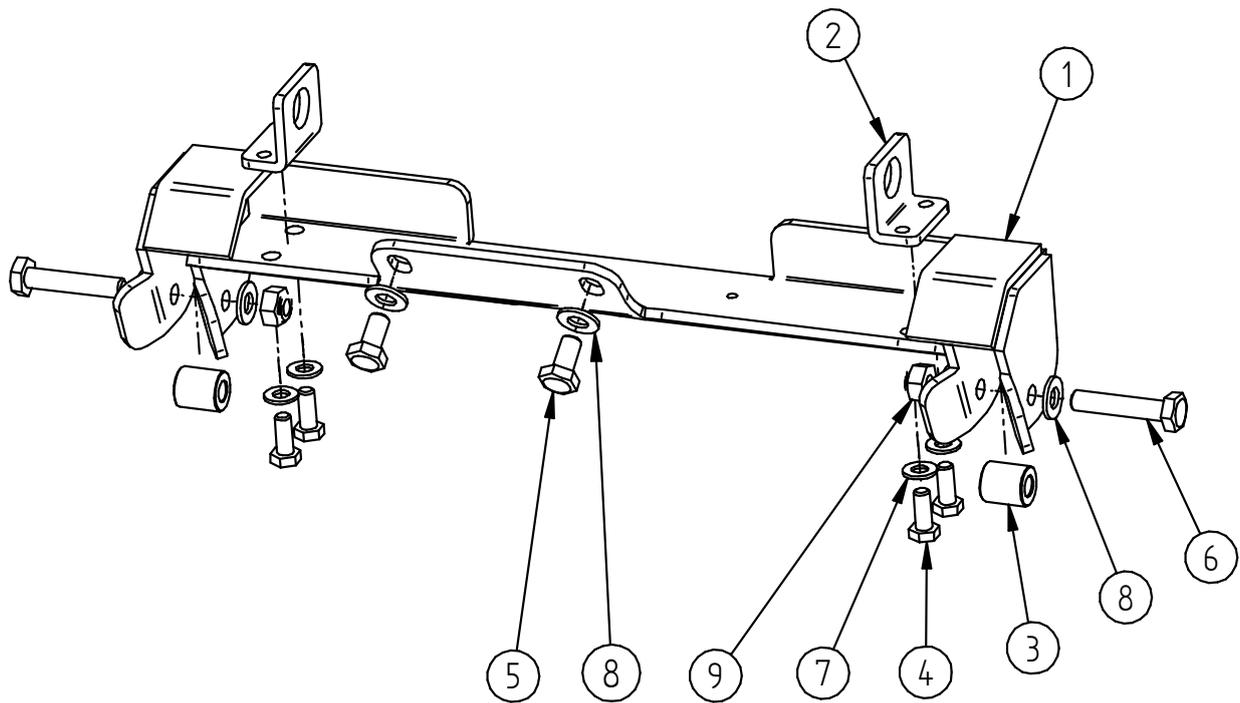


# FITTING INSTRUCTIONS

**Step 1** Install brackets.

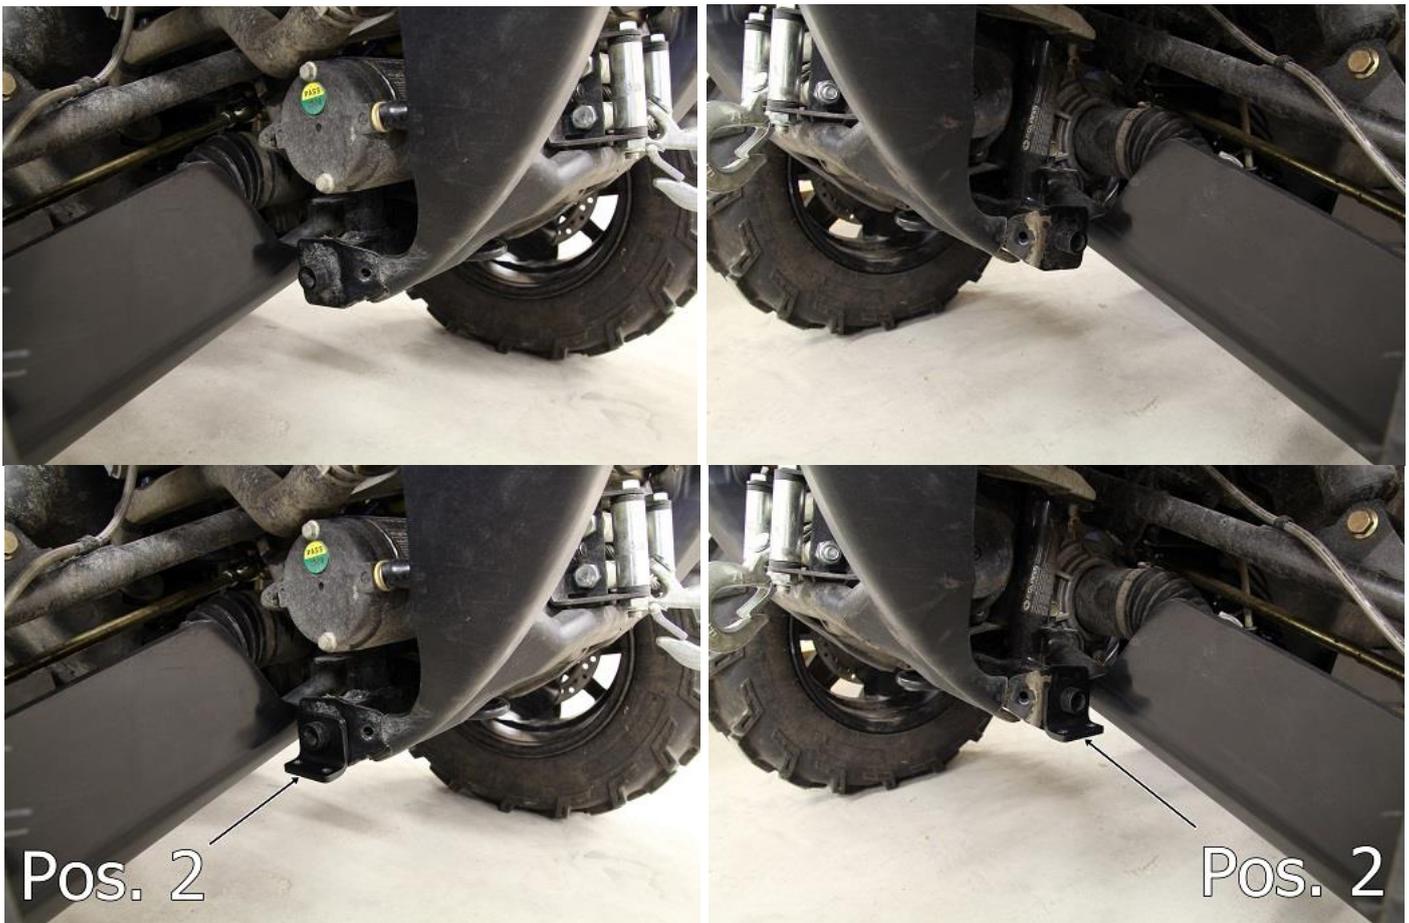


**Step 2** Install snow plow mount.

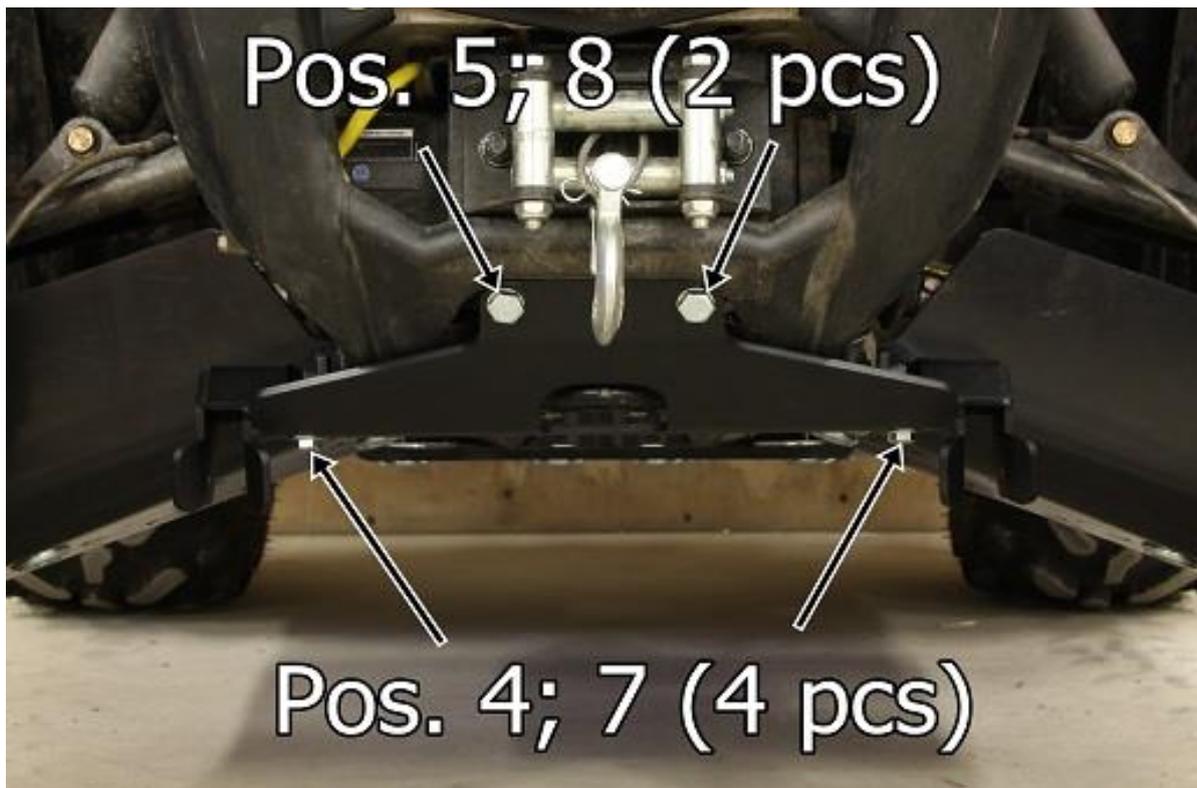

### Step 3

Install bushes (03.5906).

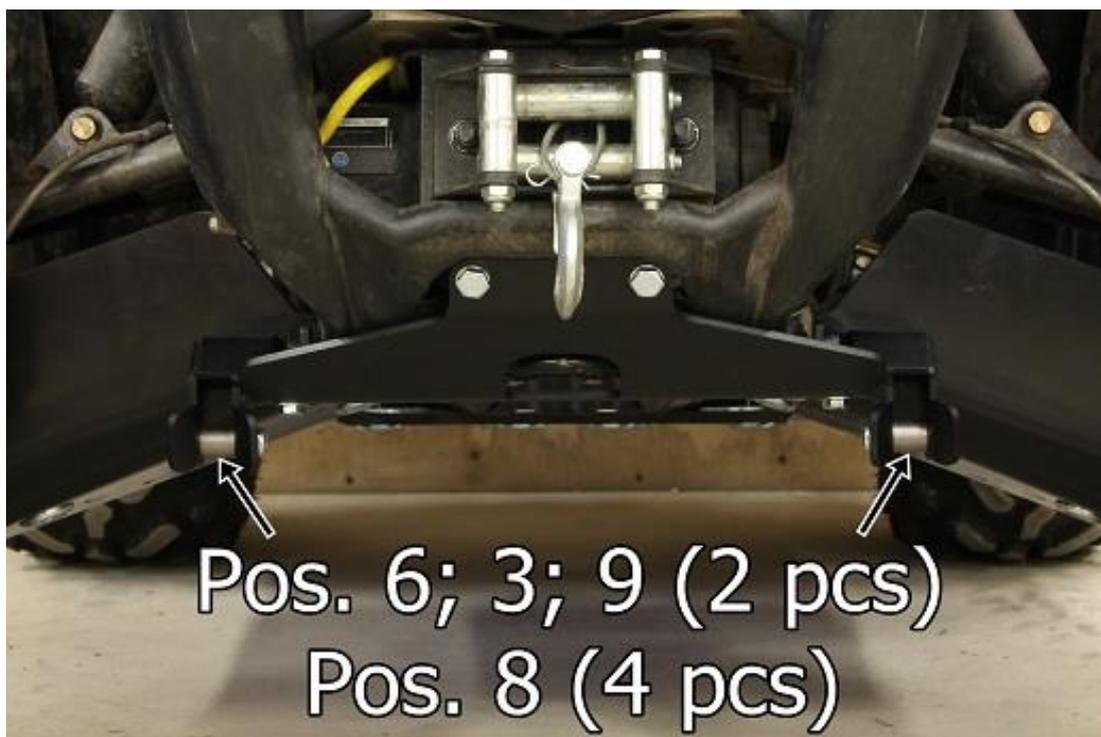





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

