


IRON BALTIC

SNOW PLOW MOUNTING KIT

CAN AM G2 Outlander

Code 03.6300


Version 08112023

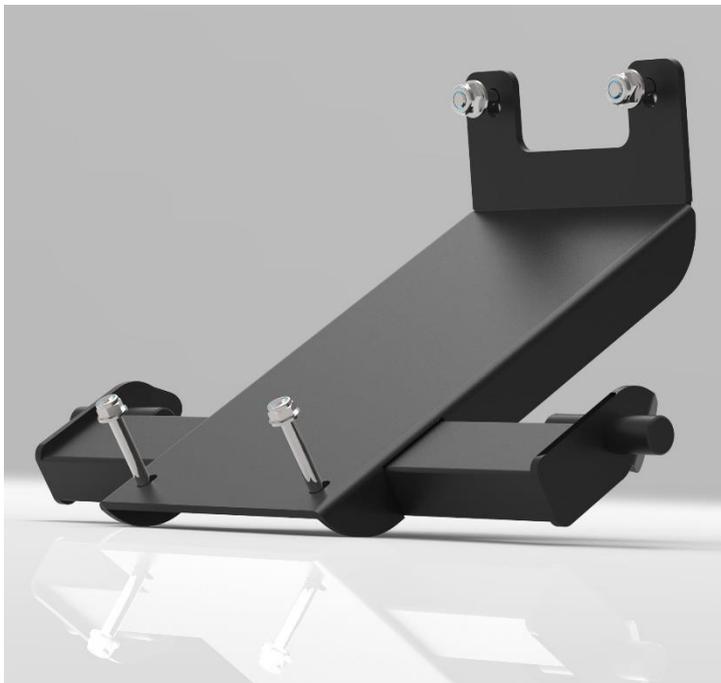

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL

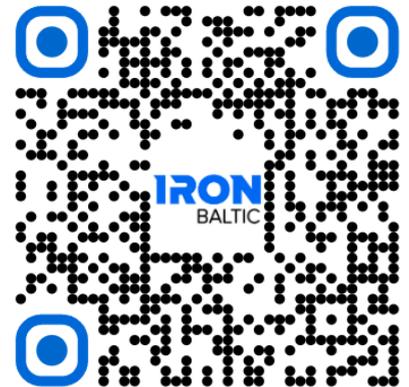

code.ironbaltic.com/u/omyiTXHB

SPECIFICATION

| Pos. | Description | Code | Amount |
|------|-------------------------|--------------|--------|
| 1 | Adapter | 03.6301K | 1 |
| 2-1 | Distance bush (shorter) | 02.10005 | 2 |
| 2-2 | Distance bush (longer) | 20.6261 | 2 |
| 3 | Bolt M8x65 DIN 933 | OT.02.02.255 | 2 |
| 4 | Bolt M10x40 DIN 933 | OT.02.02.330 | 2 |
| 5 | Washer Ø8/20 SFS3738 | OT.04.03.030 | 4 |
| 6 | Washer Ø10 DIN125 | OT.04.01.040 | 4 |
| 7 | Nut M8 Nyloc DIN985 | OT.03.02.040 | 2 |
| 8 | Nut M10 Nyloc DIN985 | OT.03.02.050 | 2 |

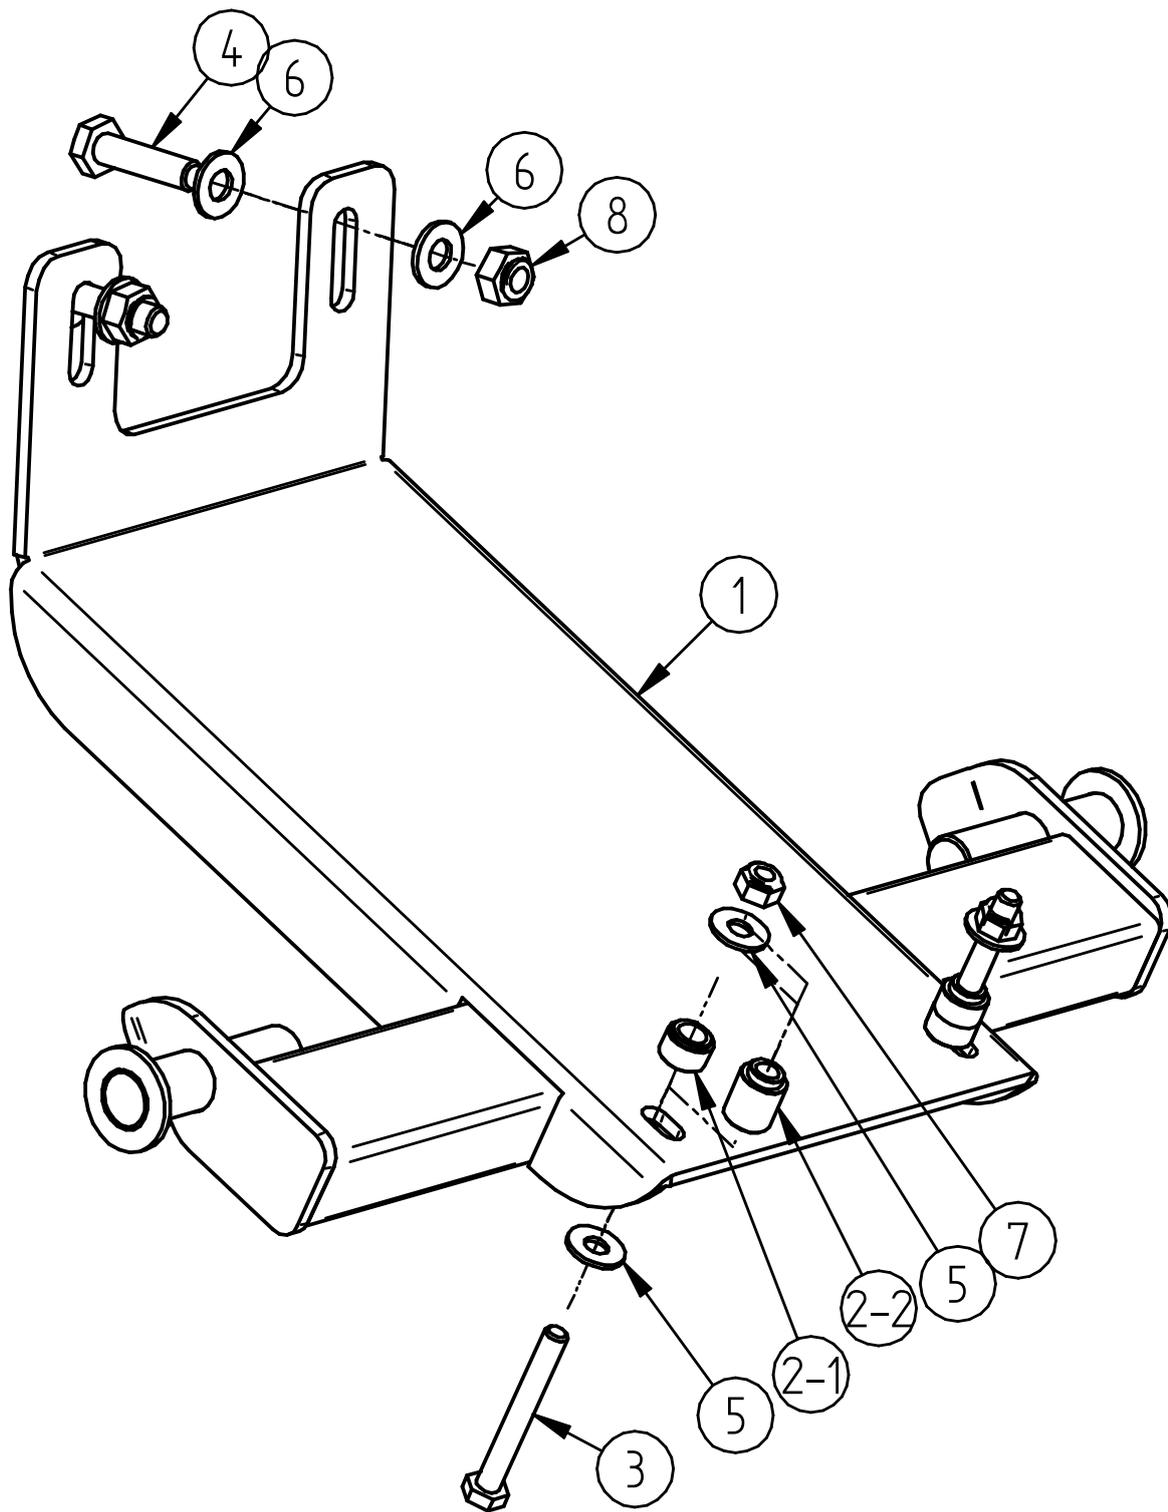


FITTING INSTRUCTIONS

Step 1 Remove winch hook and fairlead.





Step 2 Remove original metal bushes and install bushes Pos.2. Shorter bush will fit for models up to MY 2022 and longer bush for machines from MY 2023.

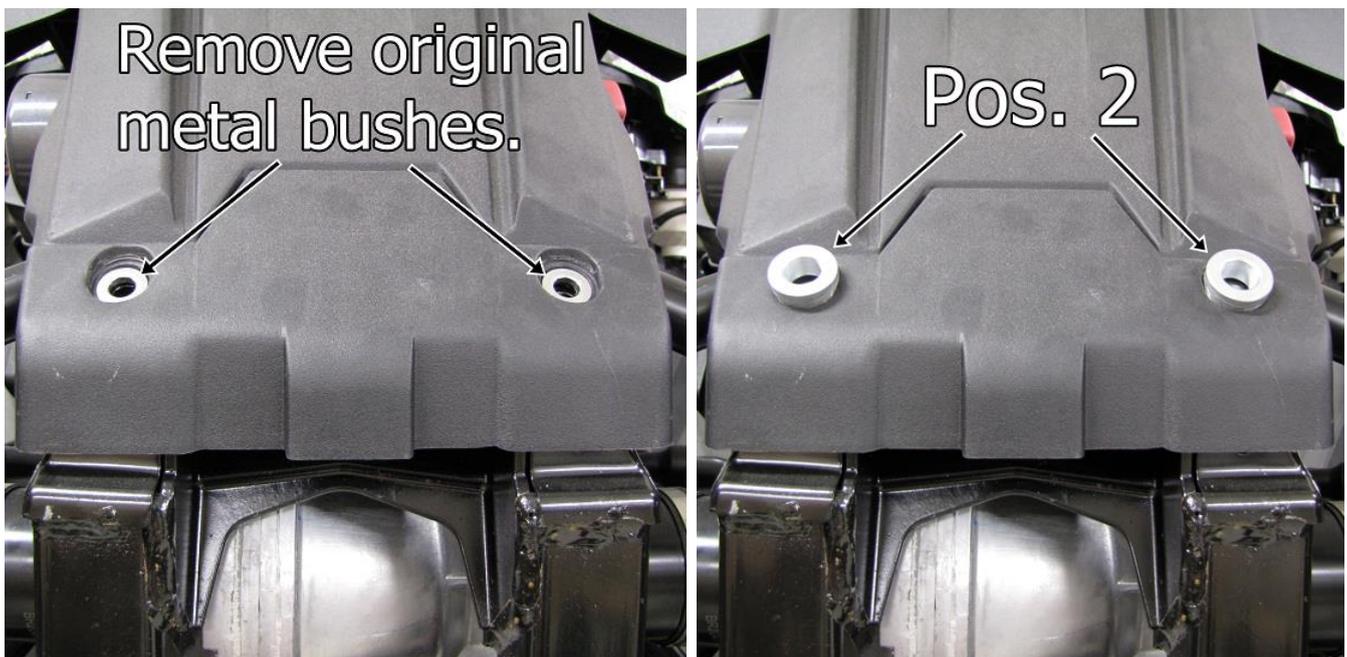

Step 3

Install snow plow adapter to the ATV. If installing adapter with IronBaltic skid plate, install adapter on top of the skid plate!

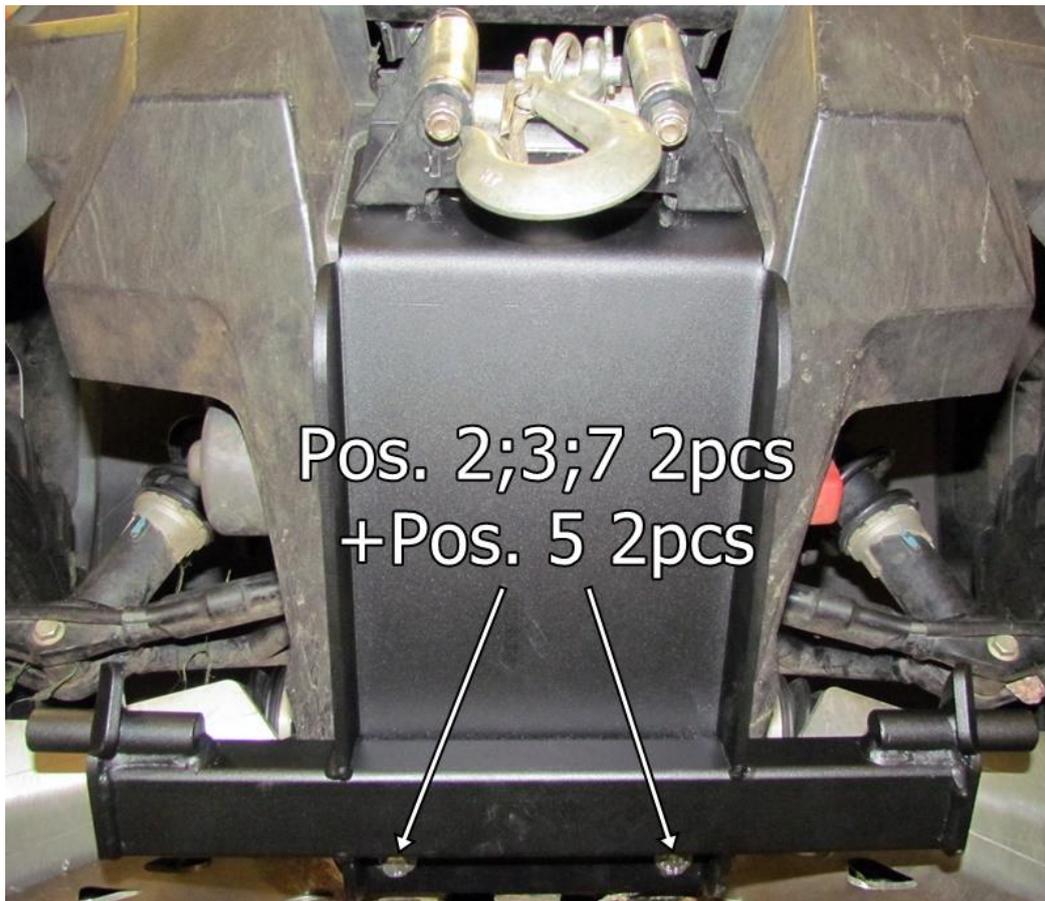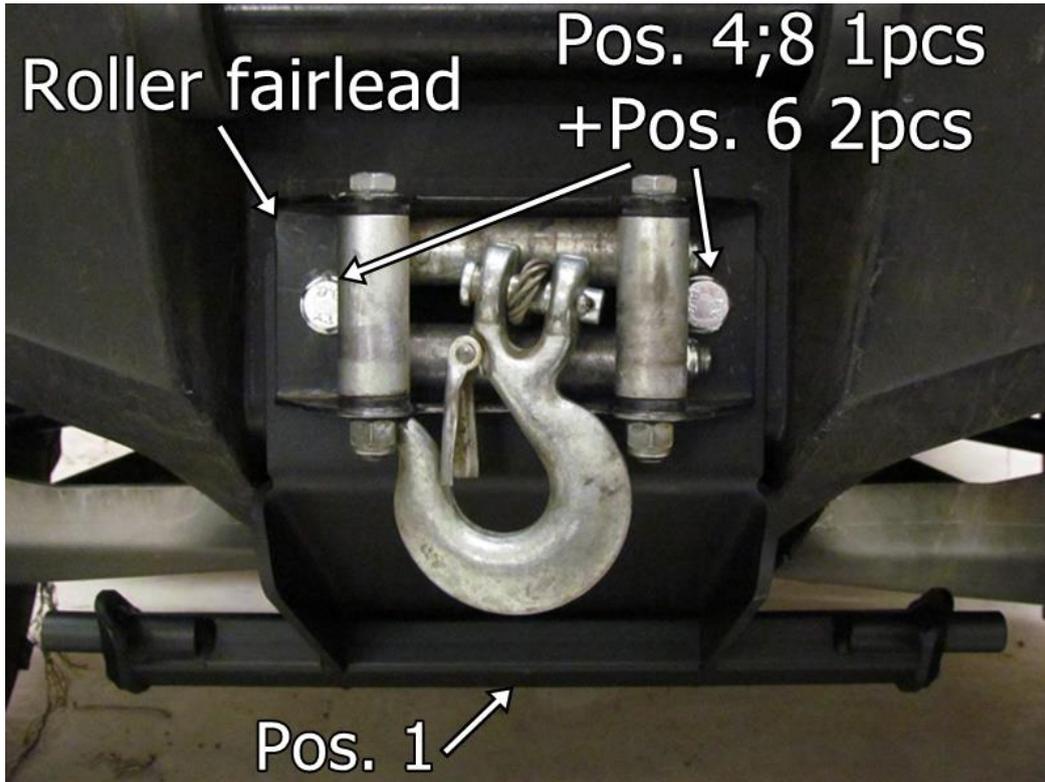

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

