

IRON BALTIC


SNOW PLOW MOUNTING KIT

YAMAHA

Grizzly 700 (2016) / Kodiak 700

Code 03.6900

Version 08112023

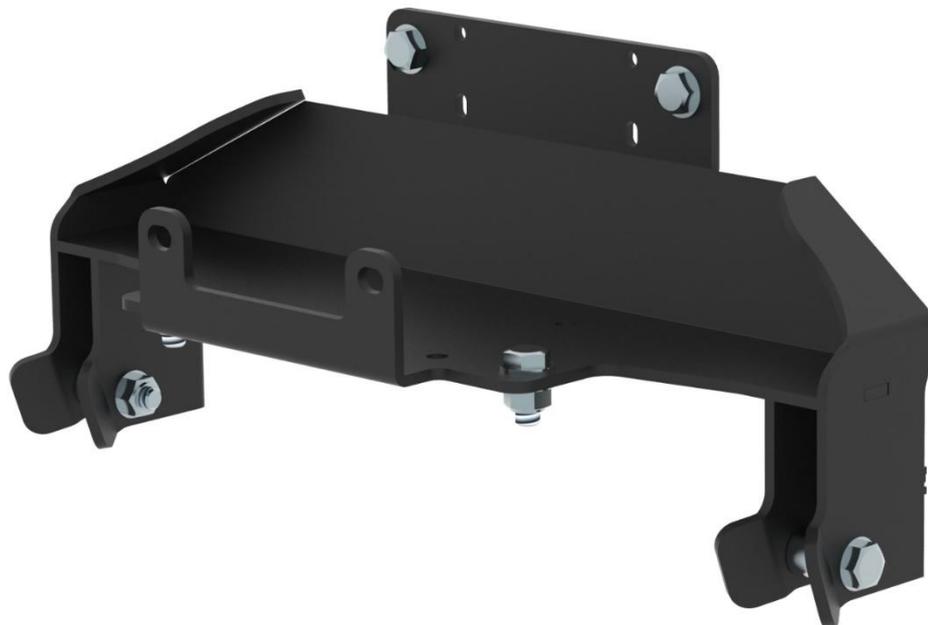

DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/0xstQDho

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Snow plow adapter	03.6901K	1
2	Relay holder	03.6906	1
3	Bush	03.5906	2
4	Bolt M6x20 DIN933	OT.02.02.060	2
5	Bolt M10x1,25-16 DIN961	OT.02.08.320	2
6	Bolt M10x25 DIN933	OT.02.02.317	2
7	Bolt M10x50 DIN933	OT.02.02.340	2
8	Washer 6/15 SFS3738	OT.04.03.020	4
9	Washer 10/20 DIN125	OT.04.01.040	10
10	Nut M6 Nyloc DIN985	OT.03.02.030	2
11	Nut M10 Nyloc DIN985	OT.03.02.050	4

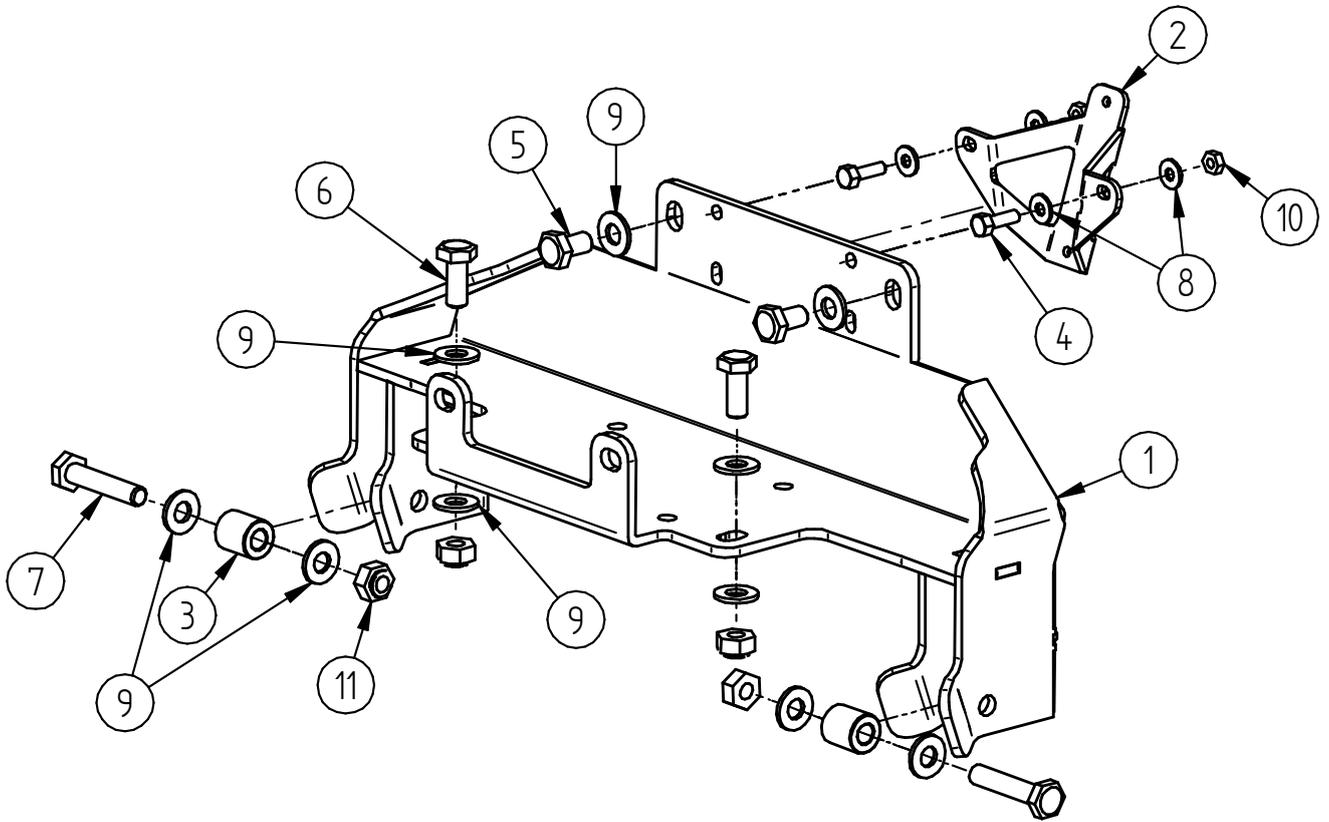


FITTING INSTRUCTIONS

Step 1 Remove original winch adapter (if fitted) and front bumper four bolts.


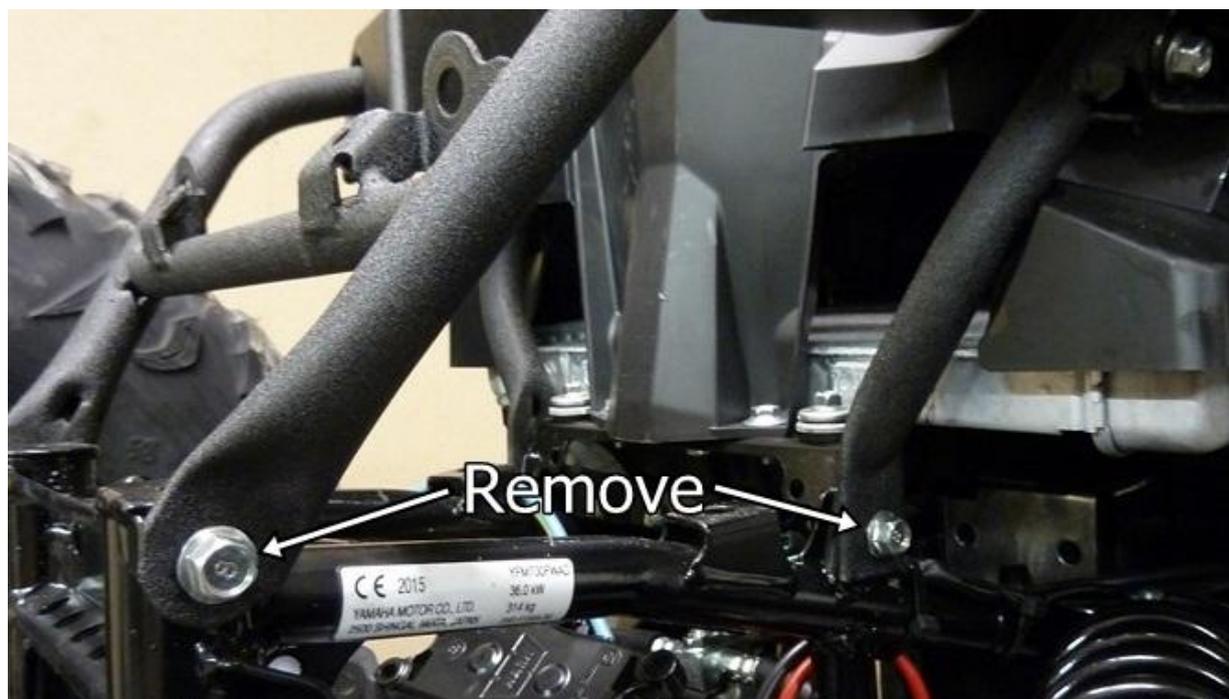


Step 2 Install bushes 03.5906 to the adapter.

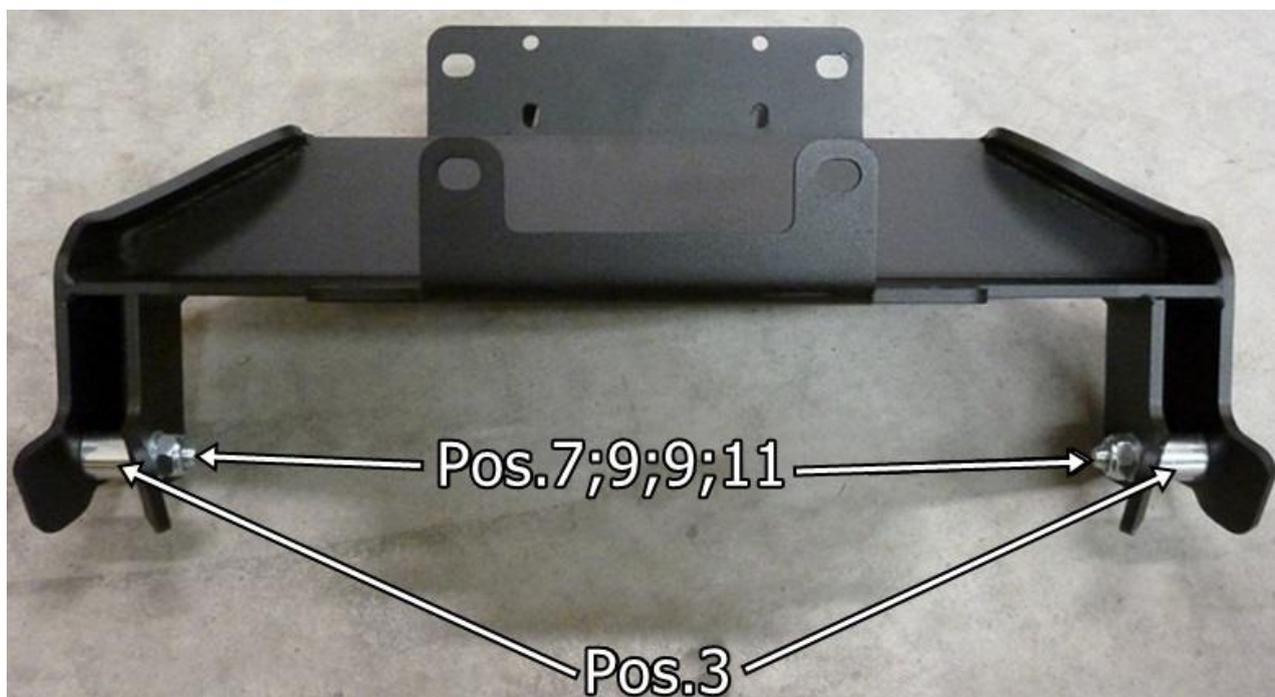

Step 3

Install adapter to the ATV. To ease the installation, pull the front bumper forward. Before securing the adapter, reinstall front bumper bolts! When using original winch, attach the relay to the adapter, if necessary use relay holder (Pos.2)

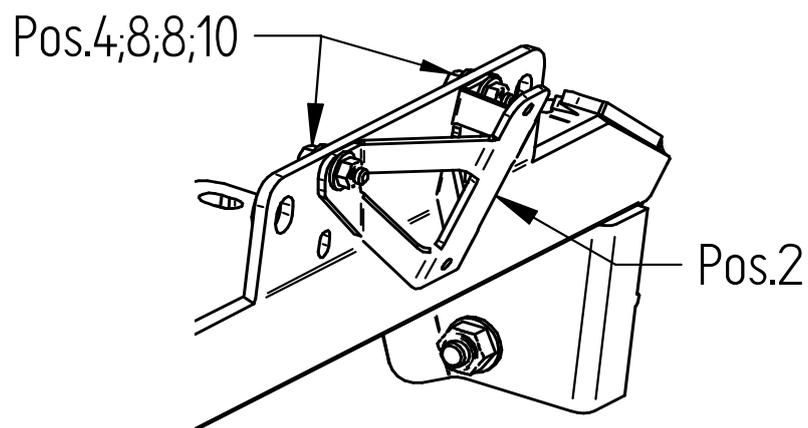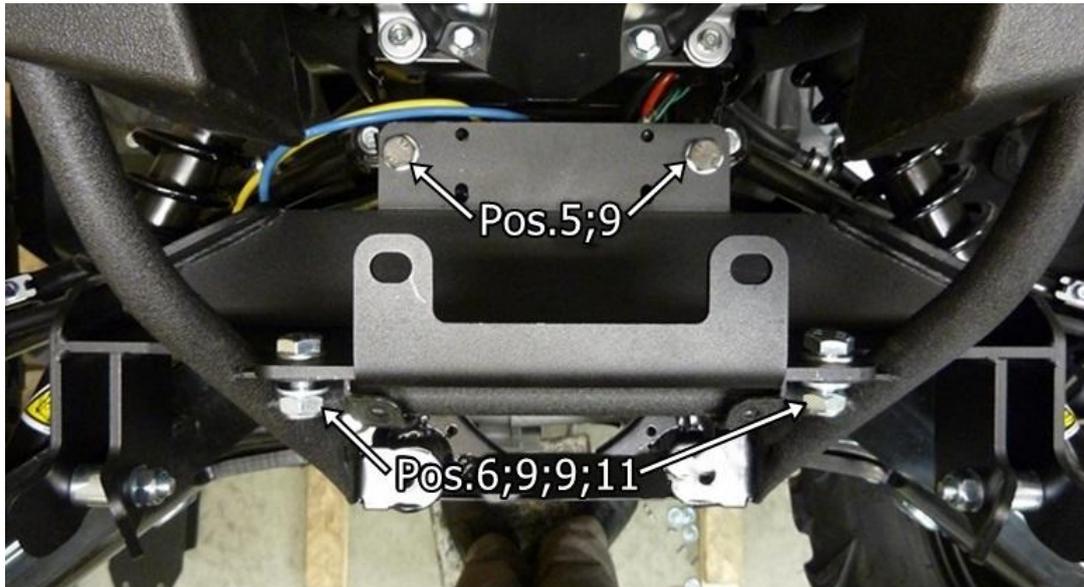

Step 4

Install winch. Manoeuvre winch to the adapter from right side, motor first.



Step 5

Install fairleader



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

