

# IRON BALTIC

## SNOW PLOW MOUNTING KIT

# POLARIS

## RZR 570

Code 03.7200

Version 08112023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)


DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/2sRcmmkF](http://code.ironbaltic.com/u/2sRcmmkF)

# SPECIFICATION




Pos.	Description	Code	Amount
1	Right side	03.7201K	1
2	Left side	03.7202K	1
3	Connecting plate	03.7203	1
4	Installation bush	03.7204K	2
5	Angle	03.1502	2
6	Pin 10x40mm DIN 1444	14.003	2
7	Locker pin 2 mm DIN 11024	OT.07.01.010	2
8	Bolt M6x55 DIN933	OT.02.02.130	2
9	Bolt M8x12 DIN933	OT.02.02.168	6
10	Bolt M8x30 DIN933	OT.02.02.200	4
11	Washer 6/15 SFS3738	OT.04.03.020	4
12	Washer 8/20 SFS3738	OT.04.03.030	10
13	Nut M6 Nyloc DIN985	OT.03.02.030	2

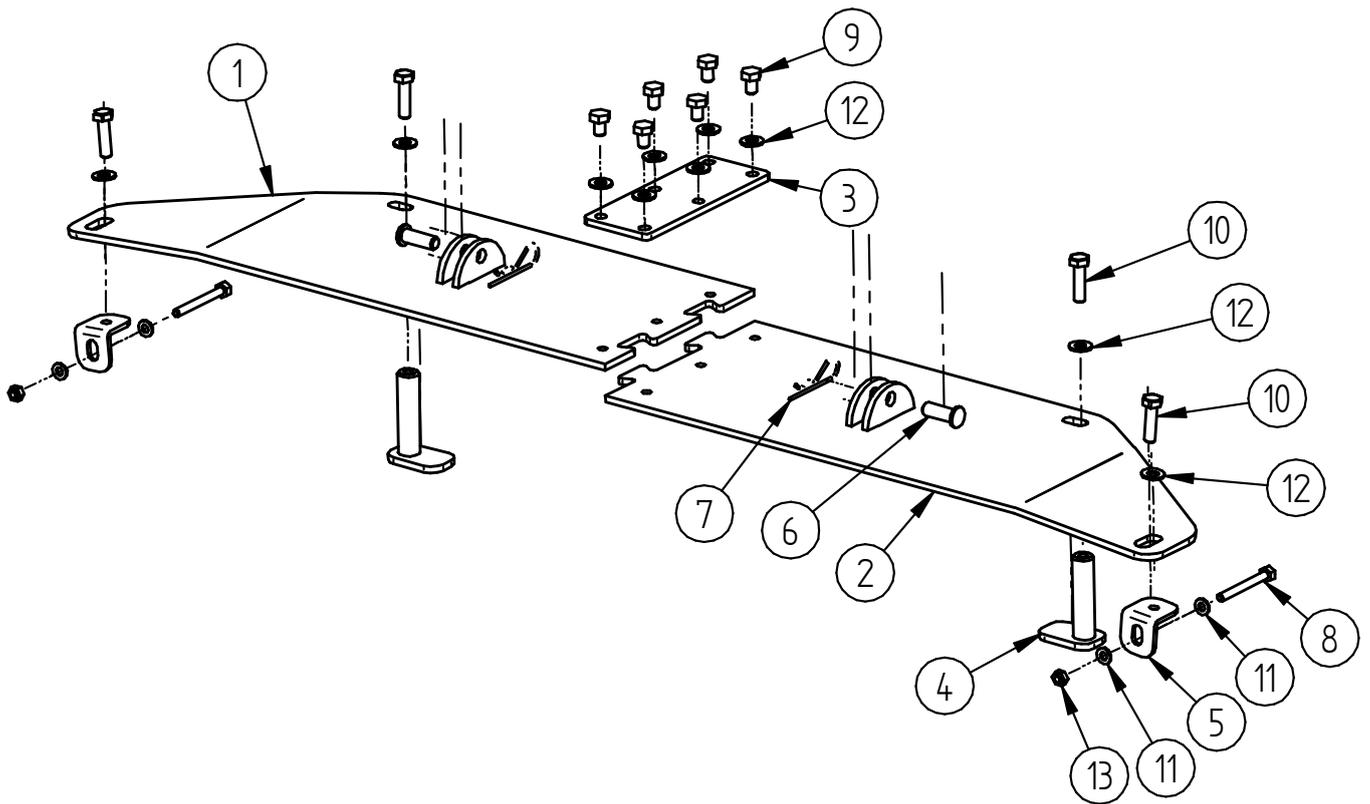

# FITTING INSTRUCTIONS


**Step 1** Remove original plastic protector.

**Step 2** Install angles 03.1502 and installation bush 03.7204K to the frame of ATV. Installation bush goes between the frame and plastic, if needed help to pry the plastic away from the frame with screwdriver. Make sure that the plate will sit perpendicular to the frame.

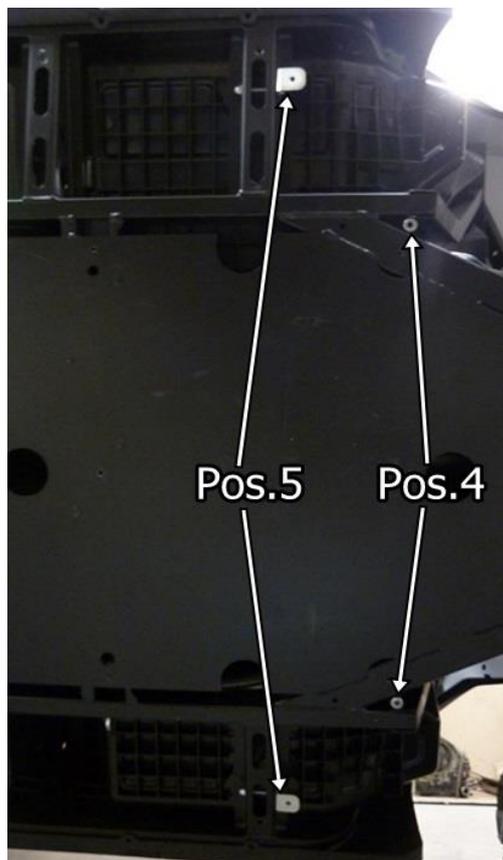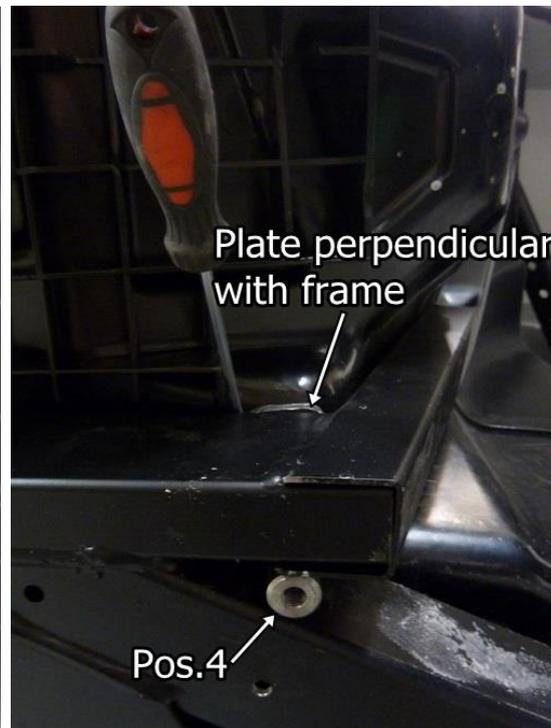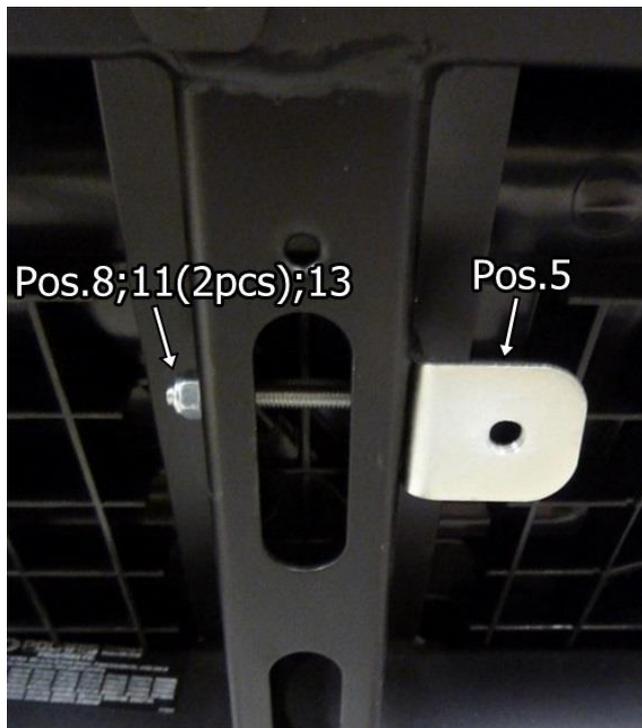



### Step 3

If you are using IronBaltic skid plate, then remove bolts indicated with arrows.

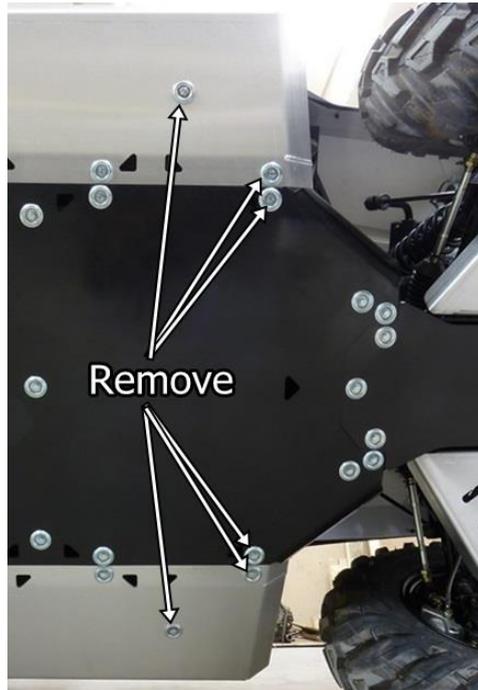

### Step 4

Connect the two halves and install adapter.

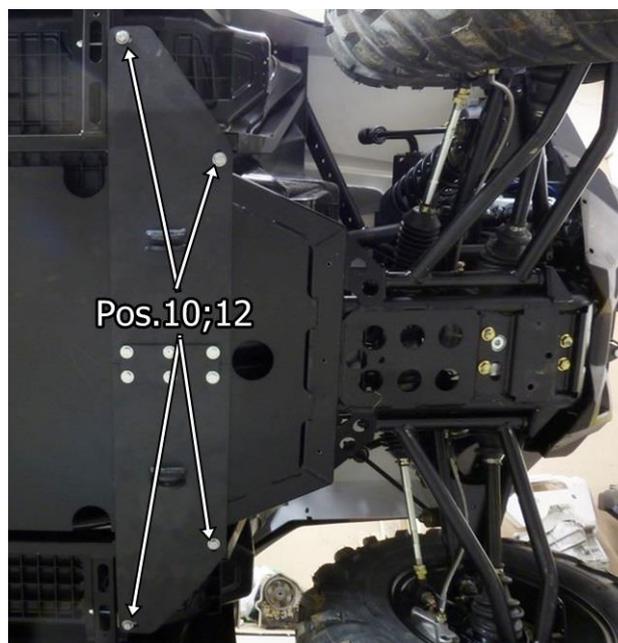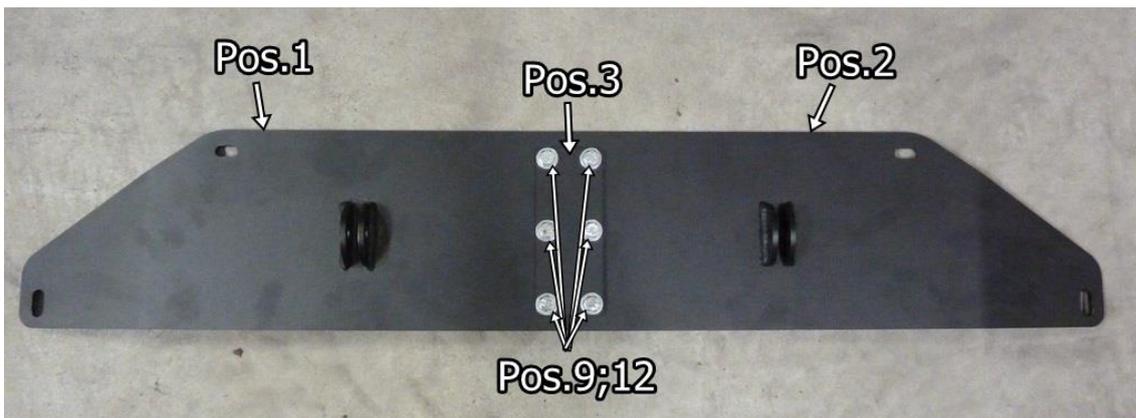





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

