

IRON BALTIC


SNOW PLOW MOUNTING KIT

POLARIS

RZR 570

Code 03.7300

Version 08112023

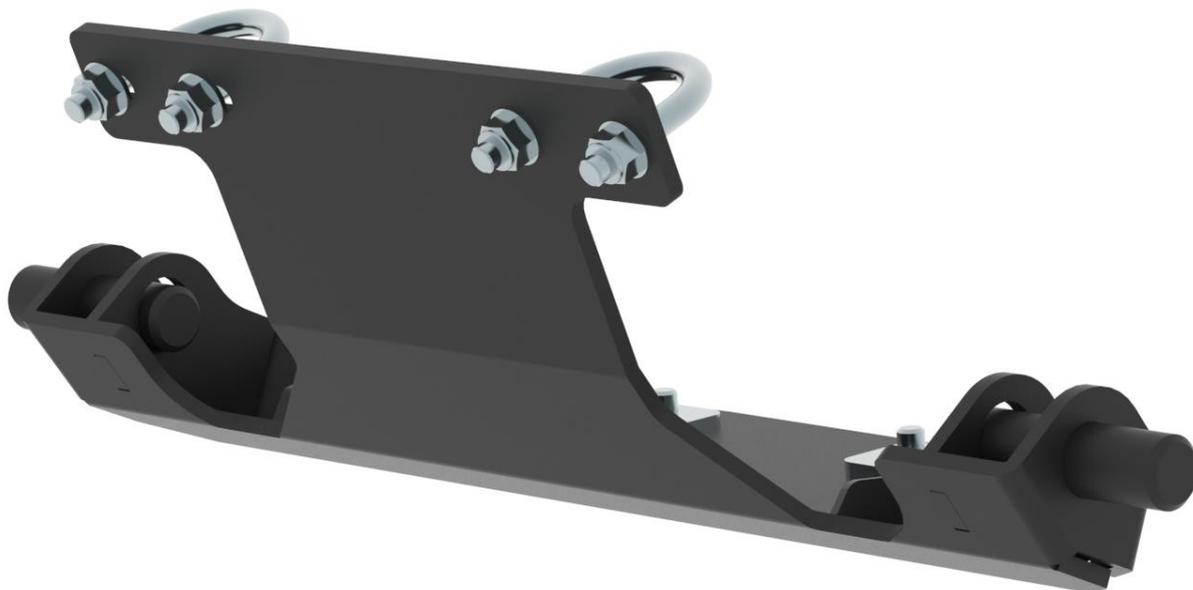

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/BSoqb00I

SPECIFICATION


Pos.	Description	Code	Amount
1	Adapter	03.7301K	1
2	Square nut	03.5204	2
3	Pipe clamp M8x32	OT.05.01.020	2
4	Bolt M8x20 DIN 933	OT.02.02.180	2
5	Washer 8/20 SFS3738	OT.04.03.030	6
6	Nut M8 Nyloc DIN 985	OT.03.02.040	4

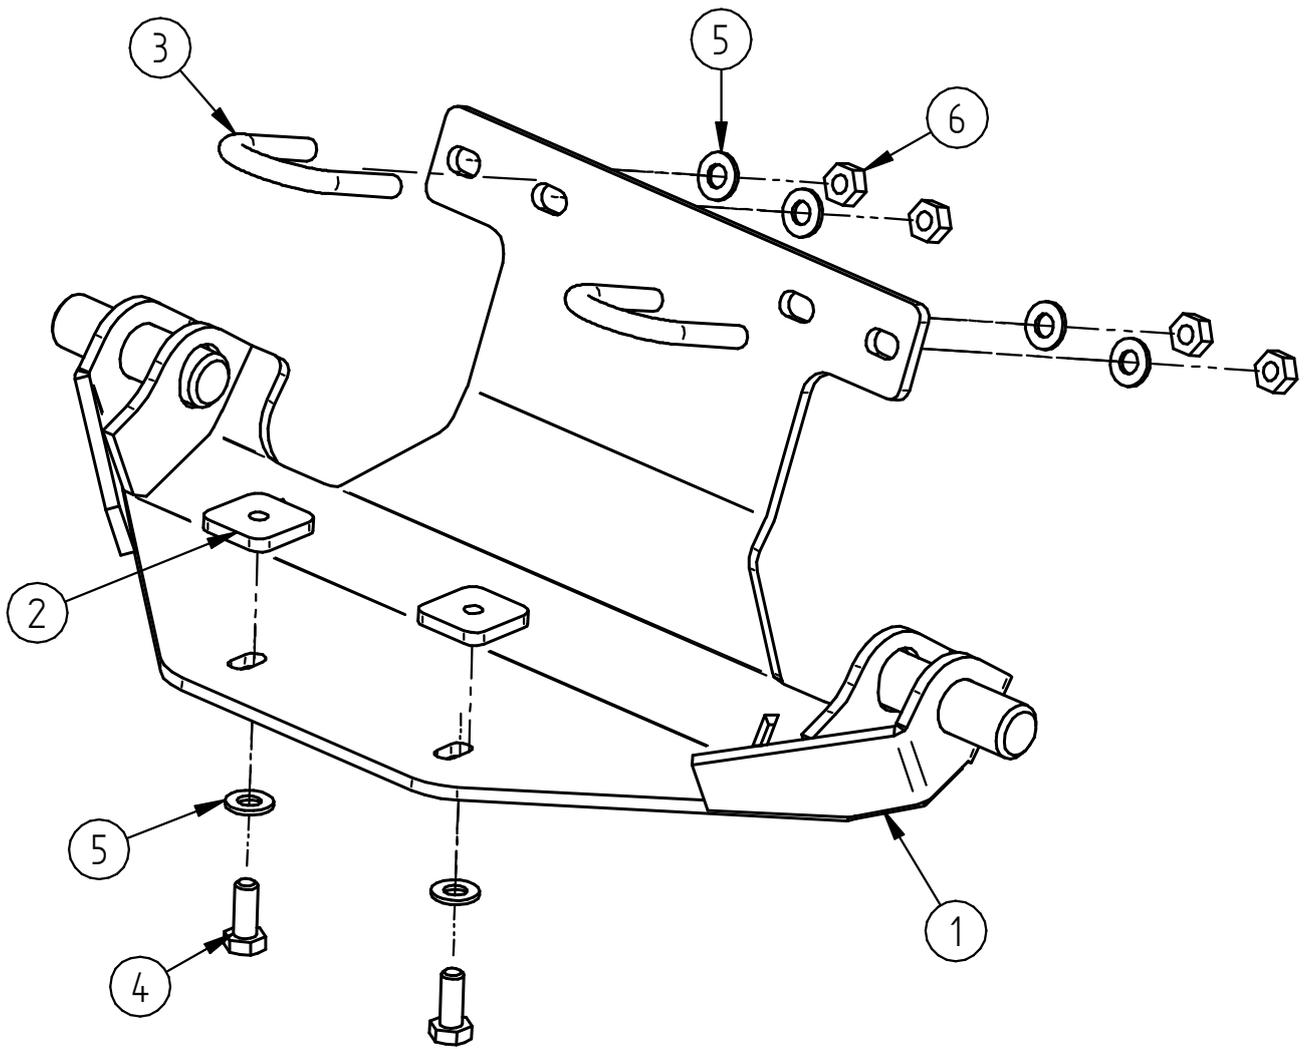

FITTING INSTRUCTIONS


Step 1

Remove the plastic cover from fairleader hole.
Remove / loosen screws indicated with arrows.

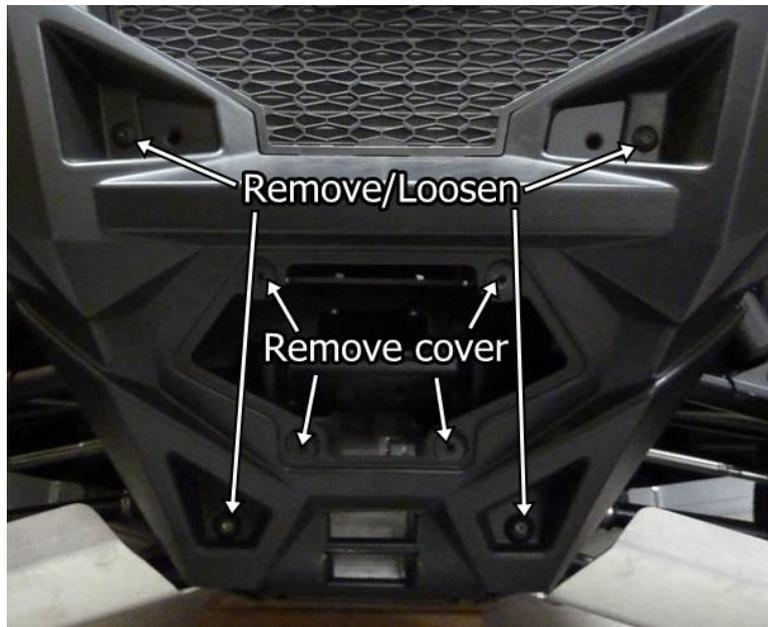

Step 2

Install plow adapter. Adapter will fit under the original plastic.

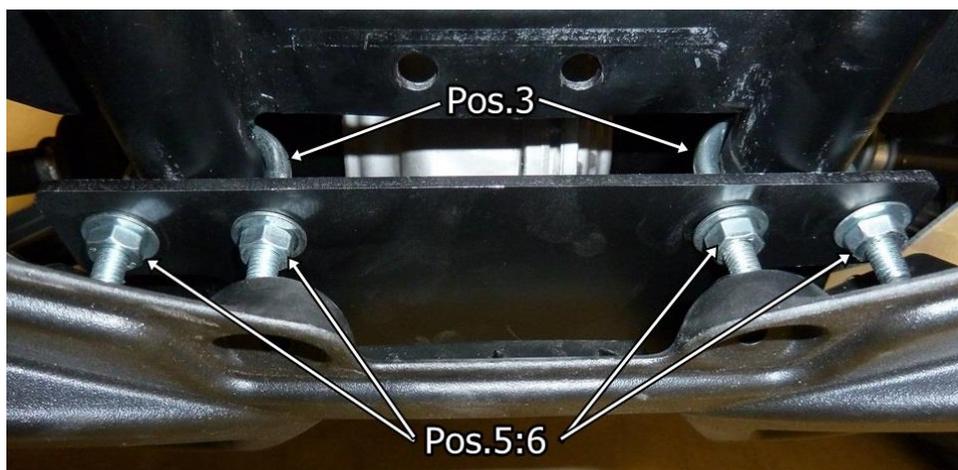



Step 3

If you're using plow adapter with IronBaltic skidplate, then you have to cut off the side bends and use bolts M8x25 supplied with skidplate.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

