

IRON BALTIC

SNOW PLOW MOUNTING KIT

HONDA

TRX 650 / 680 Rincon

Code 03.7500

Version 09112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/bbtblx8G

SPECIFICATION



Pos.	Description	Code	Amount
1	Snow plow adapter	03.7501K	1
2	Bush	03.5906	2
3	Plate	05.512HB	2
4	Pipe clamp M8x28	OT.05.01.010	2
5	Pipe clamp M8x32	OT.05.01.020	4
6	Bolt M8x30 DIN933	OT.02.02.200	4
7	Bolt M10x50 DIN931	OT.02.01.042	2
8	Washer 8/20 SFS3738	OT.04.03.030	16
9	Washer 10/20 DIN125	OT.04.01.040	4
10	Nut M8 Nyloc DIN985	OT.03.02.040	12
11	Nut M10 Nyloc DIN985	OT.03.02.050	2

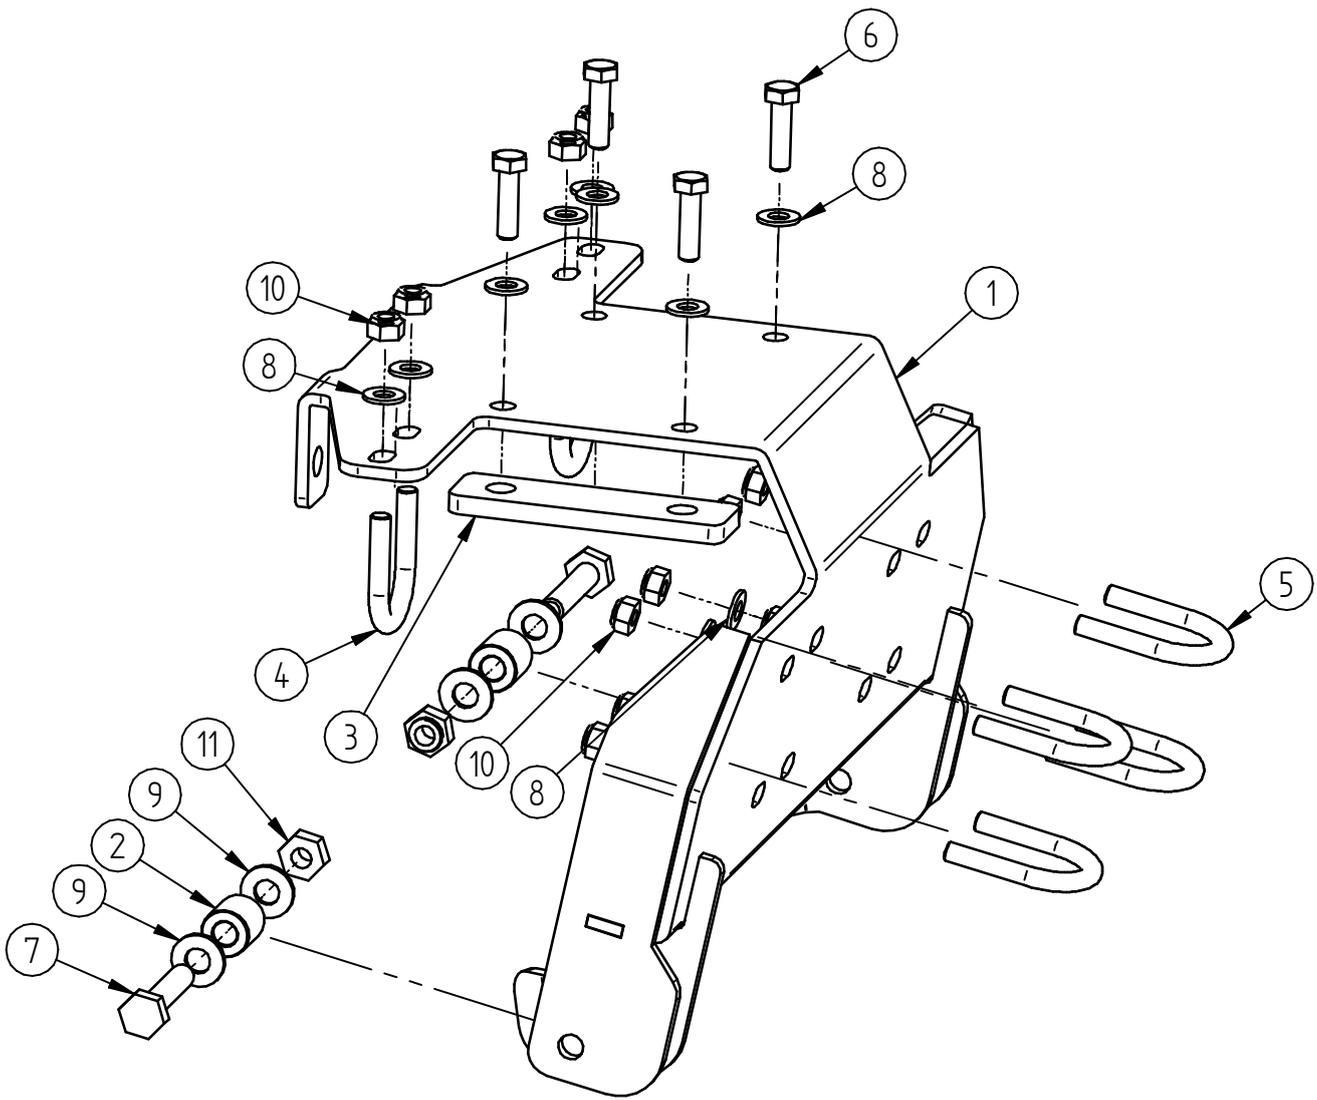

FITTING INSTRUCTIONS


Step 1

Remove original front protection and front bumper bolts. Turn the horn around or bend the horn little bit backwards.

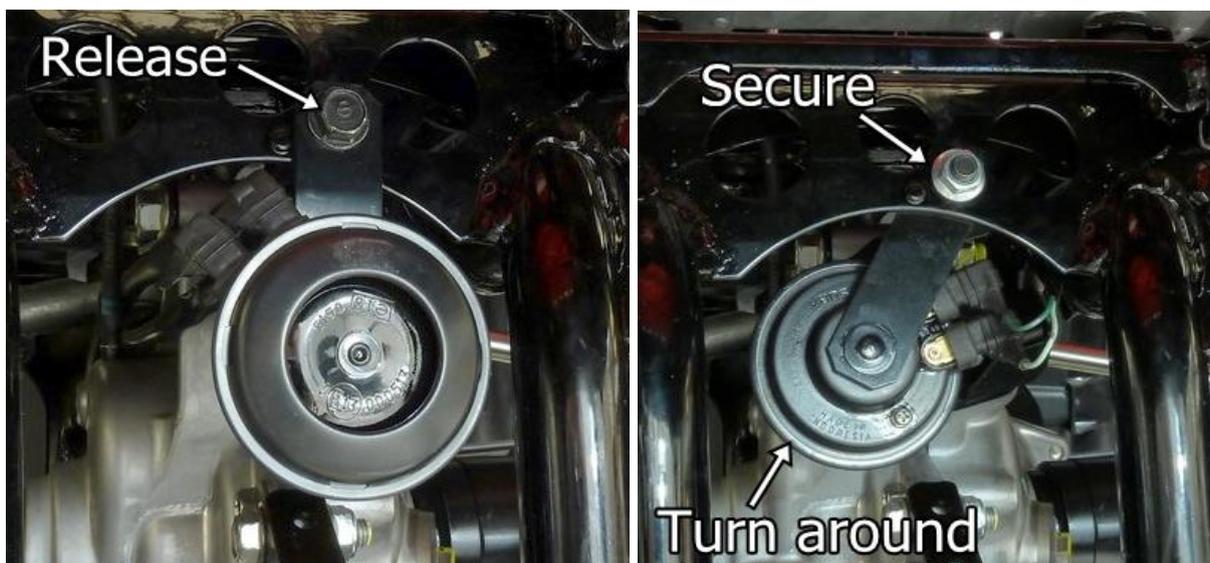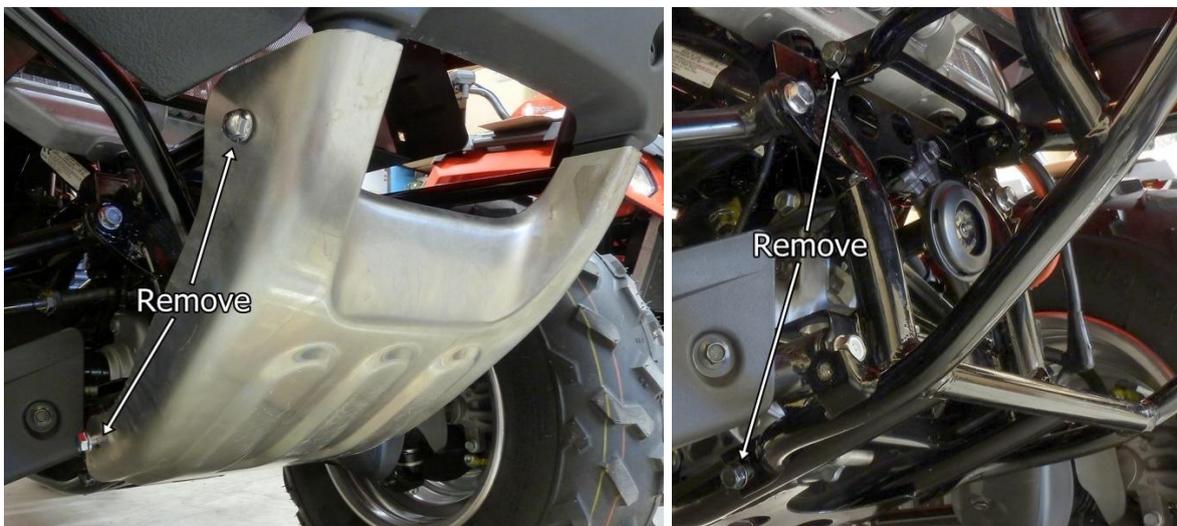


Step 2

Install bushes 03.5906 to the adapter. Place the bolts from inside out.

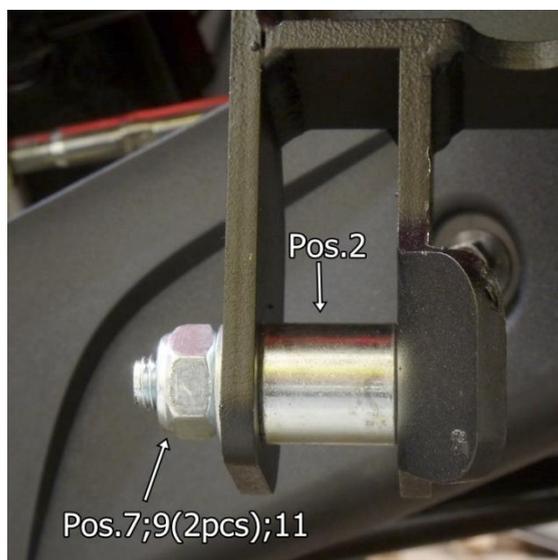


Step 3

Install plow adapter. Pull the front bumper forward. Slide the adapter between the front bumper and ATV frame (shown on the picture), then you can fit the adapter in place. Before securing the adapter, reinstall the front bumper bolts.

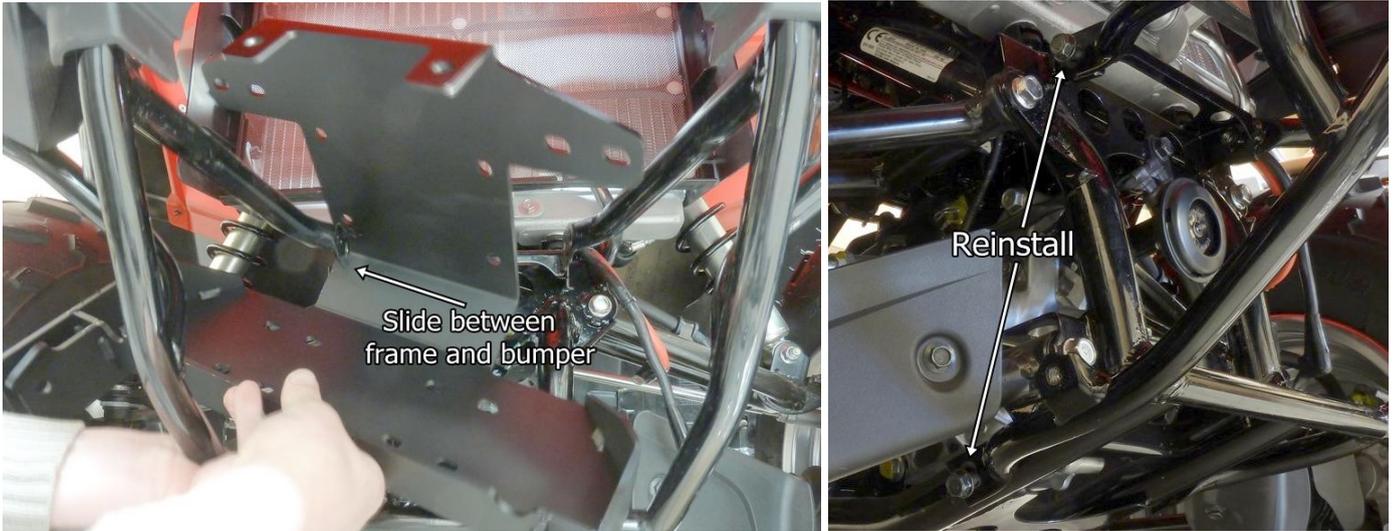

Step 4

Install winch fairlead.

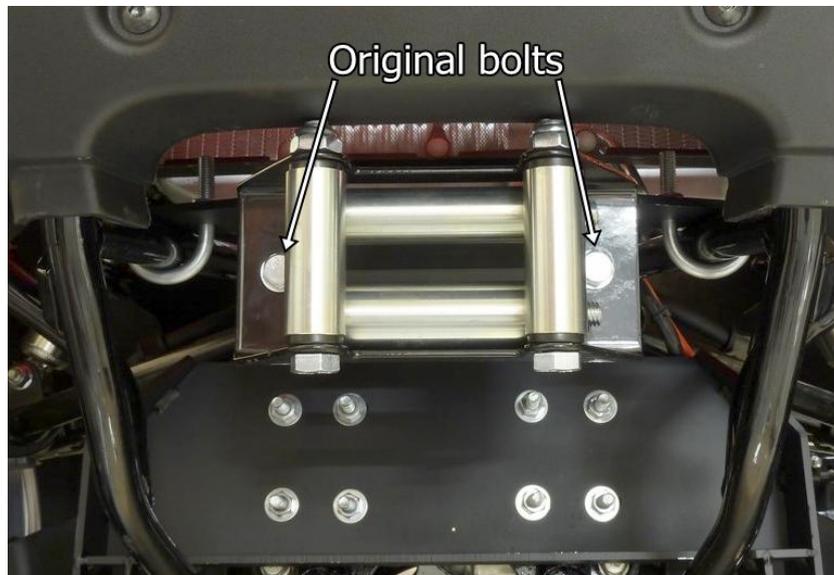

Step 5

Install winch with plates 05.512HB (plates go between winch and adapter).
Use supplied bolts M8x30.



Step 6

Reinstall front protection.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

