

IRON BALTIC

SNOW PLOW MOUNTING KIT

KAWASAKI

KVF 650 / 750

Code 03.7600

Version 09112023



DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/3ooFILtA

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


SPECIFICATION

| Pos. | Description | Code | Amount |
|------|-------------------------|--------------|--------|
| 1 | Snow plow adapter | 03.7601K | 1 |
| 2 | Bush | 03.5906 | 2 |
| 3 | Pipe clamp M8x28 | OT.05.01.010 | 4 |
| 4 | Pipe clamp bracket 28mm | OT.05.04.010 | 2 |
| 5 | Bolt M10x50 DIN931 | OT.02.01.042 | 2 |
| 6 | Washer 8/20 SFS3738 | OT.04.03.030 | 8 |
| 7 | Washer 10/20 DIN125 | OT.04.01.040 | 4 |
| 8 | Nut M8 Nyloc DIN985 | OT.03.02.040 | 8 |
| 9 | Nut M10 Nyloc DIN985 | OT.03.02.050 | 2 |

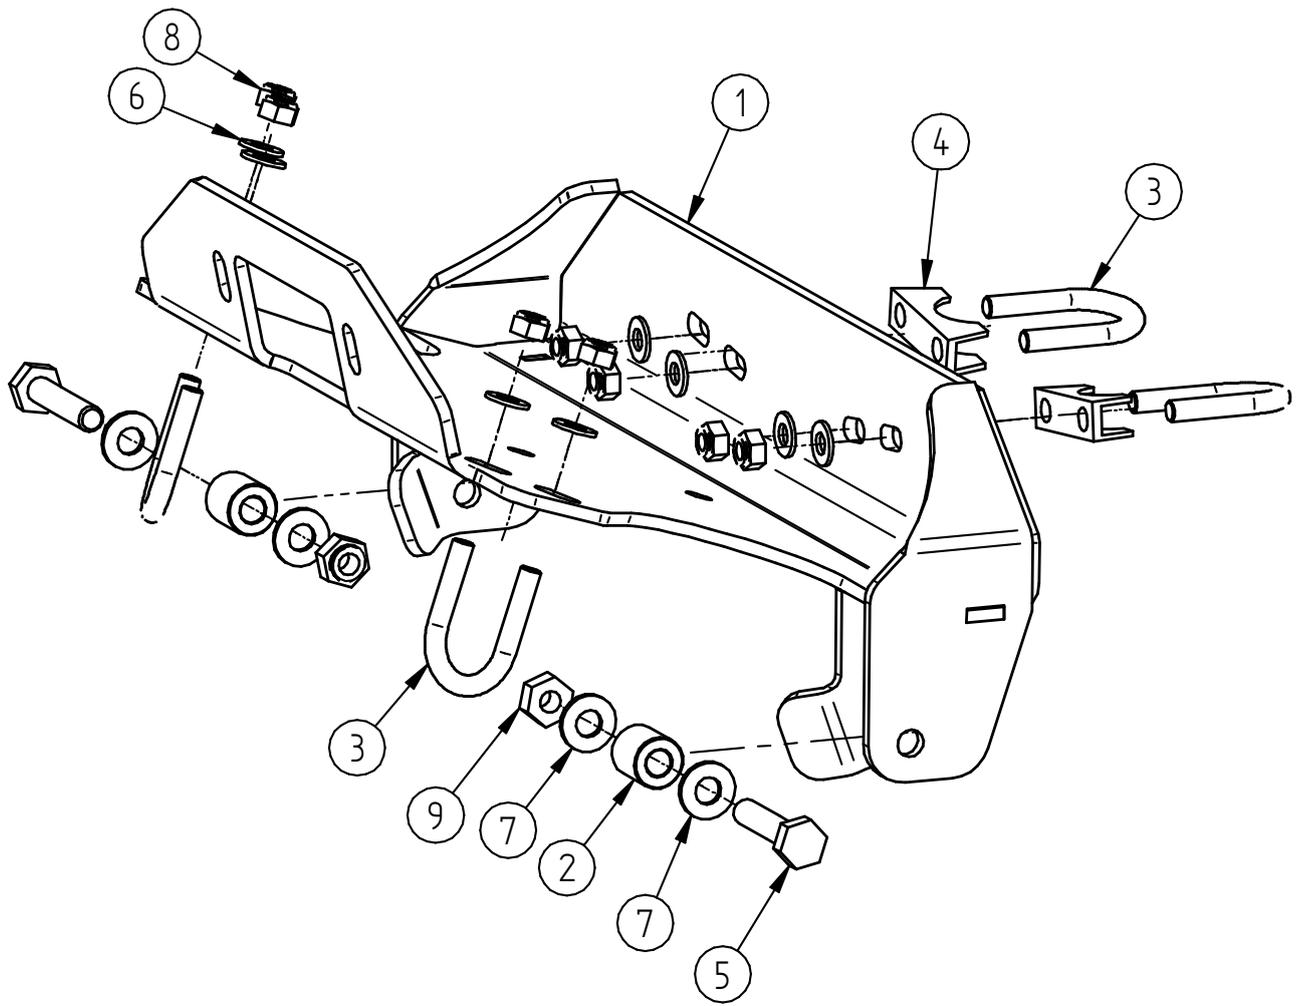


FITTING INNSTRUCTIONS

Step 1 Remove original front bumper bolts.

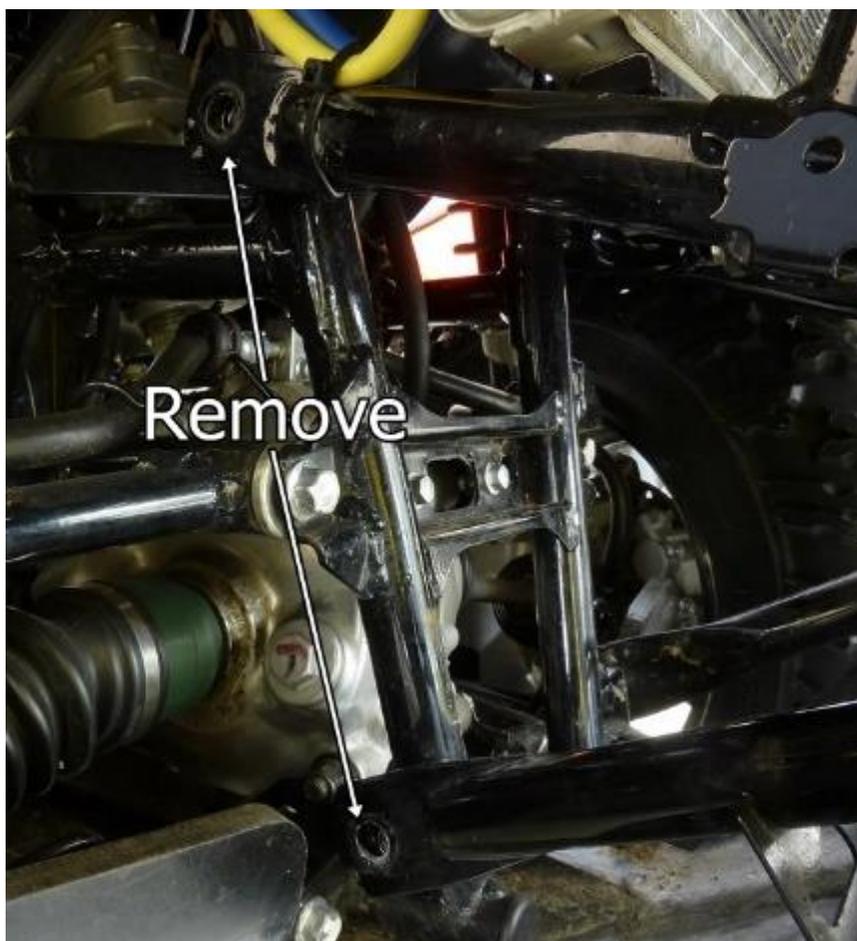


Step 2 Install bushes 03.5906 to the adapter.

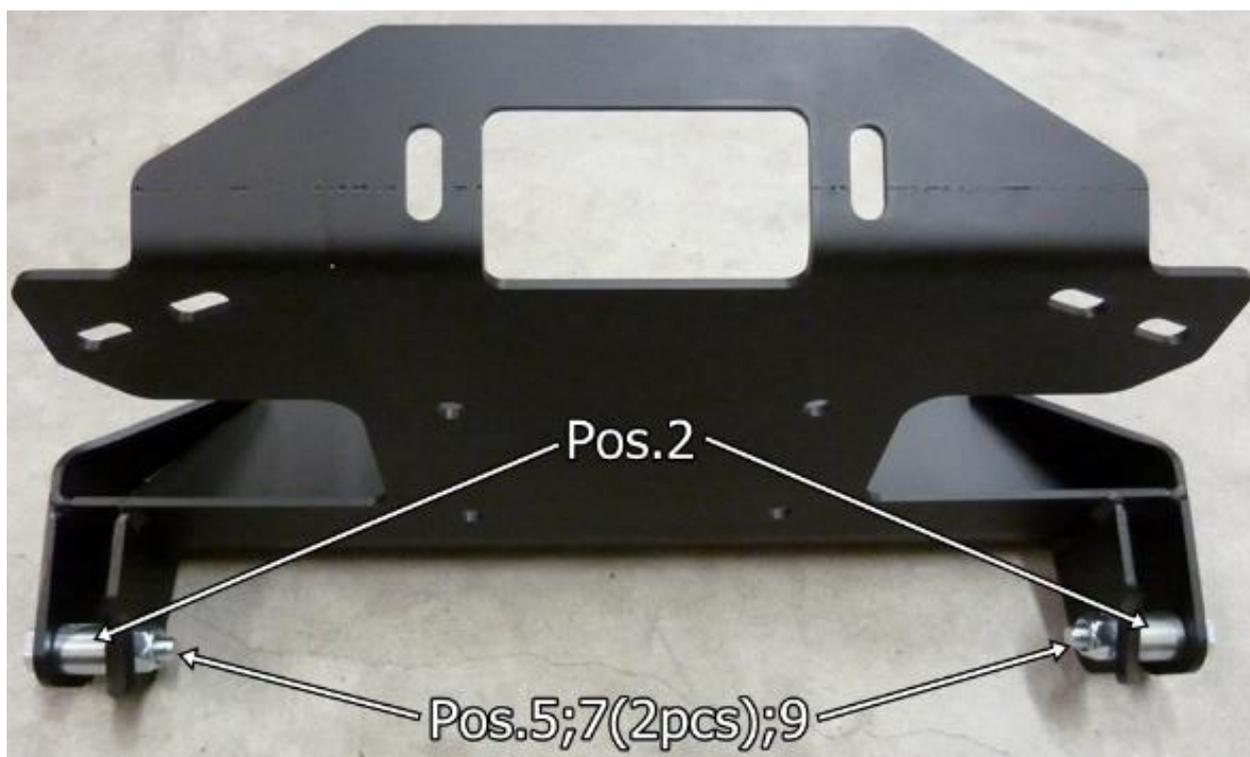


Step 3

Install plow adapter. Pull the front bumper forward. Slide the adapter in place from the side. Install the pipe clamps but do not tighten nuts!

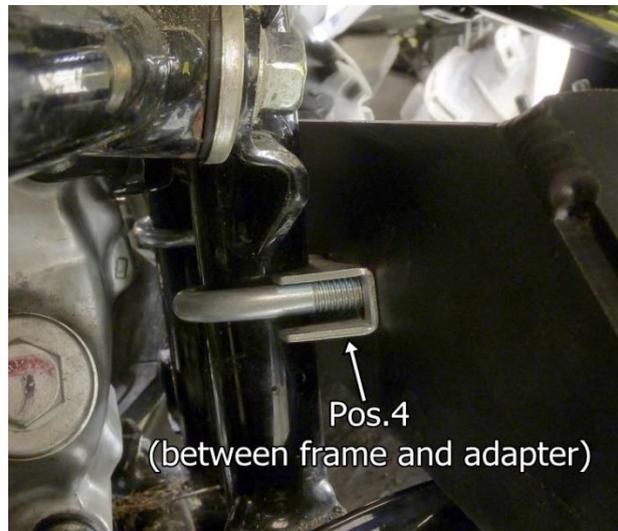


Step 4

Install winch. Pull the front bumper forward and slide the winch in from the side.

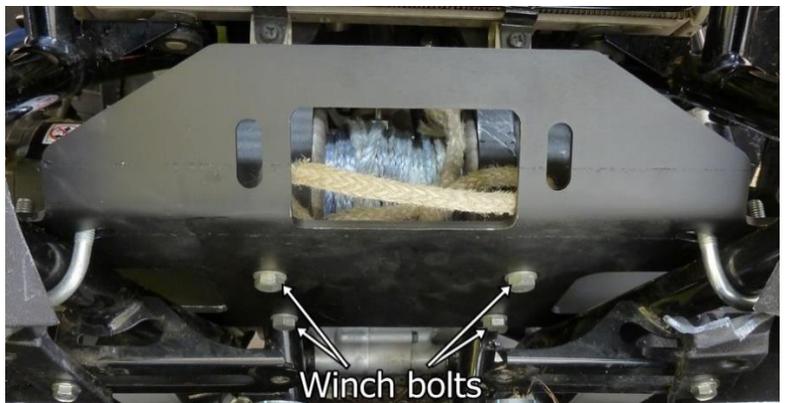

Step 5

Install winch fairlead.

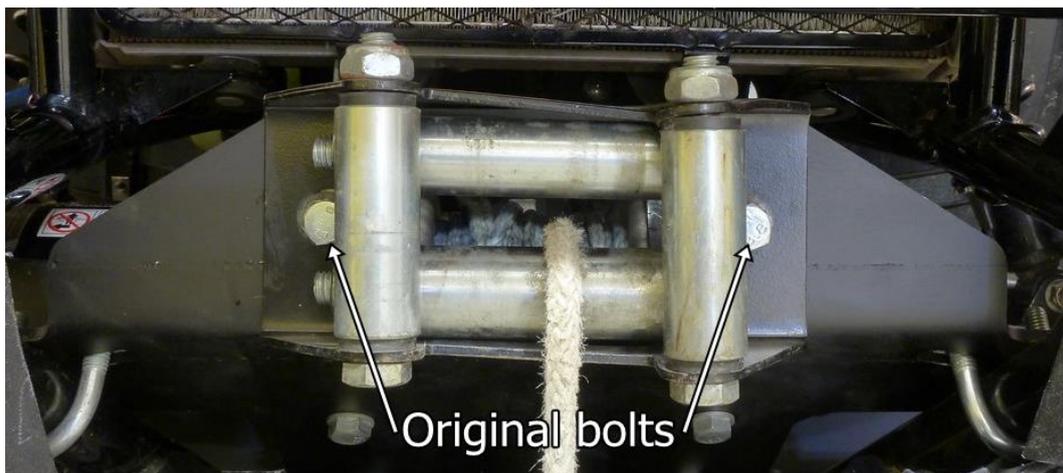

Step 6

Reinstall front bumper bolts. After securing the front bumper, tighten all the pipe clamp nuts.

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

