

# IRON BALTIC

## FRONT-MOUNT ADAPTER

### ARCTIC CAT

Alterra 550 / 700

Code 03.8100

Version 09112023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)


DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/Y10AYUPD](http://code.ironbaltic.com/u/Y10AYUPD)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Snow plow adapter	03.8101K	1
2	Reinforcement plate	03.8106	1
3	Bush	03.5906	2
4	Pipe clamp M8x32	OT.05.01.020	2
5	Bolt M8x25 DIN 933	OT.02.02.190	4
6	Bolt M10x50 DIN931	OT.02.01.042	2
7	Bolt M6x35 DIN 7500D	OT.02.06.020	2
8	Washer 8/20 SFS3738	OT.04.03.030	12
9	Washer 10/20 DIN125	OT.04.01.040	4
10	Nut M8 Nyloc DIN 985	OT.03.02.040	8
11	Nut M10 Nyloc DIN 985	OT.03.02.050	2

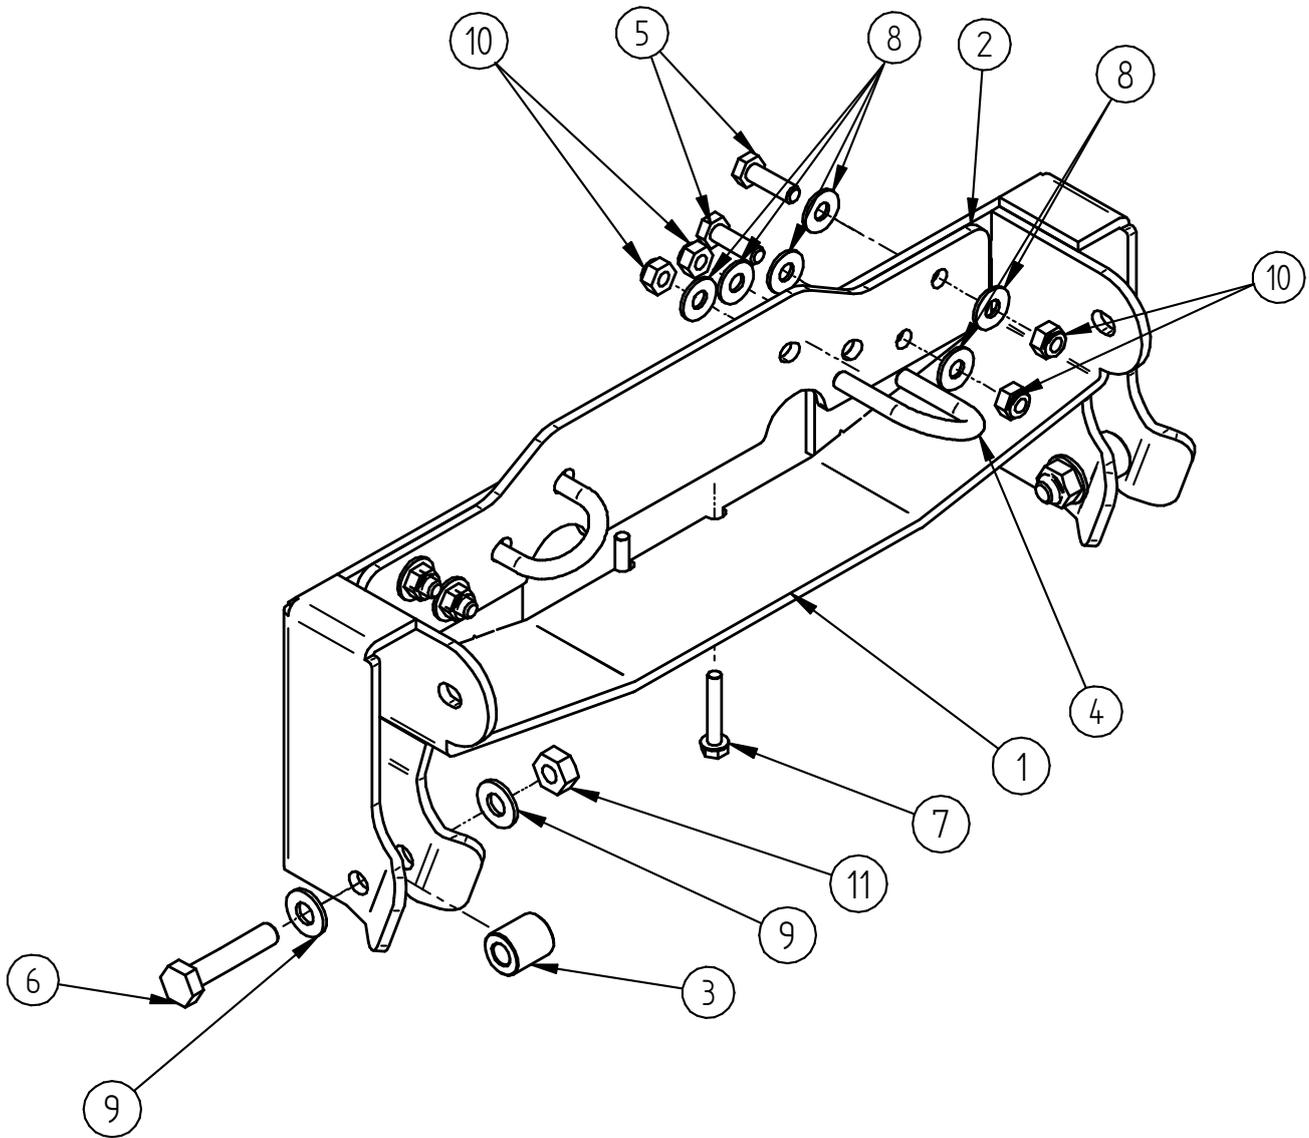


# FITTING INSTRUCTIONS



**Step 1** Remove original bolts of plastic cover.



**Step 2** Install bushes 03.5906 to the adapter.

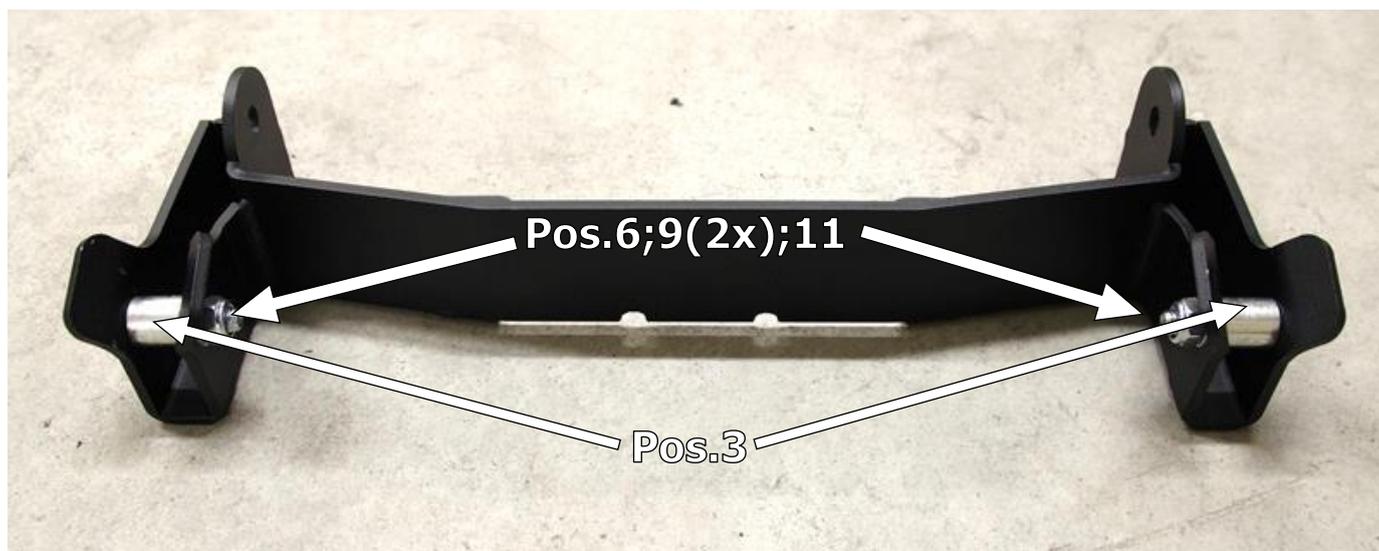


**Step 3** Install adapter and original bolts but do not tighten bolts!

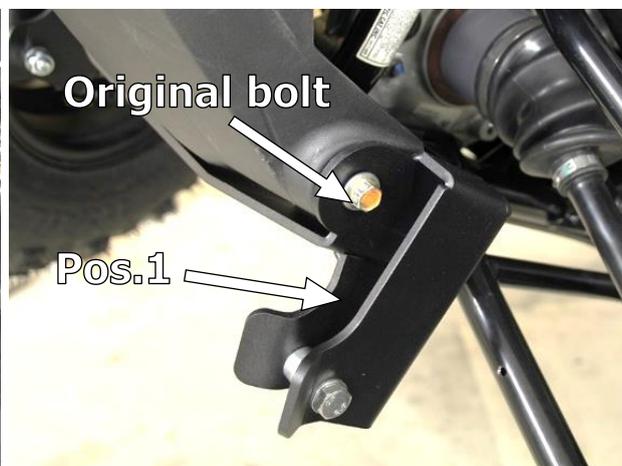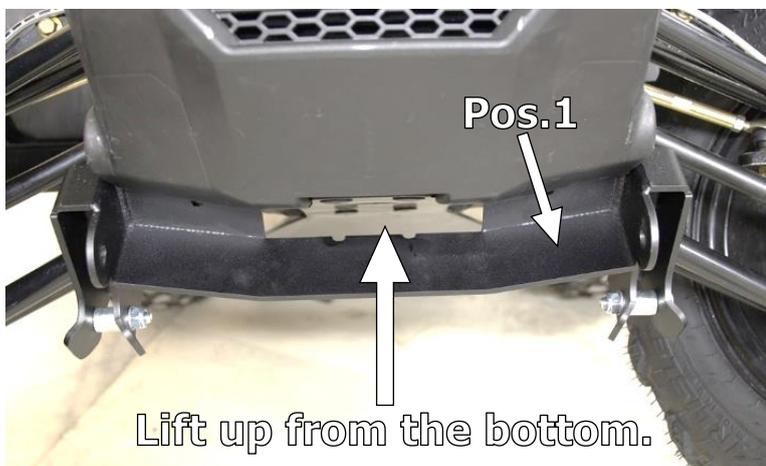



#### Step 4

Install reinforcement plate. The reinforcement plate must be between the frame and adapter. Tighten all the original bolts.

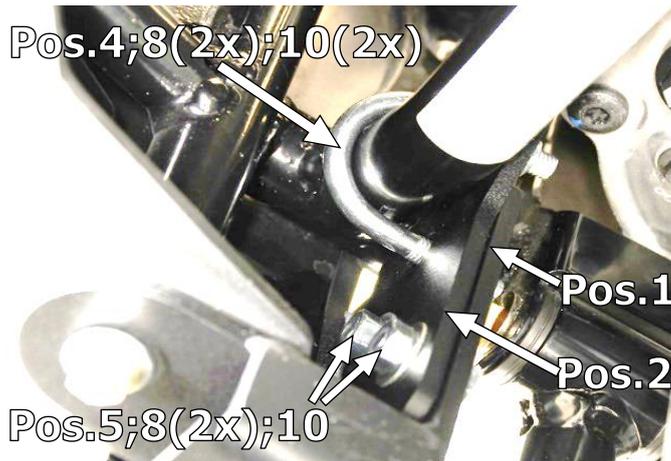

#### Notes

If you use IronBaltic's skid plates, then the adapter will be installed underneath the skid plate and replace the bolts shown in the picture.

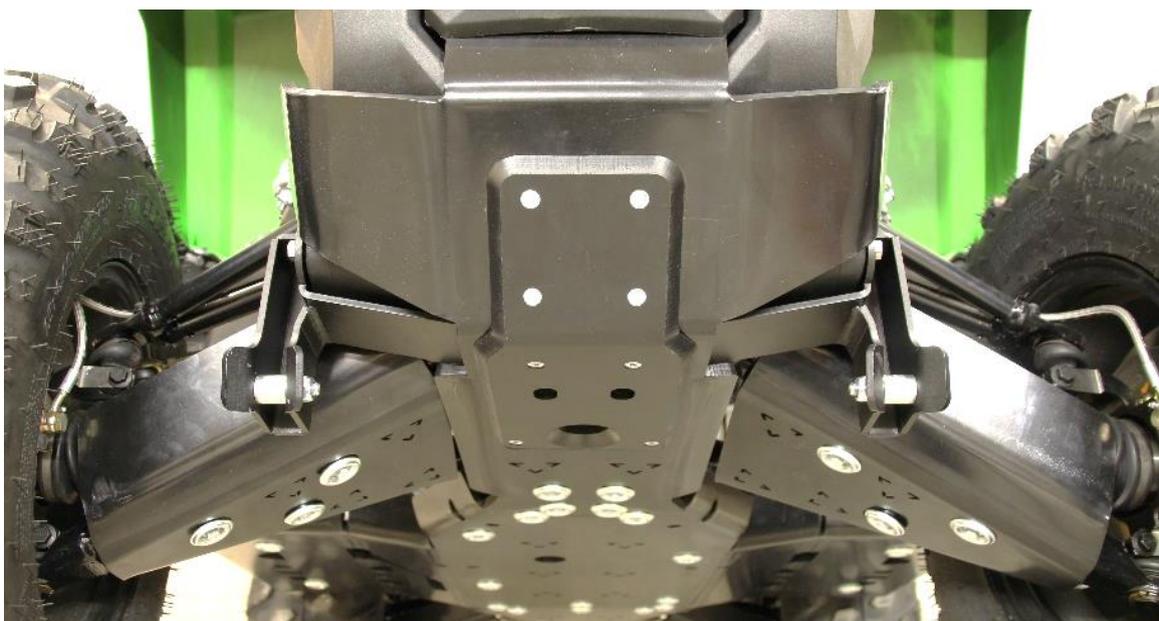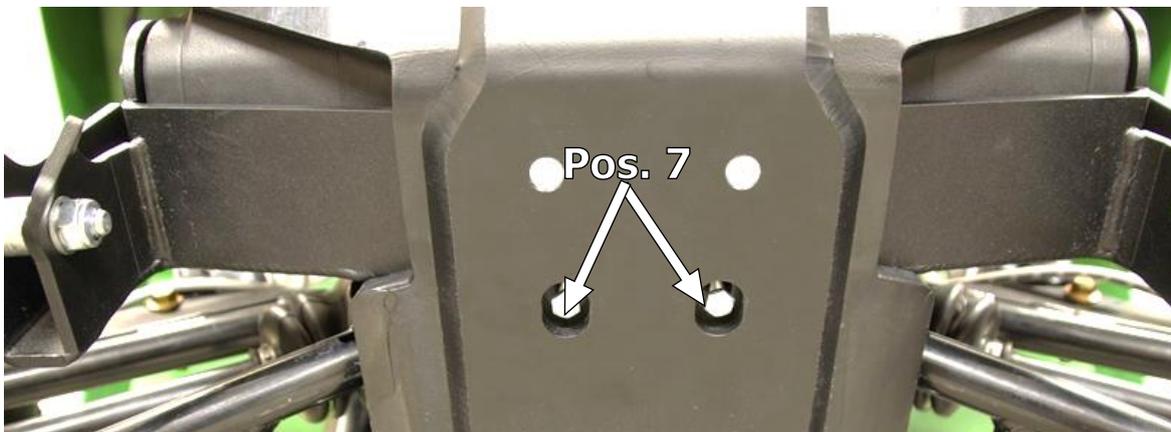





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

