

IRON BALTIC

FRONT-MOUNT ADAPTER

CFORCE

850 / 1000

Code 03.8400

Version 10112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/3oeGy27t


SPECIFICATION

Pos.	Description	Code	Amount
1	Snow plow mount	03.8401K	1
2	Bush	03.5906	2
3	Pipe clamp bracket 28mm	OT.05.04.010	4
4	Bolt M10x50 DIN931	OT.02.01.042	2
5	Carriage bolt M8x70 DIN603	OT.02.05.082	4
6	Washer 8/20 SFS3738	OT.04.03.030	4
7	Washer 10/20 DIN125	OT.04.01.040	4
8	Nyloc nut M8	OT.03.02.040	4
9	Nyloc nut M10	OT.03.02.050	2


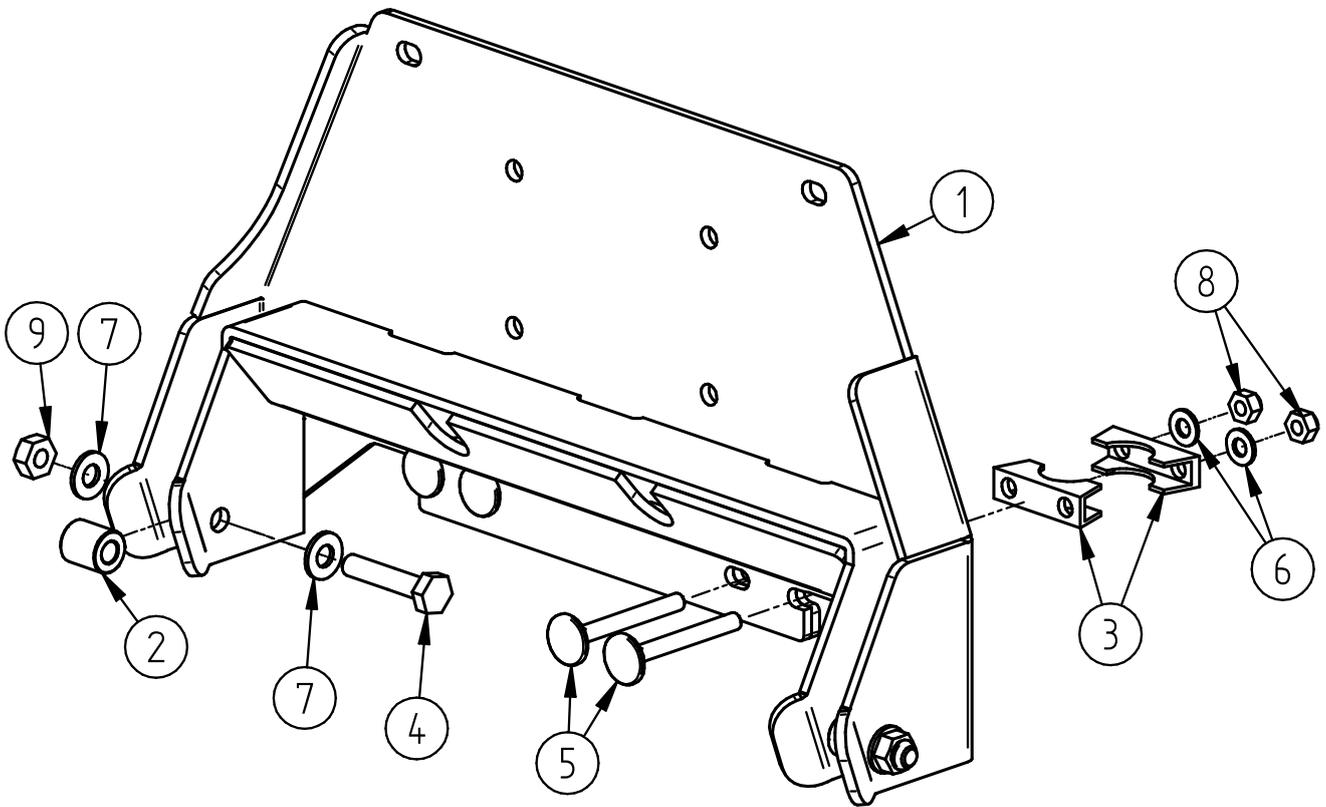


FITTING INSTRUCTIONS

Step 1 Remove front protection. Disconnect winch wires.

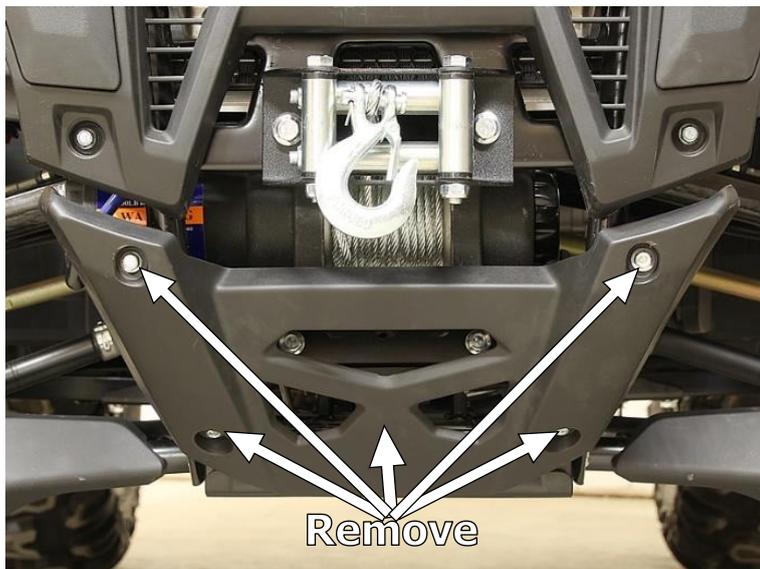


Step 2 Remove winch fairlead and winch baseplate with winch.

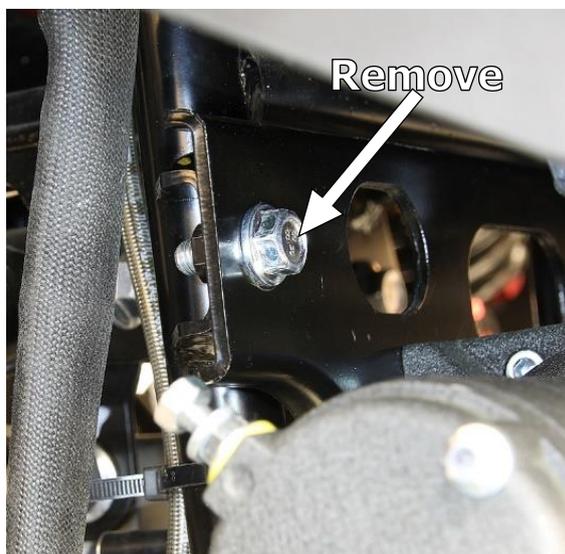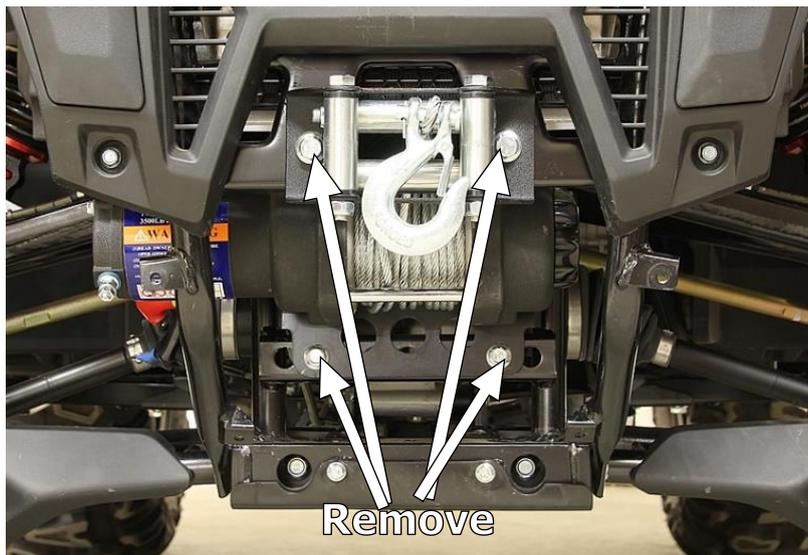


Step 3

Remove winch from original baseplate

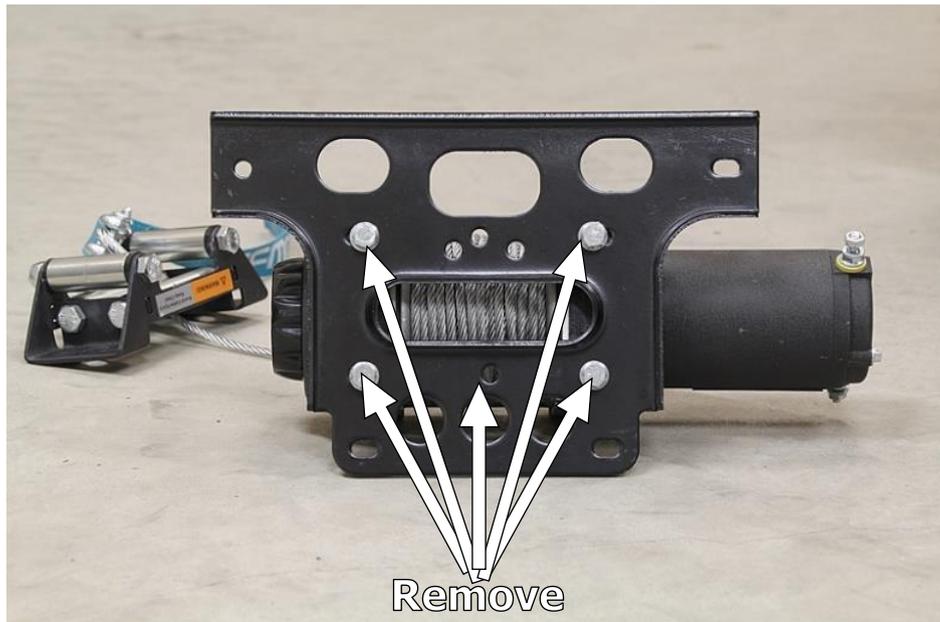

Step 4

Install bushes. Install adapter into ATV.

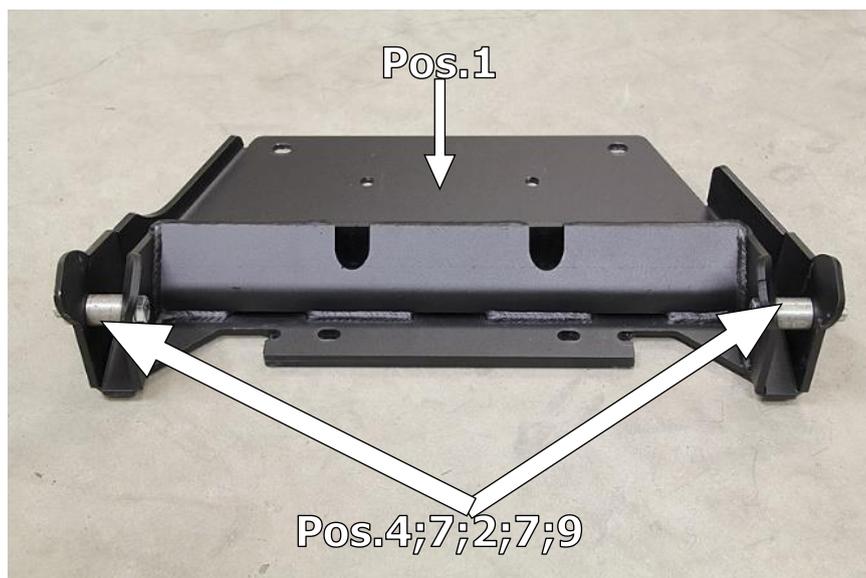


Step 5

Place pipe clamp brackets between adapter and ATV frame as shown on the picture.







Step 6

Install winch with original bolts. NB! Make sure that winch electrical connectors won't hit the adapter, if necessary change the position of connectors (see winch manual or contact your winch reseller). Correct connectors position is shown below!

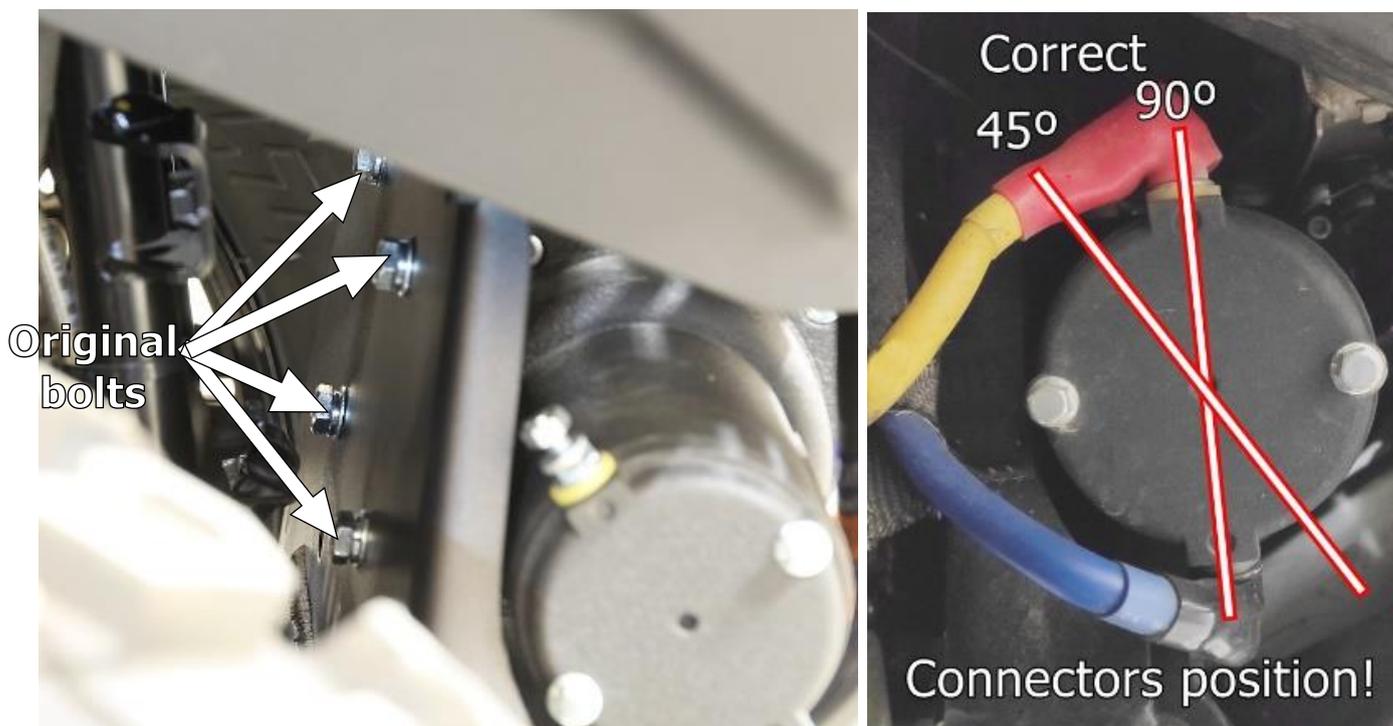


Step 7

Install snow plow mount to ATV.

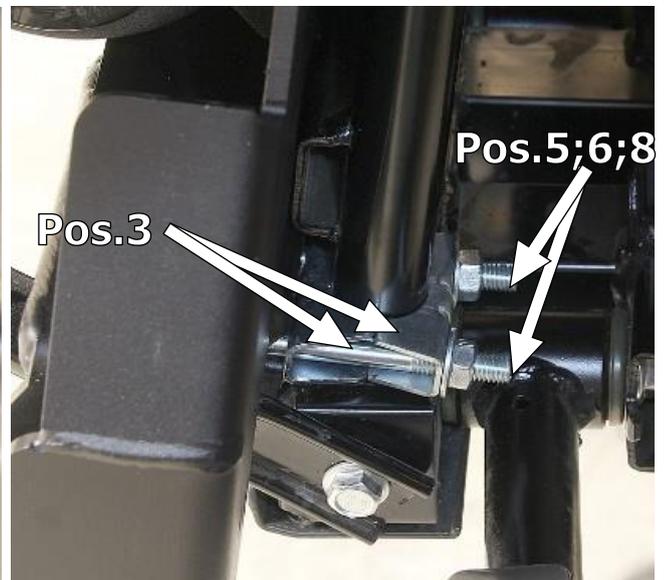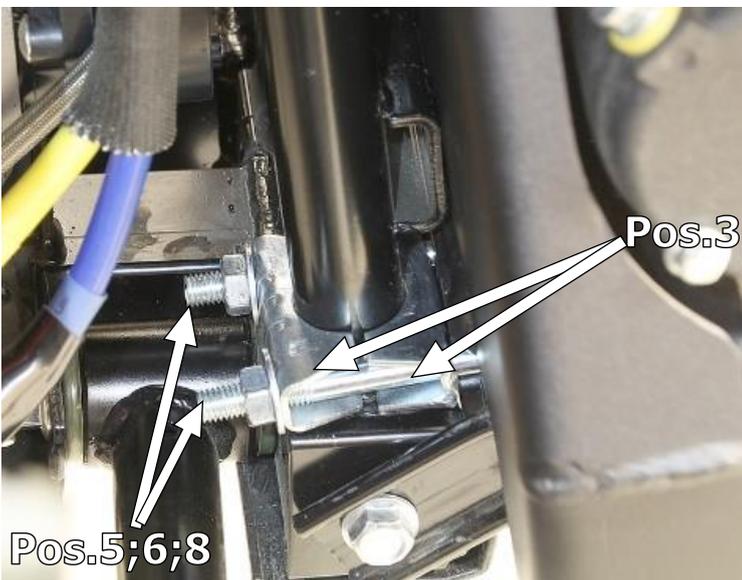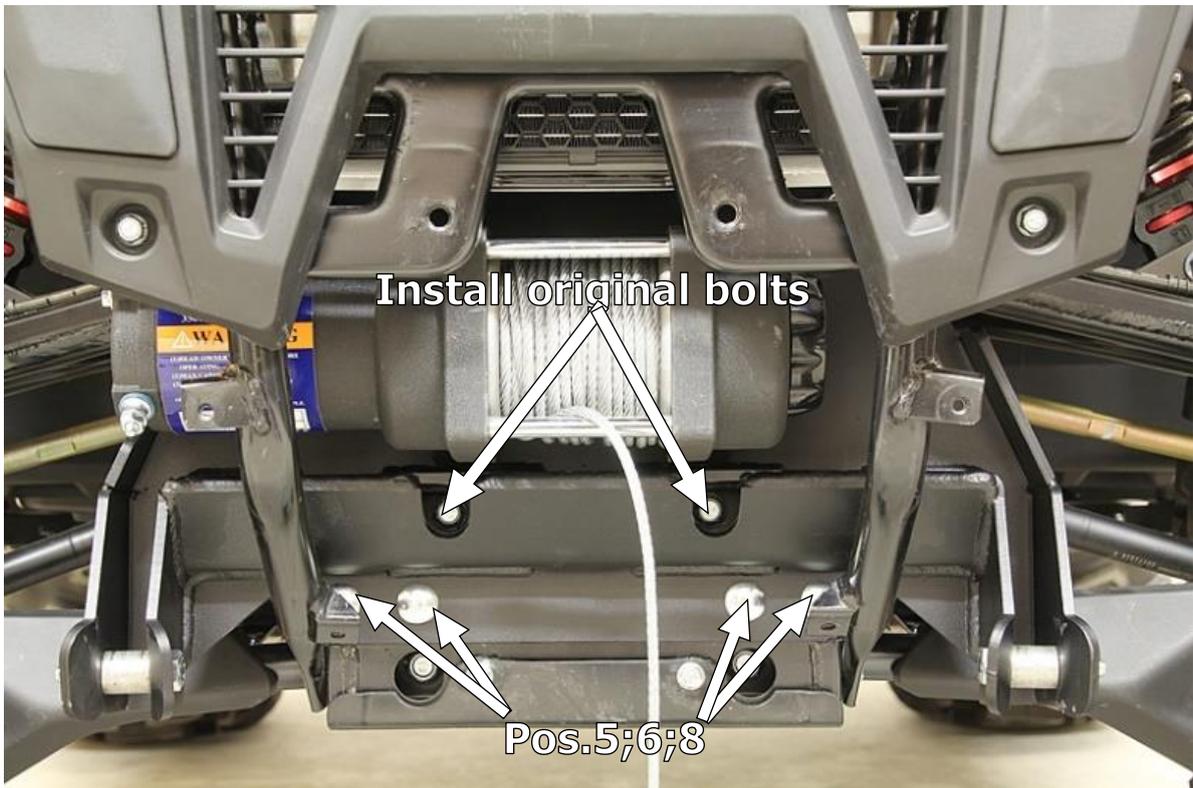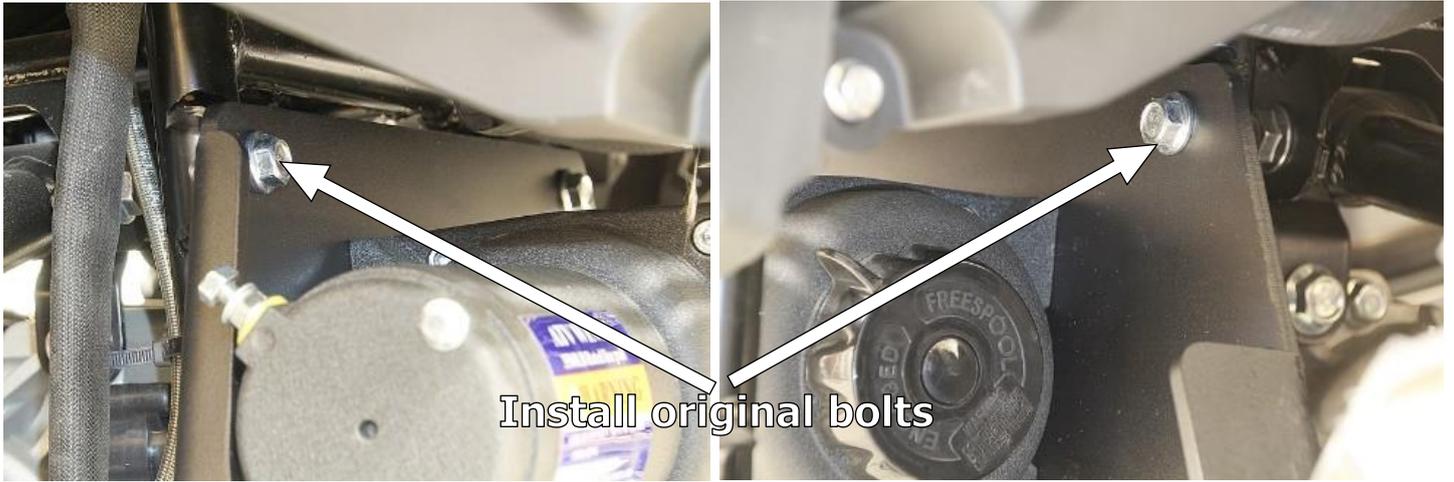


Step 8

Connect winch wires. Install winch fairlead

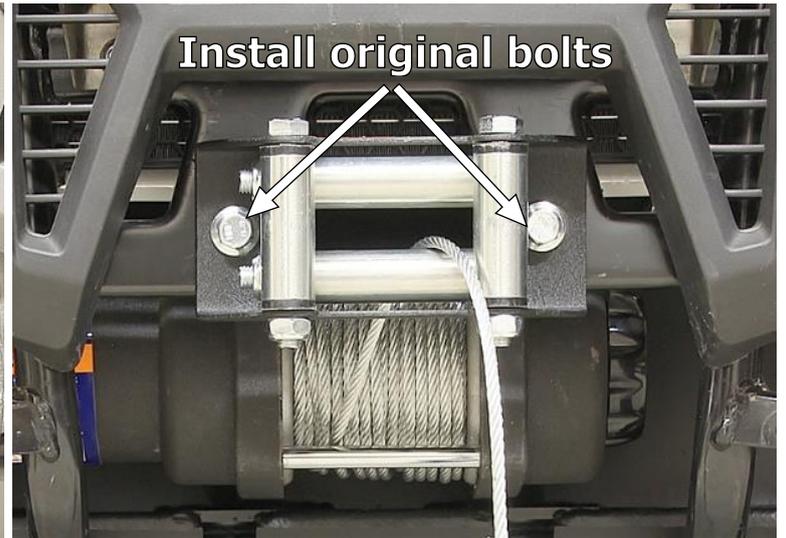

Step 9

Install front protection.

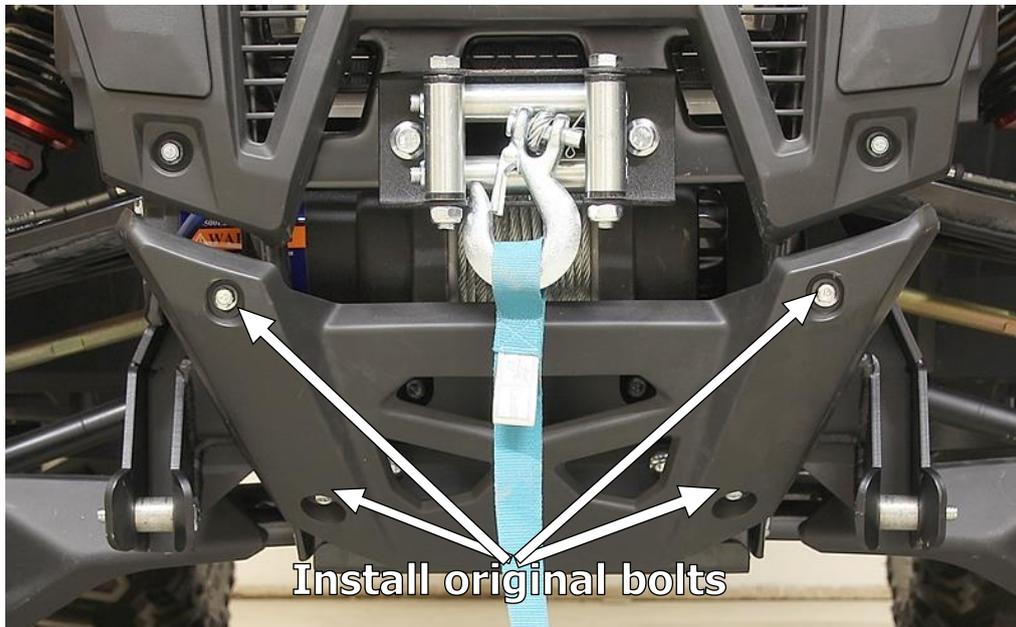

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

