

IRON BALTIC

FRONT MOUNT ADAPTER

YAMAHA

Kodiak 450 (2017-...)

Code 03.8800

Version 10112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/ihf7rze3

SPECIFICATION

Pos.	Description	Code	Amount
1	Snow plow adapter	03.8801K	1
2	Fairlead holder	03.8804	1
3	Bush	03.5906	2
4	Pipe clamp M8x28	OT.05.01.010	2
5	Carriage bolt M8x60 DIN603	OT.02.05.080	2
6	Bolt M5x12 DIN933	OT.02.02.006	2
7	Bolt M8x12 DIN933	OT.02.02.168	2
8	Bolt M10x50 DIN931	OT.02.01.042	2
9	Washer 5/10 DIN125	OT.04.01.010	2
10	Washer M8/20 SFS3738	OT.04.03.030	8
11	Washer 10/20 DIN125	OT.04.01.040	4
12	Nut M8 Nyloc DIN985	OT.03.02.040	6
13	Nut M10 Nyloc DIN985	OT.03.02.050	2

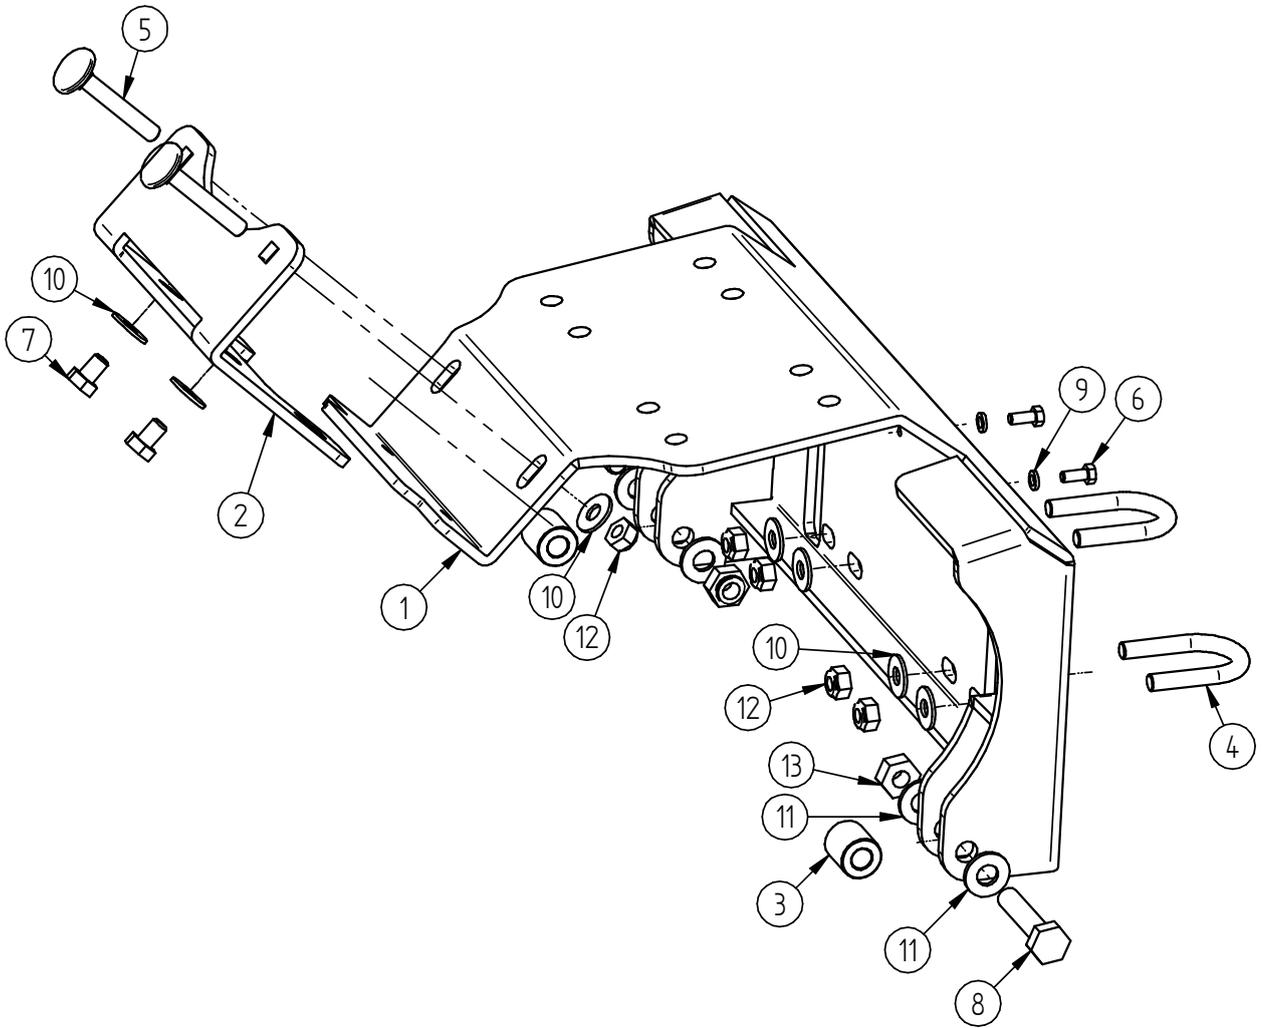

FITTING INSTRUCTIONS

Step 1

Remove front bumper




Step 2

Install bushes 03.5906 to the adapter.





Step 3

Install winch to the adapter, choose appropriate holes. Make sure that the freespool knob will be more towards inside, compared to the upper part of winch adapter. Winch line must run under the winch! (near adapter)

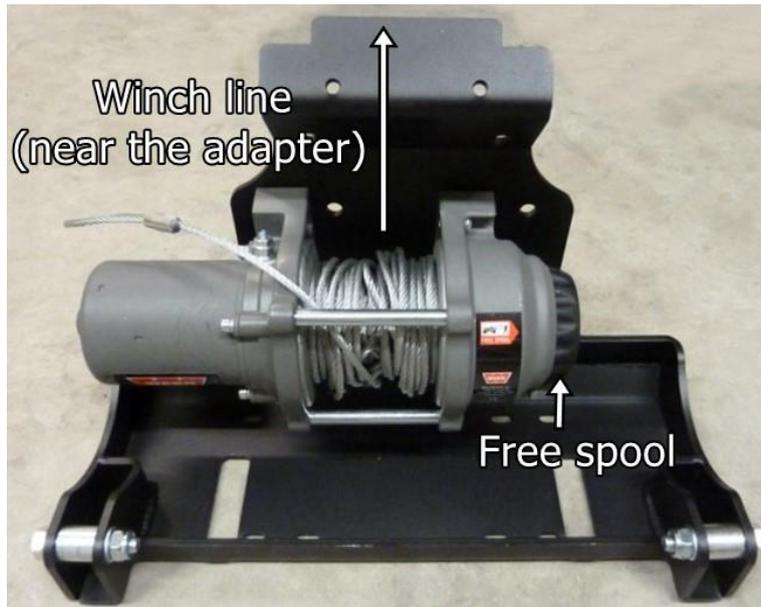


Step 4

Place the winch with adapter to ATV. If using Warn winch, install the winchrelay to the adapter. Place the pipeclamps in place. You might need to lift the adapter to place the pipeclamps. Do not tighten nuts!

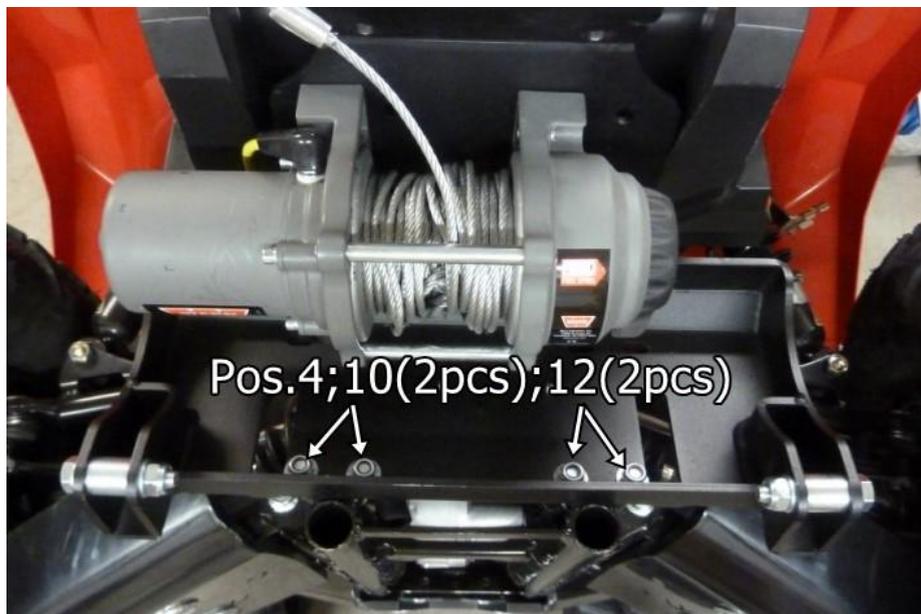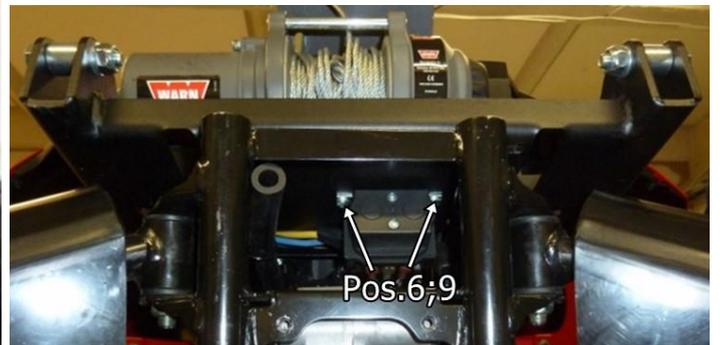


Step 5


Re-install front bumper. Do not forget to install the horn!

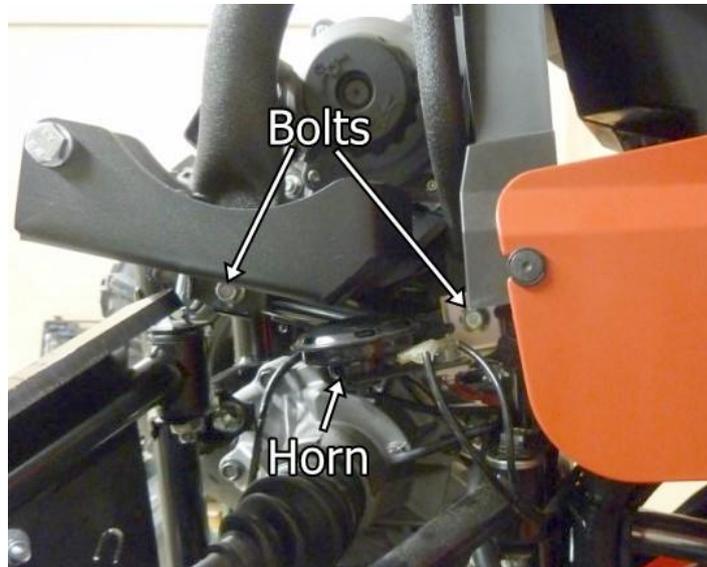

Step 6


Install fairlead holder and AFTER THAT tighten U-bolt nuts! Pos.5 bolts go behind bumper. If needed, push the adapter against bumper, so that the bolts go behind bumper!

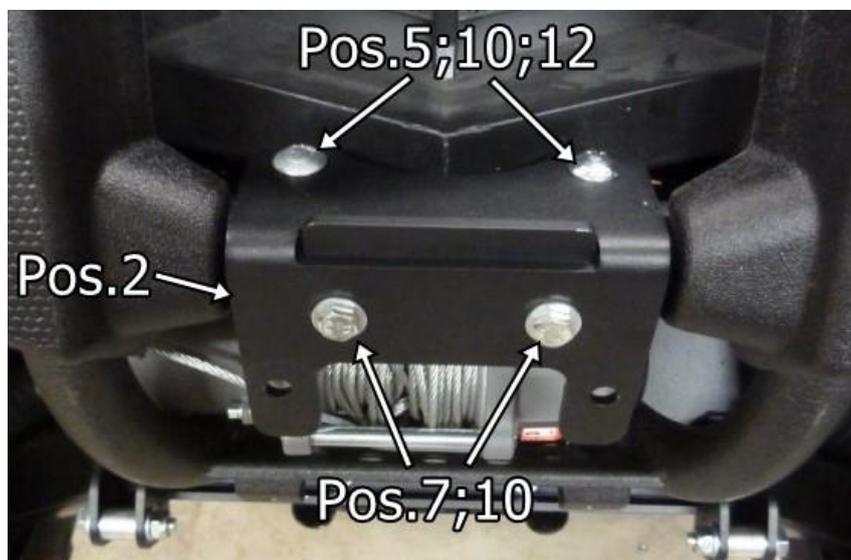

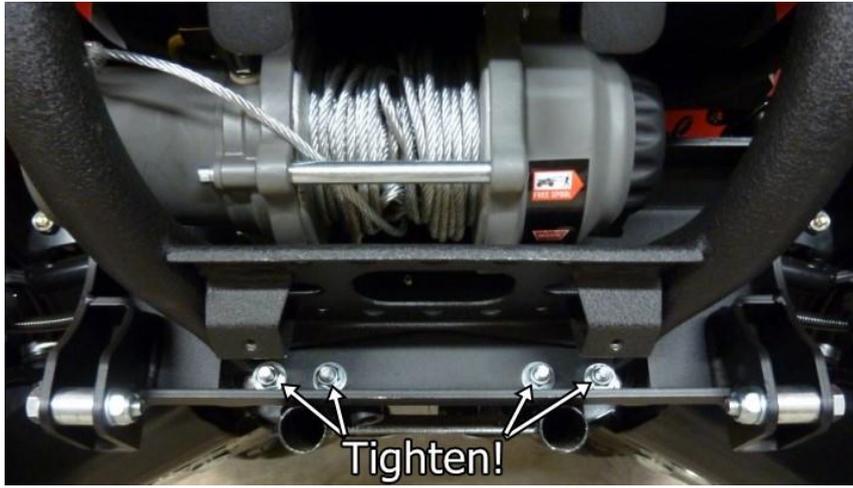

Step 7

Install fairlead.

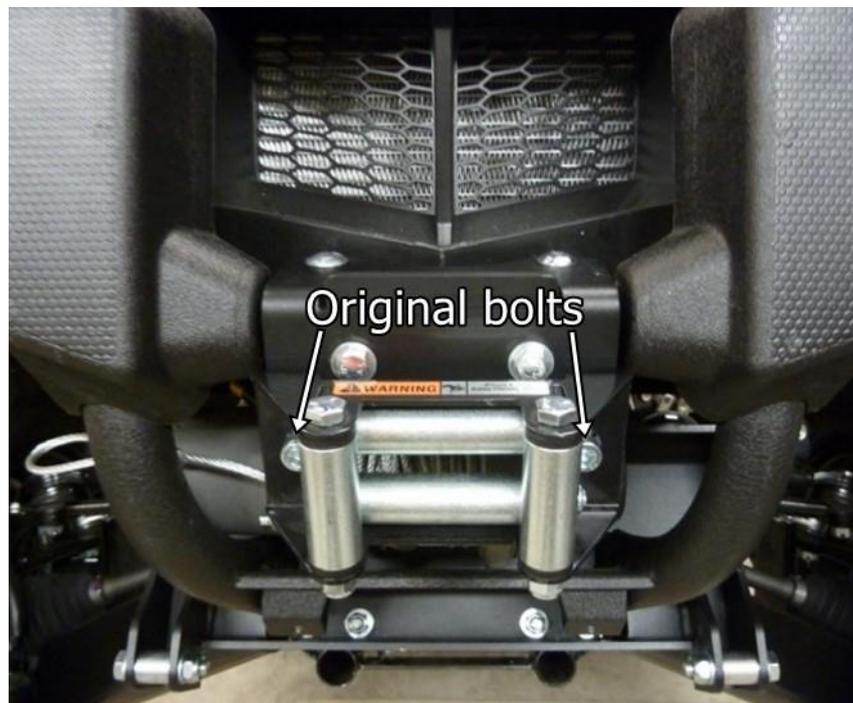

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

