

# IRON BALTIC

## FRONT MOUNT ADAPTER

### KYMCO

### MXU 700

Code 03.9300

Version 10112023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)


DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/duKwBuX5](https://code.ironbaltic.com/u/duKwBuX5)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	03.9301K	1
2	Fixture	03.9303	1
3	Bush	03.5906	2
4	Pipe clamp bracket 32mm	OT.05.04.020	2
5	Bolt M8x60 DIN 603	OT.02.05.080	4
6	Bolt M8x25 DIN 933	OT.02.02.190	4
7	Bolt M8x30 DIN 933	OT.02.02.200	4
8	Bolt M10x50 DIN 931	OT.02.01.042	2
9	Washer 8/20 SFS3738	OT.04.03.030	14
10	Washer 10/20 DIN125	OT.04.01.040	4
11	Nut M8 Nyloc DIN 985	OT.03.02.040	6
12	Nut M10 Nyloc DIN 985	OT.03.02.050	2

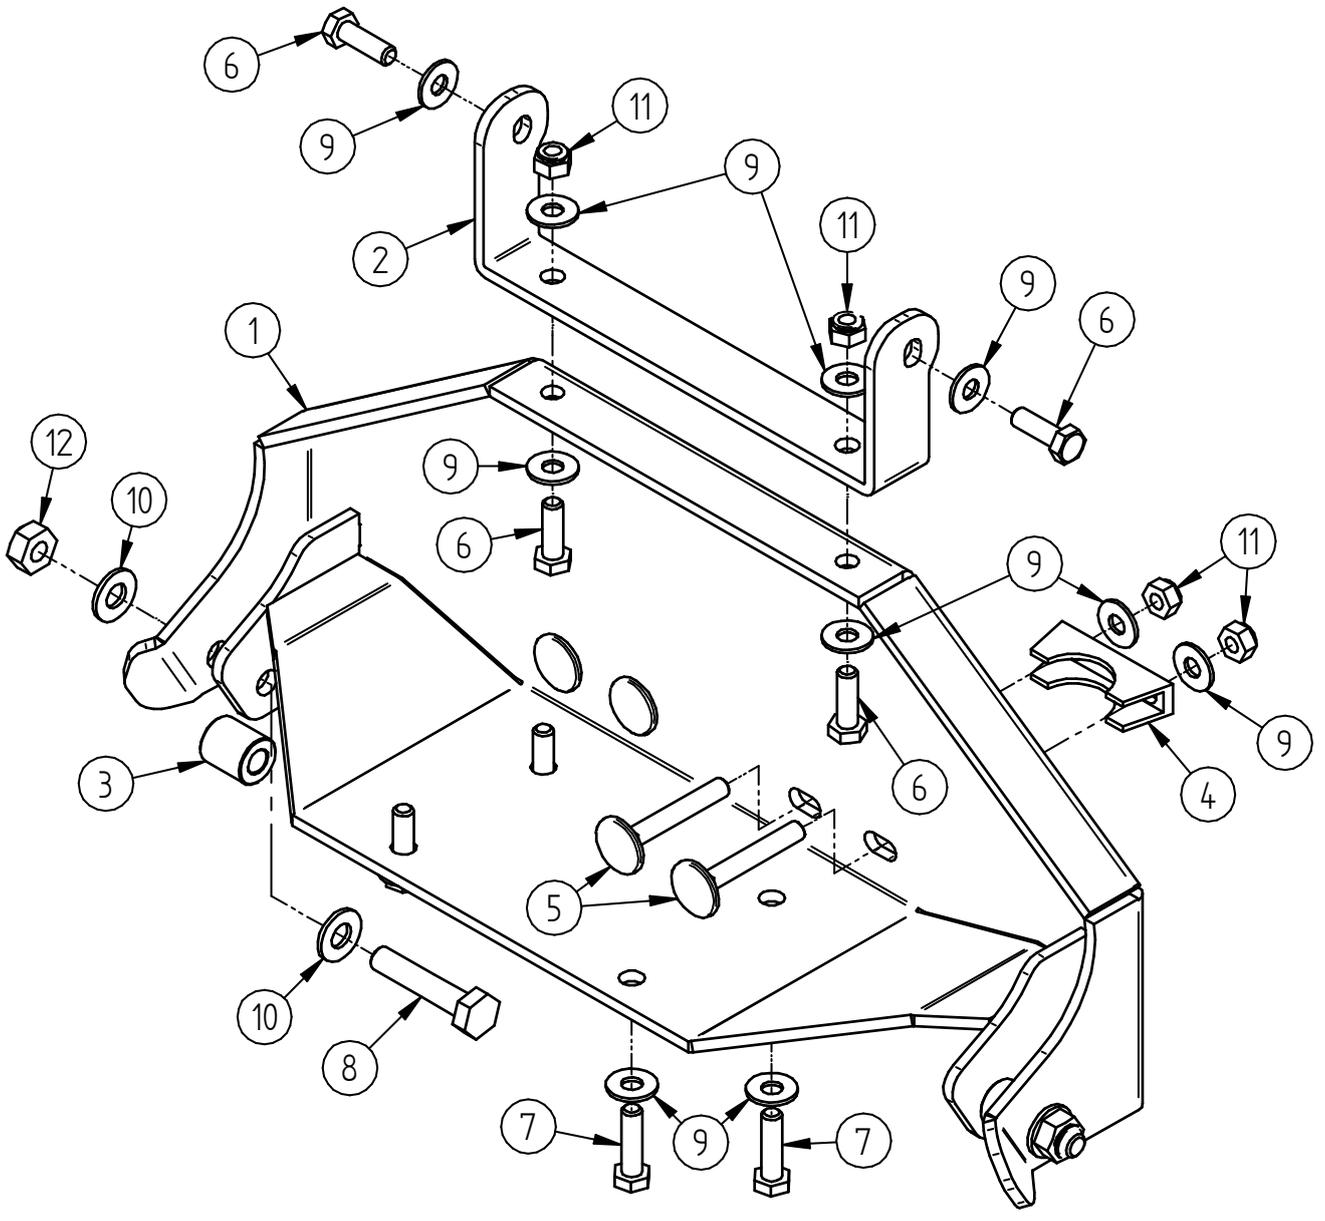

# FITTING INSTRUCTIONS


## Step 1

Release but don't remove front bumper original bolts.



## Step 2

Remove original bolts on both sides and winch.

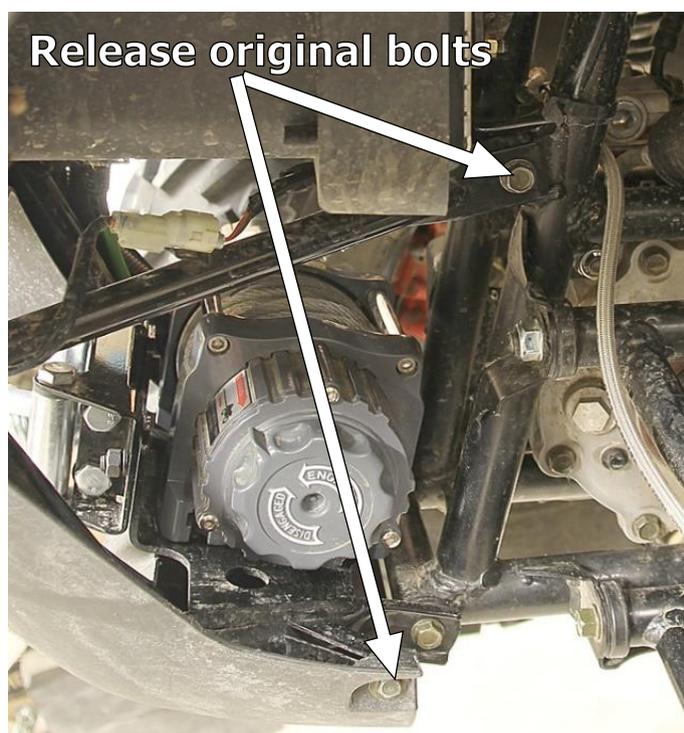


## Step 3

Install bushes 03.5906 to the adapter.



### Step 4

Install plow adapter and fixture. Do not tighten nuts ja bolts!

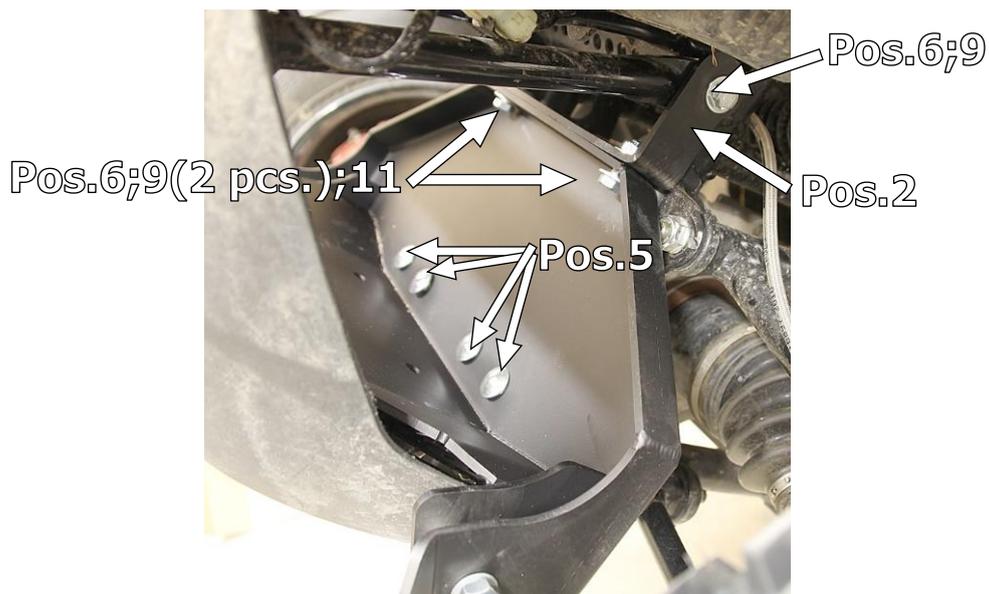


### Step 5

Install the winch with new bolts.



### Step 6

Install the pipe clamp bracket. Tighten all nuts and bolts.

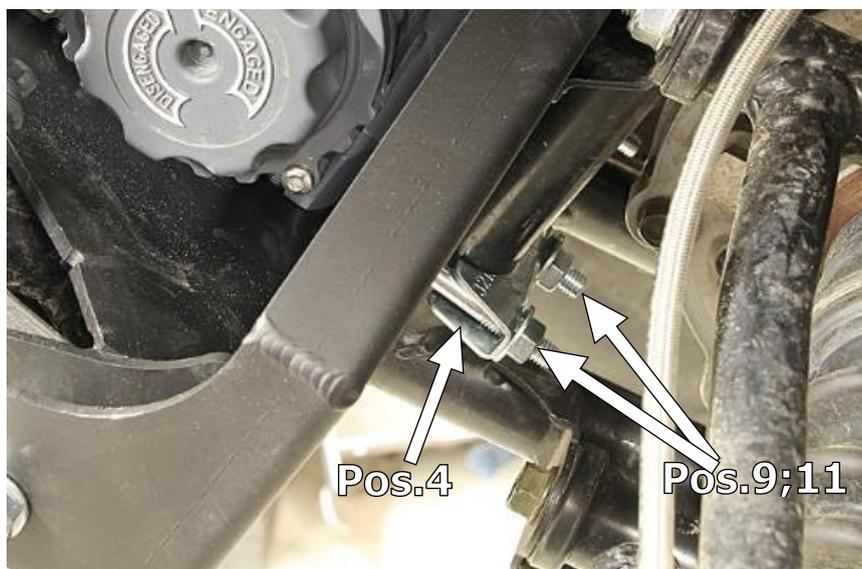

### Step 7

Reinstall and tighten plastic cover original bolts.





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

