

FRONT MOUNT ADAPTER

POLARIS

Ranger 1000 (2018-...)

Code 03.9800

Version 11112023



DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/Z4puCxqo

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


SPECIFICATION

| Pos. | Description | Code | Amount |
|------|----------------------|--------------|--------|
| 1 | Adapter | 03.9801K | 1 |
| 2 | Bush | 03.10605 | 2 |
| 3 | Bush | 02.707 | 2 |
| 4 | Bolt M8x35 DIN933 | OT.02.02.210 | 2 |
| 5 | Bolt M10x40 DIN933 | OT.02.02.330 | 2 |
| 6 | Bolt M10x55 DIN933 | OT.02.02.342 | 2 |
| 7 | Washer ø8/20 SFS3738 | OT.04.01.030 | 4 |
| 8 | Washer M10 DIN125 | OT.04.01.040 | 8 |
| 9 | Nylock nut M8 DIN985 | OT.03.02.040 | 2 |
| 10 | Nylock nut M10DIN985 | OT.03.02.050 | 4 |

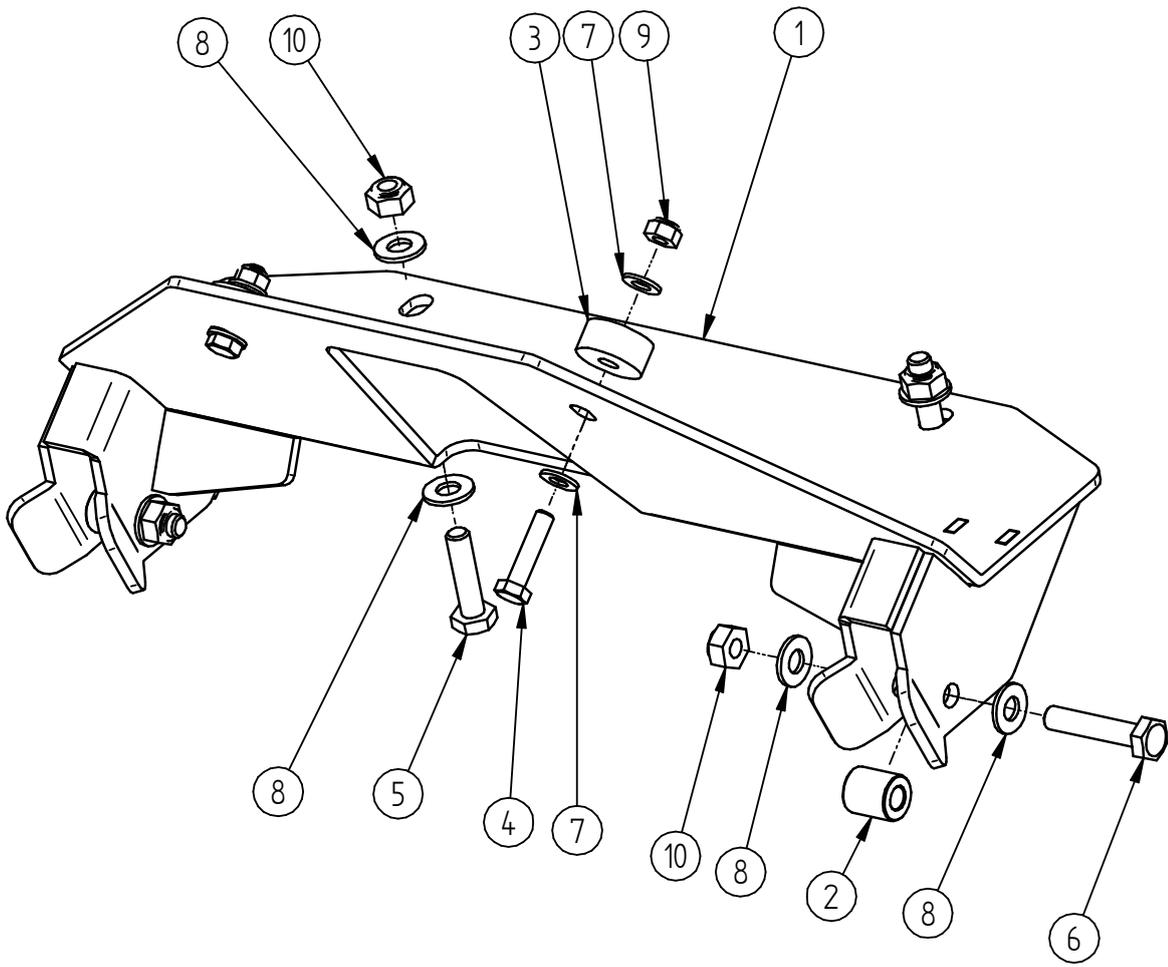


FITTING INSTRUCTIONS

Step 1 Remove front bumper original bolts.

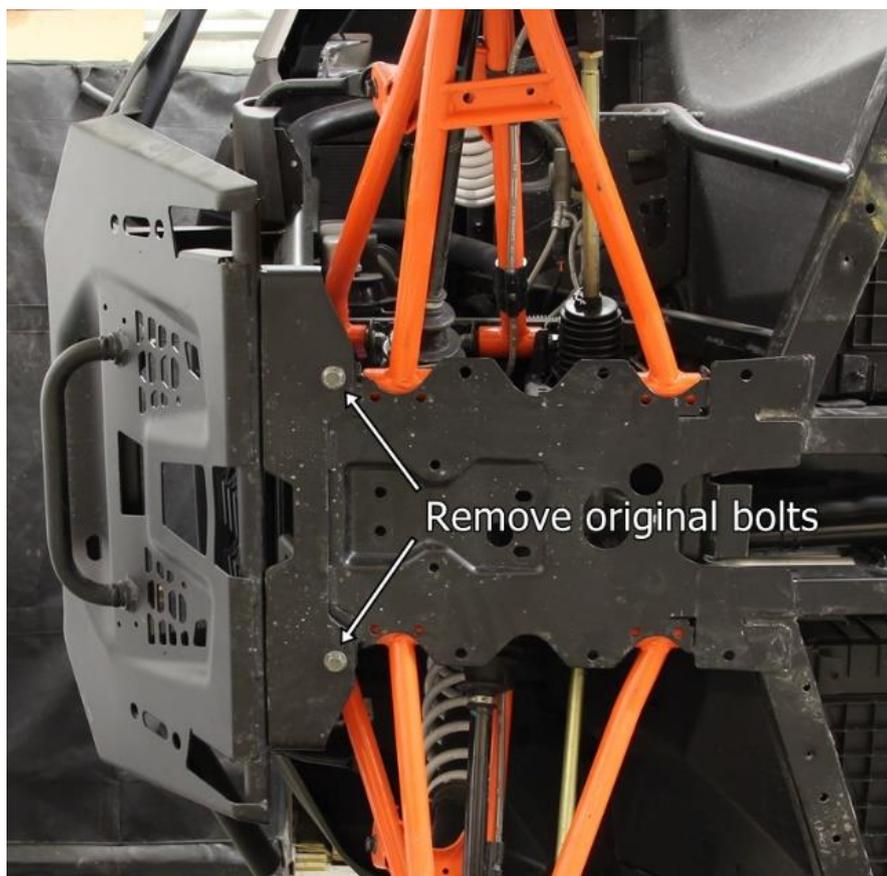


Step 2 Install bushes 03.10605 to the adapter.

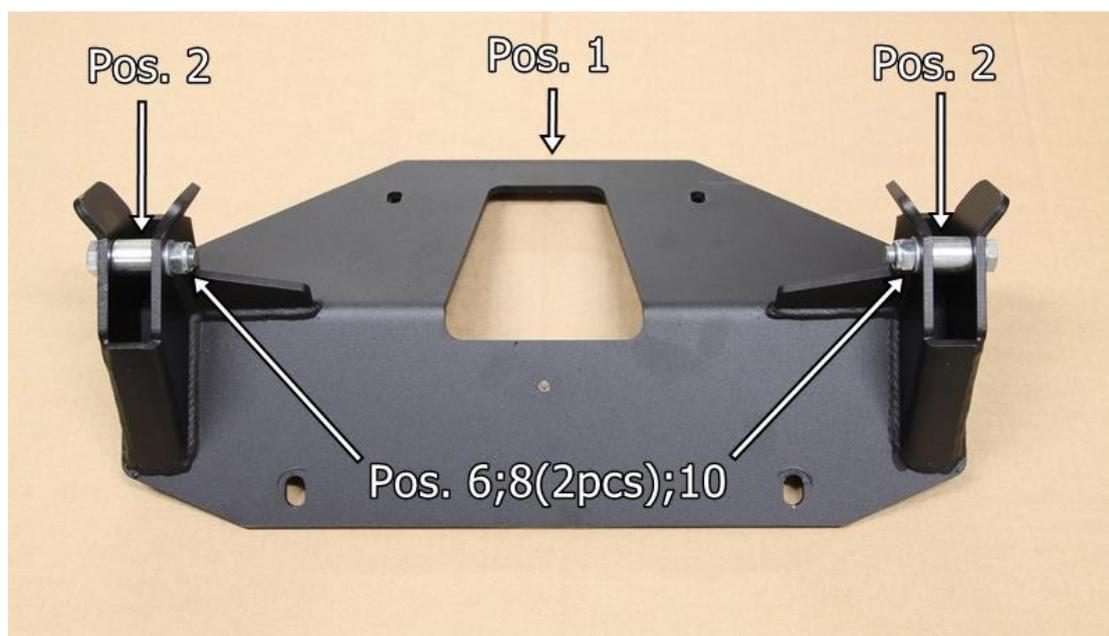

Step 3

Install adapter. Between adapter and front bumper use bushes 02.707.

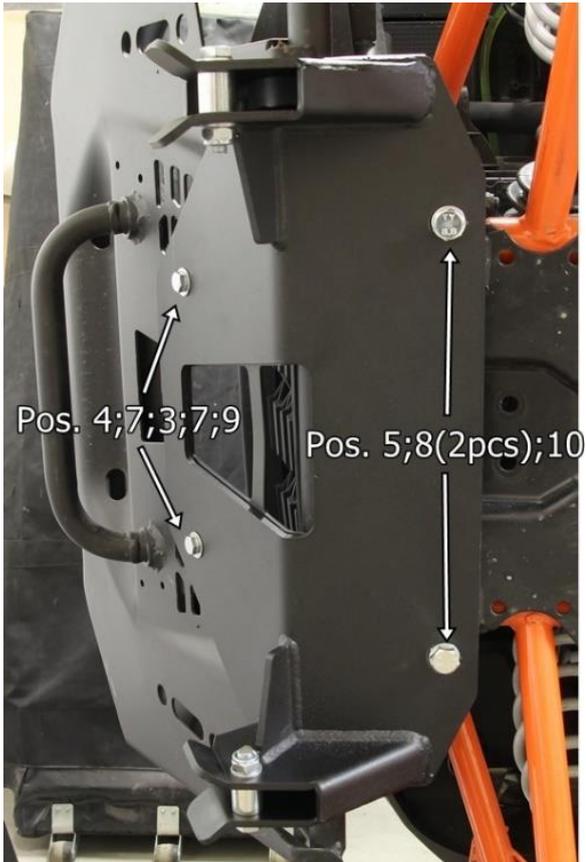

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

