


REAR WINCH MOUNT

SEGWAY

Snarler

Code 05.10200

Version 22112023

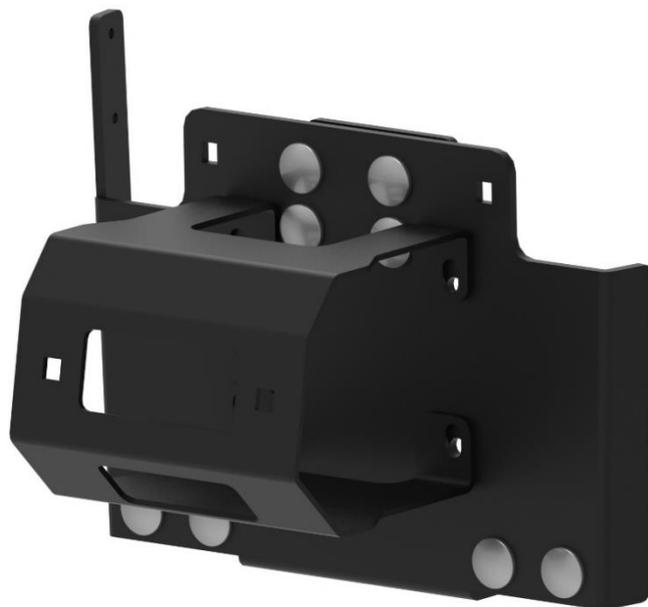

DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/uCxkUoyQ

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Winch adapter	05.10201	1
2	Installation plate (large)	05.10202	2
3	Installation bracket	05.10203	1
4	Installation plate (small)	03.4003	2
5	Fairlead holder	05.1202	1
6	Carriage bolt M8x20 DIN603	OT.02.05.050	4
7	Carriage bolt M8x50 DIN603	OT.02.05.075	8
8	Washer Ø8/20 SFS3738	OT.04.03.030	8
9	Nyloc nut M8 DIN985	OT.03.02.040	8



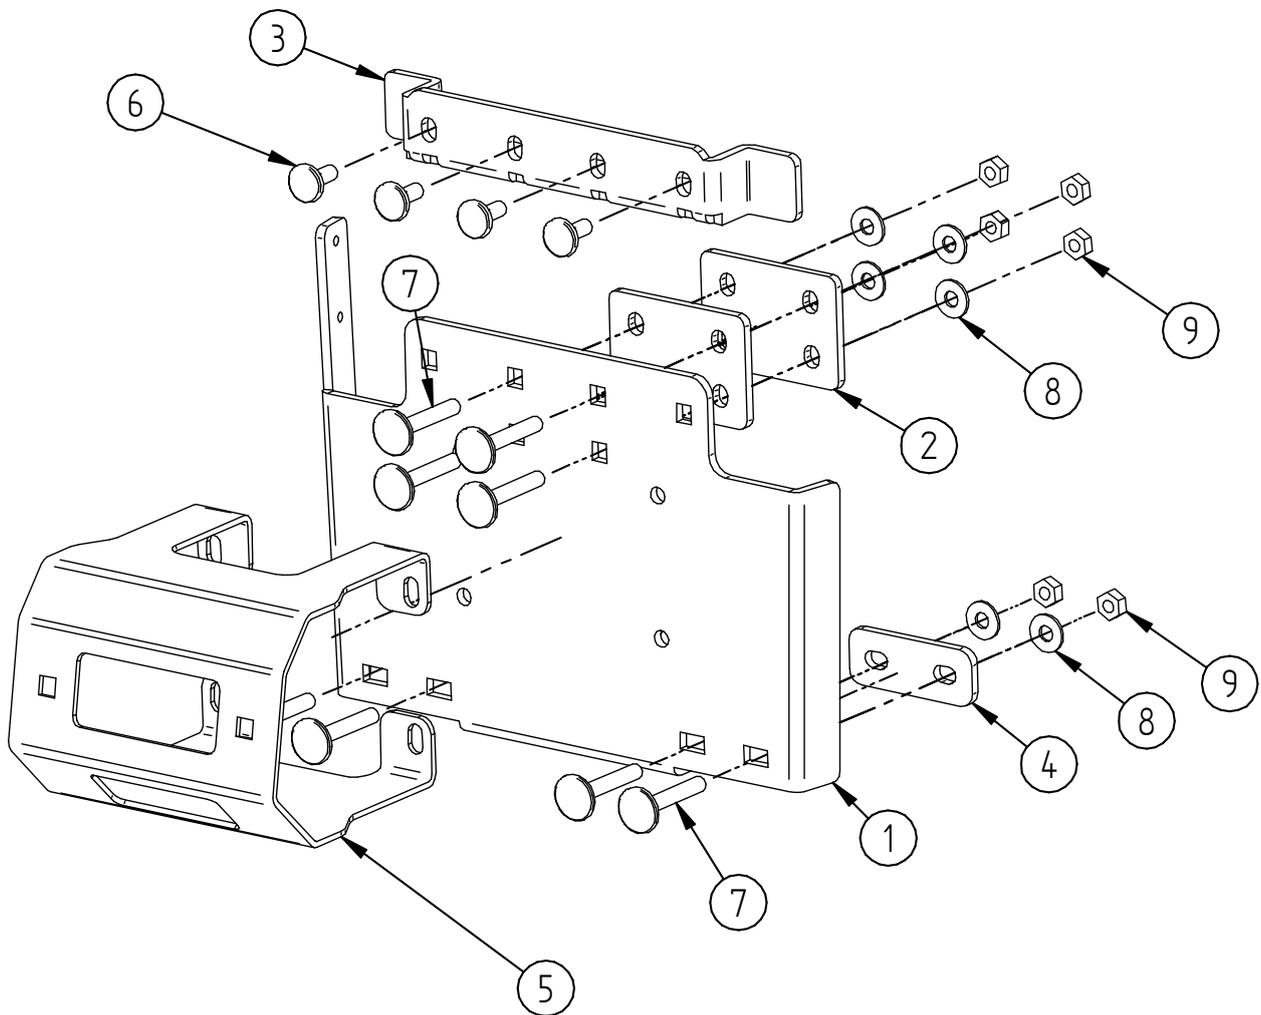


FITTING INSTRUCTIONS



Step 1 Remove trailer plug socket..



Step 2 Install adapter plate (Pos.1) to ATV. Place one large installation plate (Pos.2) between adapter plate and ATV frame!
If there is no tube to mount upper part of the adapter, use bracket (Pos.3) for installation.

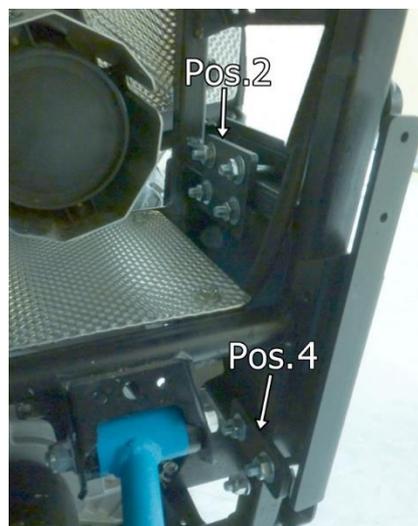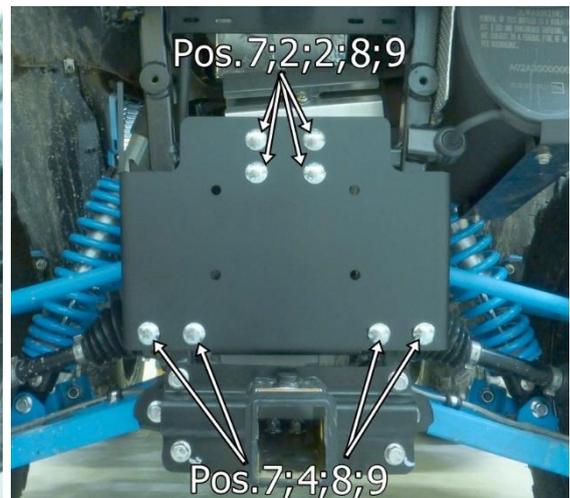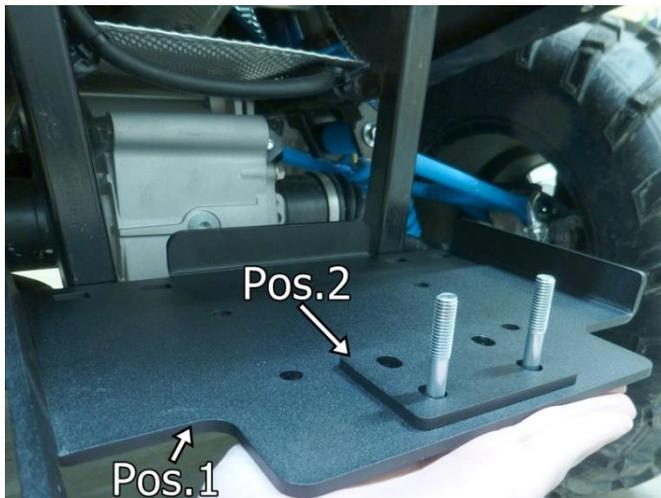

Installation with bracket:

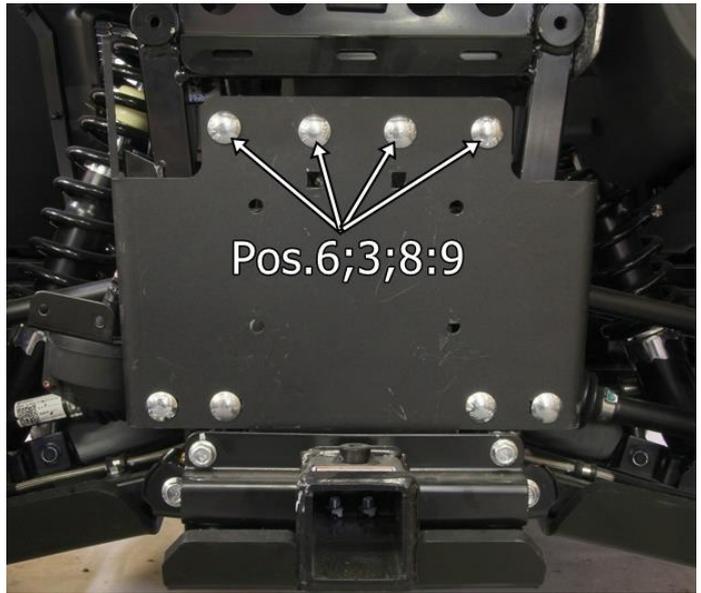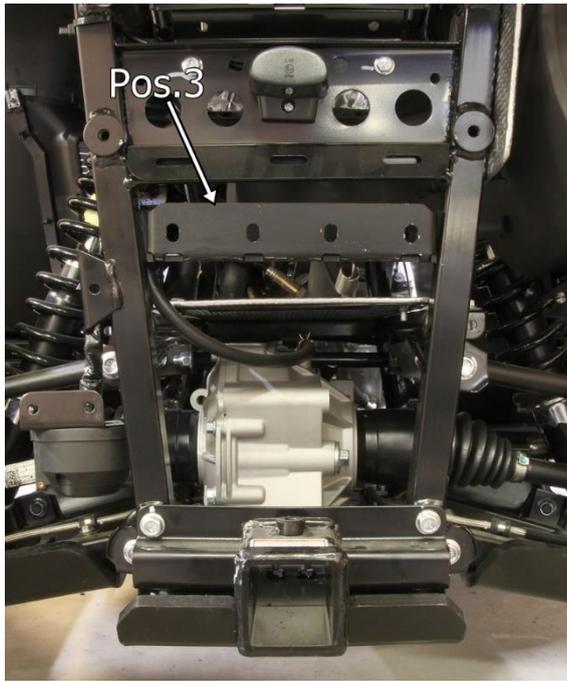

Step 3

Install fairlead to fairlead holder. Place the winch between fairlead holder and install winch to adapter. Use bolts and nuts supplied with the winch. Install trailer plug socket to adapter, use original bolts.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

