

REAR WINCH MOUNT

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/MjTXeyZB

AODES

Pathcross 650 / 850 / 1000 (2021-...)

Code 05.10400

Version 26112023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Adapter	05.10401	1
2	Fairlead holder	05.1202	1
3	Bolt M8x25 DIN933	OT.02.02.190	4
4	Washer Ø8/20 SFS3738	OT.04.03.030	8
5	Nyloc nut M8 DIN985	OT.03.02.040	4

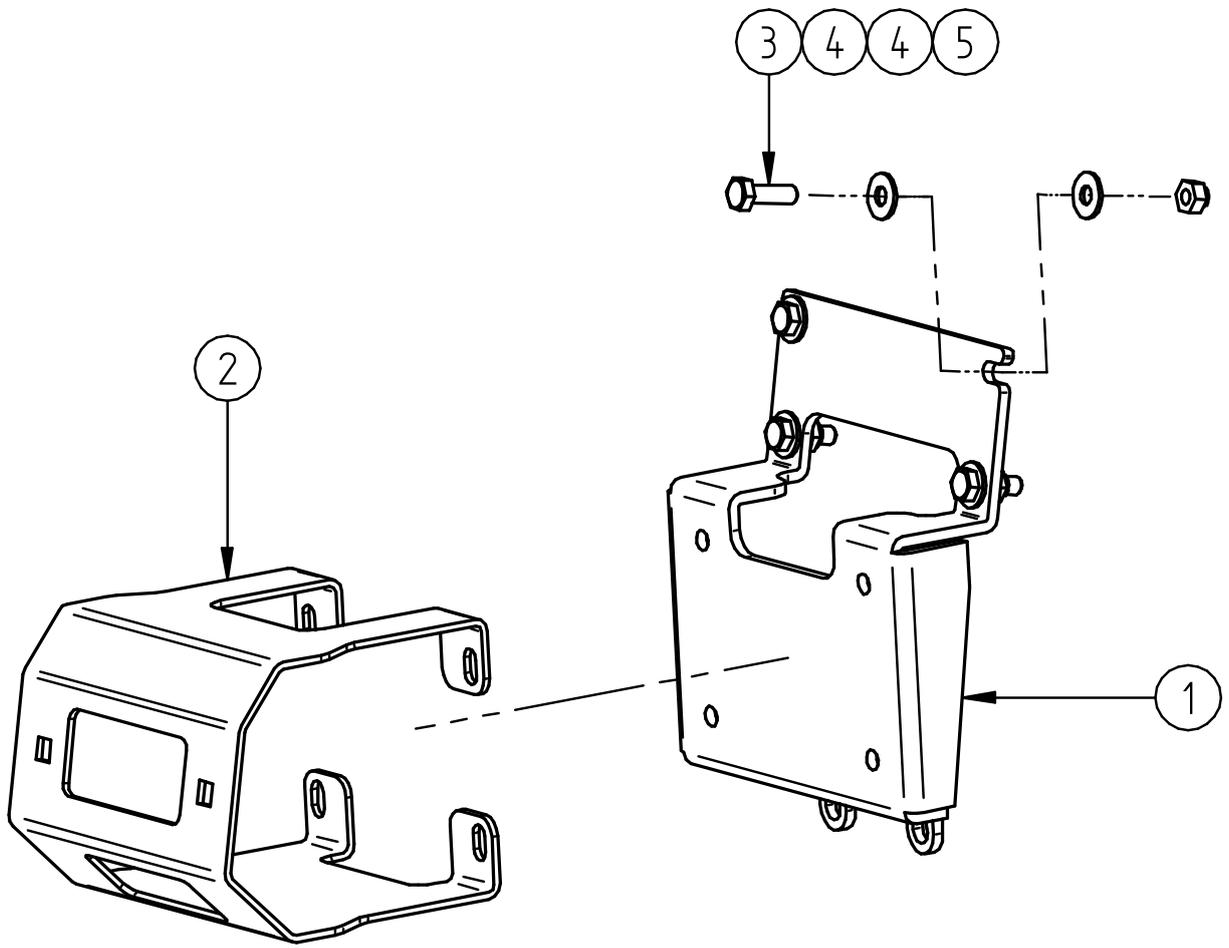

FITTING INSTRUCTIONS


Step 1

Install fairlead to fairlead holder 05.1202 and then install fairlead holder with winch to adapter 05.10401. For fastening use bolts supplied with winch.

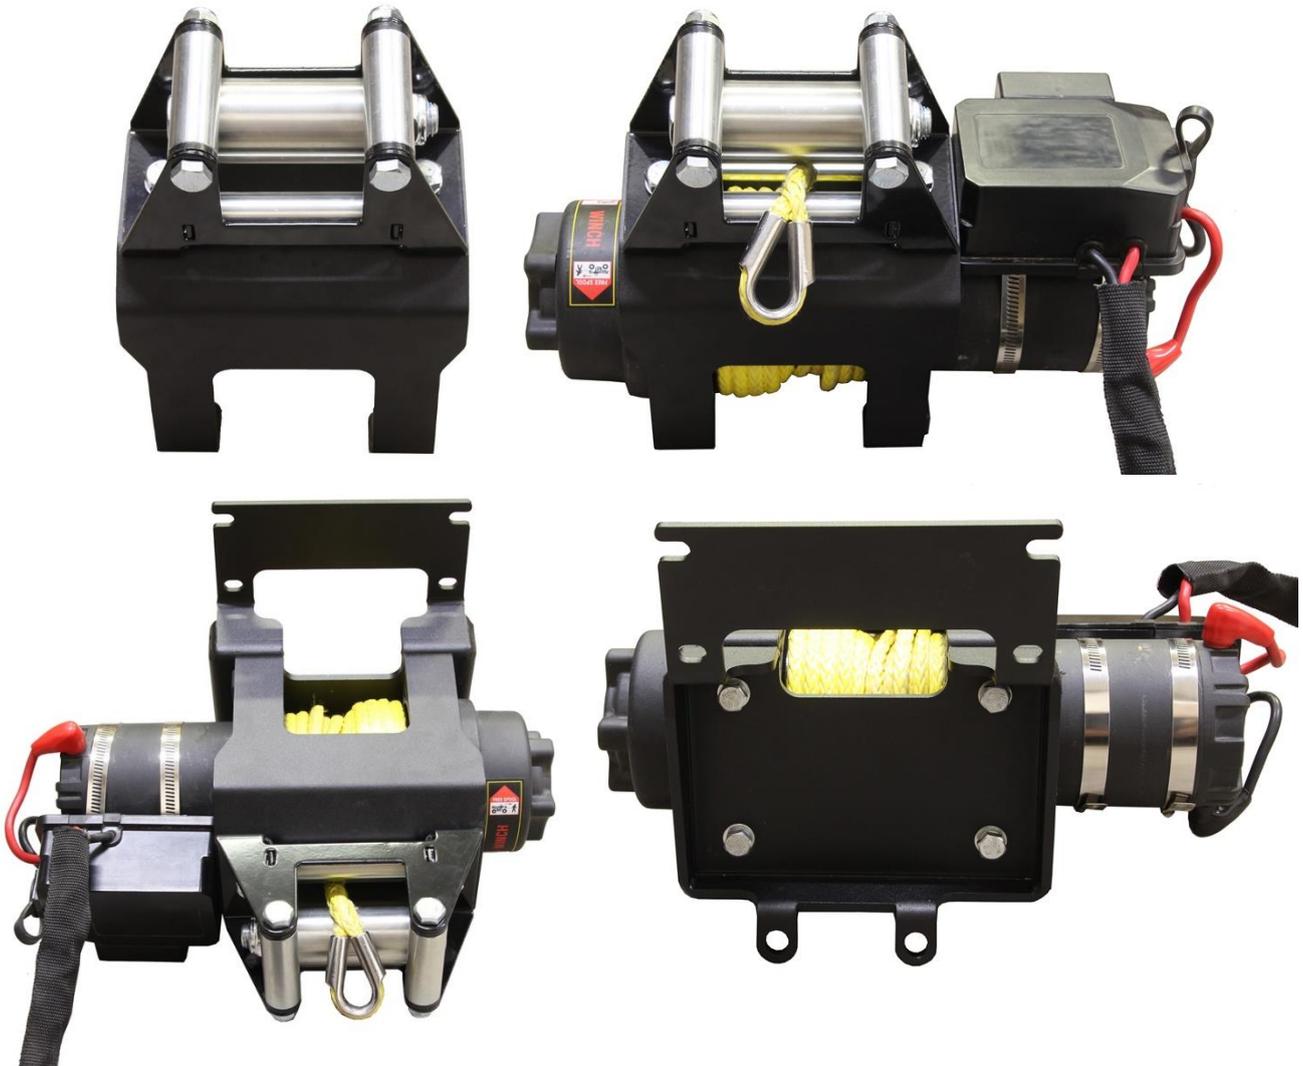


Step 2

Remove bolts / nuts from ATV as shown in the picture.

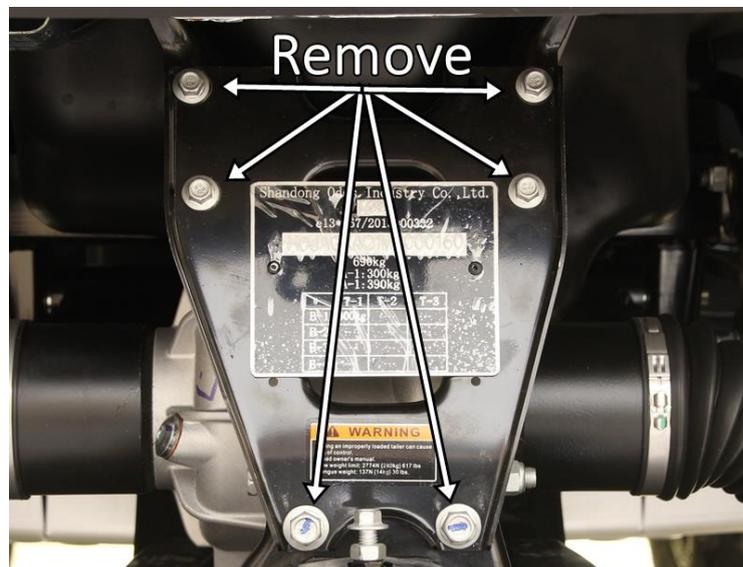

Step 3

Install winch adapter. For fastening use M8x25 bolts (Pos.3), Ø8 mm washers (Pos.4), M8 nyloc nuts (Pos.5) and original bolts.

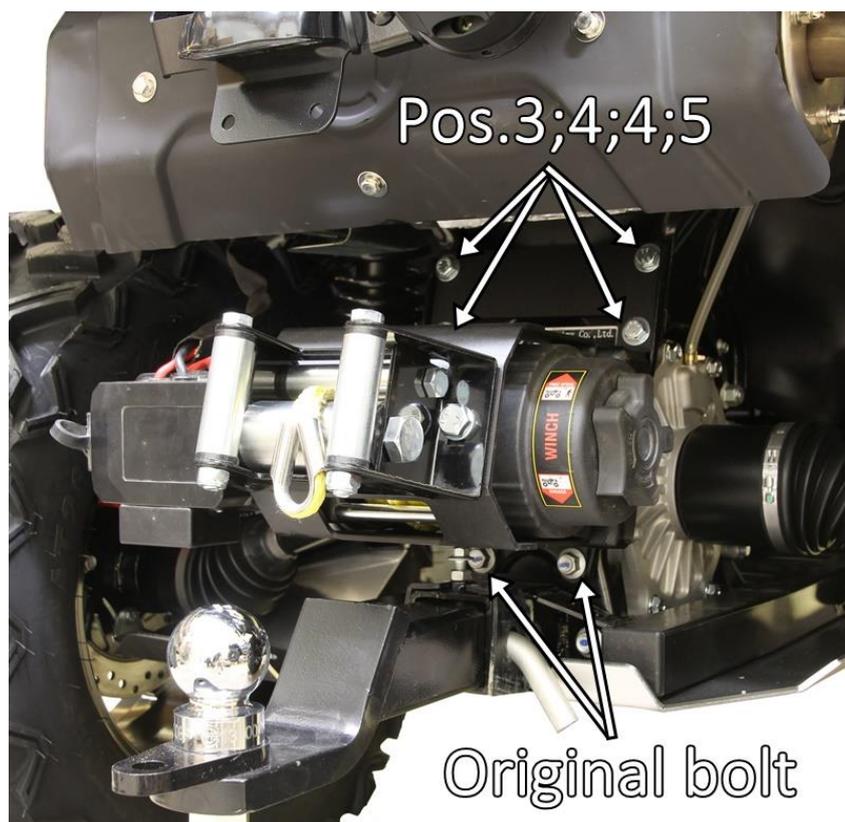

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

