

IRON BALTIC


REAR WINCH MOUNT

CFMOTO

CFORCE 450 / 520 (2022-...)

Code 05.10500

Version 26112023

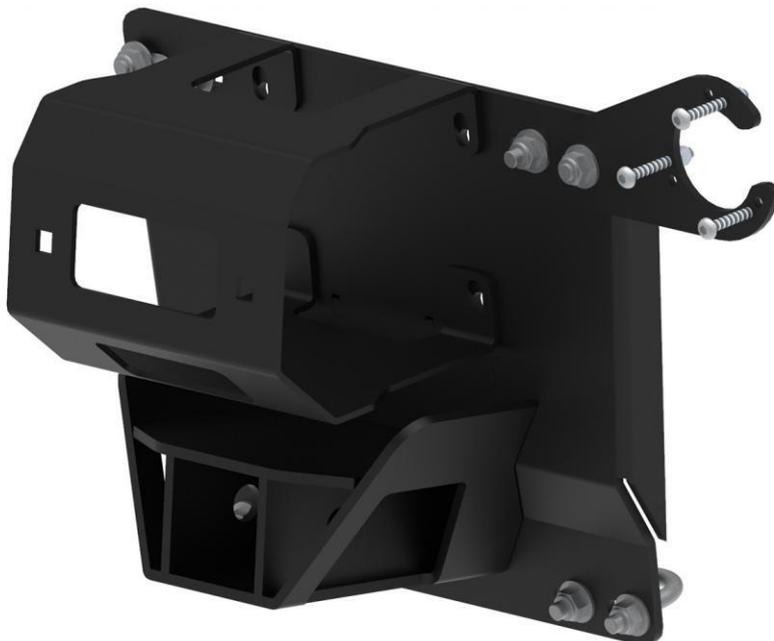

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/We6RxWWJ

SPECIFICATION

Pos.	Description	Code	Amount
1	Winch adapter	05.10501K	1
2	Trailer connector holder	05.9806	1
3	Winch fairlead holder	05.1202	1
4	U-bolt M8x26	OT.05.01.005	4
5	Bolt M5x40 ISO7380	OT.02.03.008	3
6	Washer Ø5 DIN125	OT.04.01.010	3
7	Washer Ø8/20 SFS3738	OT.04.03.030	8
8	Washer Ø10 DIN125	OT.04.01.040	1
9	Nyloc nut M5 DIN985	OT.03.02.020	3
10	Nyloc nut M8 DIN985	OT.03.02.040	8

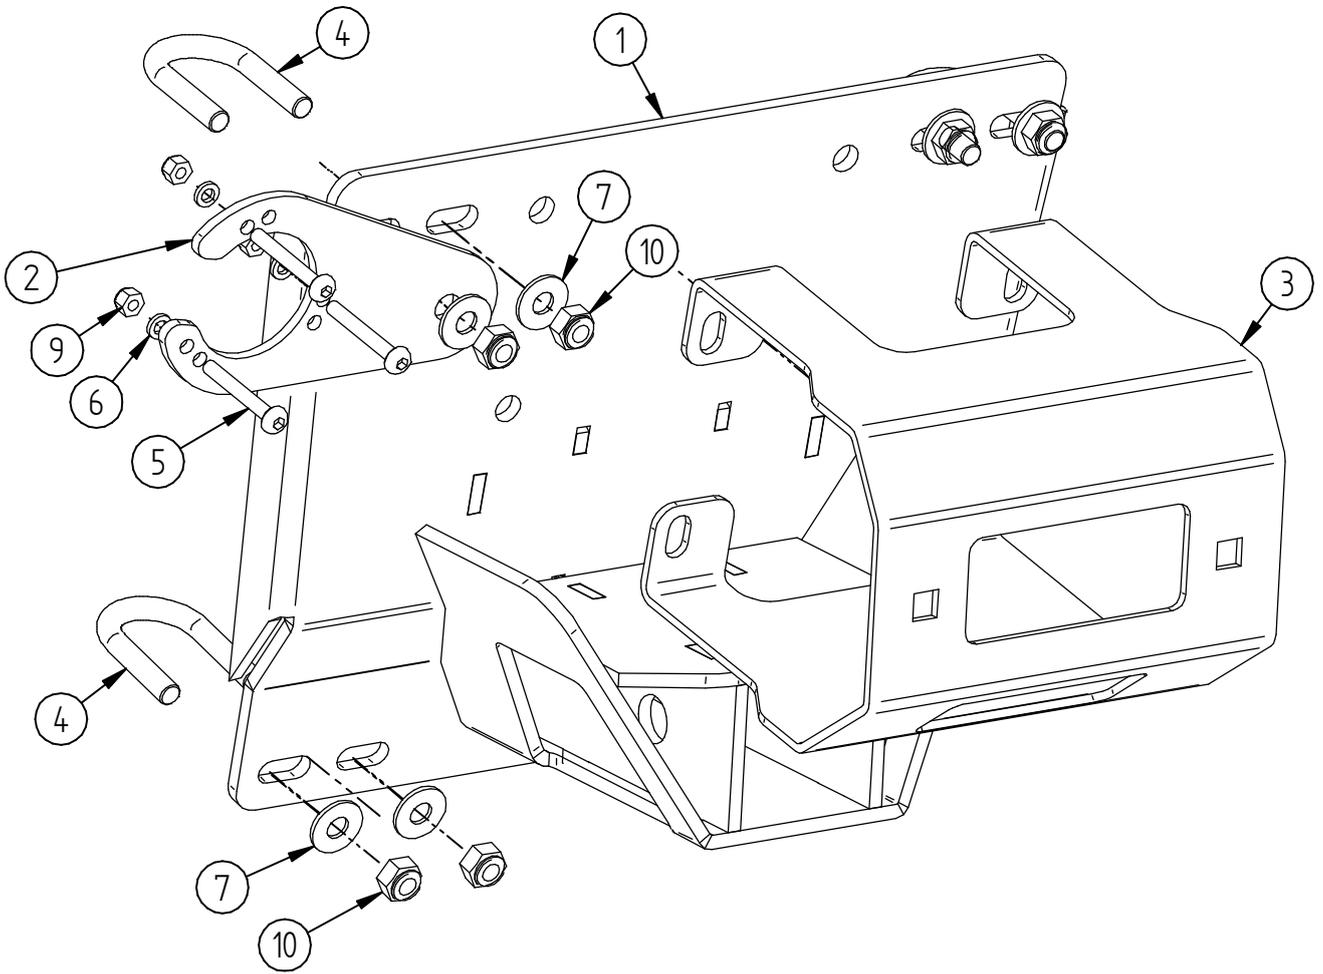

FITTING INSTRUCTIONS


Step 1

Install fairlead to fairlead holder 05.1202 and then install fairlead holder with winch to adapter 05.10501K. Use bolts supplied with winch.




Step 2

Remove original hitch receiver and trailer connector.
Remove original connector holder plate.

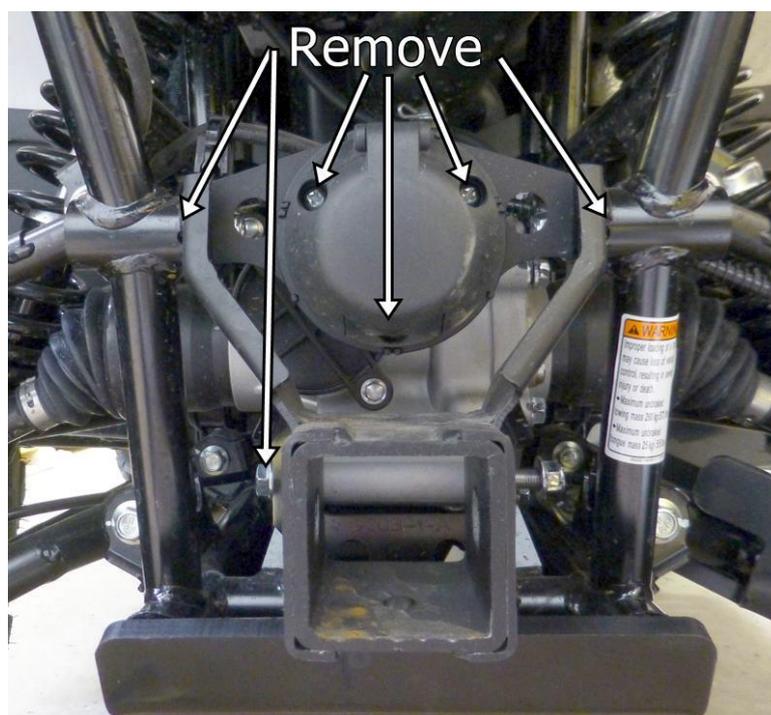


Step 3

Reinstall rear differential bottom bolt, use Ø10 washer under original nut.

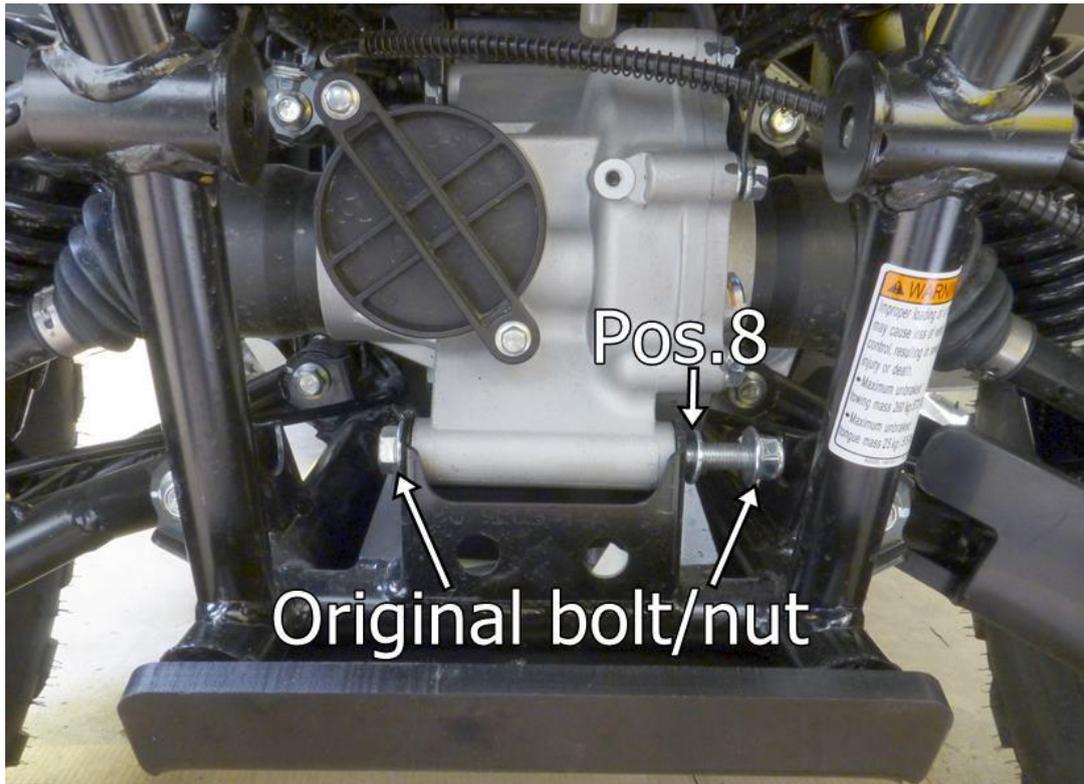


Step 4

Place the adapter against the ATV and install original bolts and nuts through the fixing points behind the adapter. Do not tighten bolts!

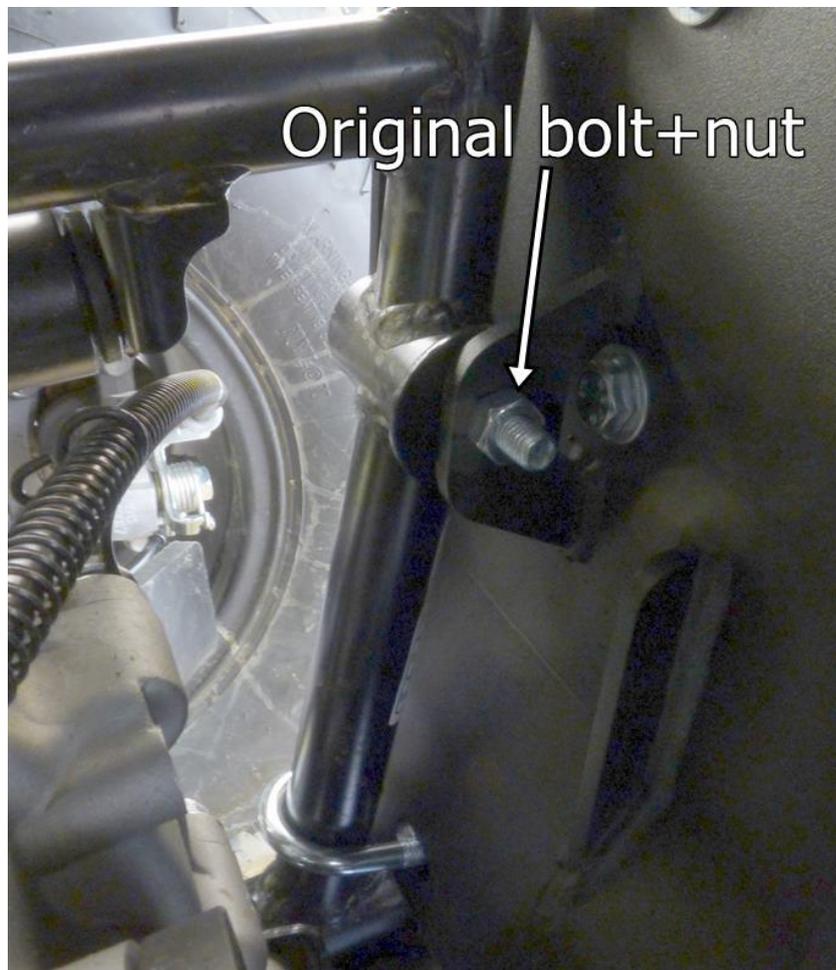

Step 5

Install trailer connector to holder (Pos.2). After that install the winch adapter and trailer connector plate (Pos.2) to the ATV. Tighten bolts, installed in previous step, lastly.

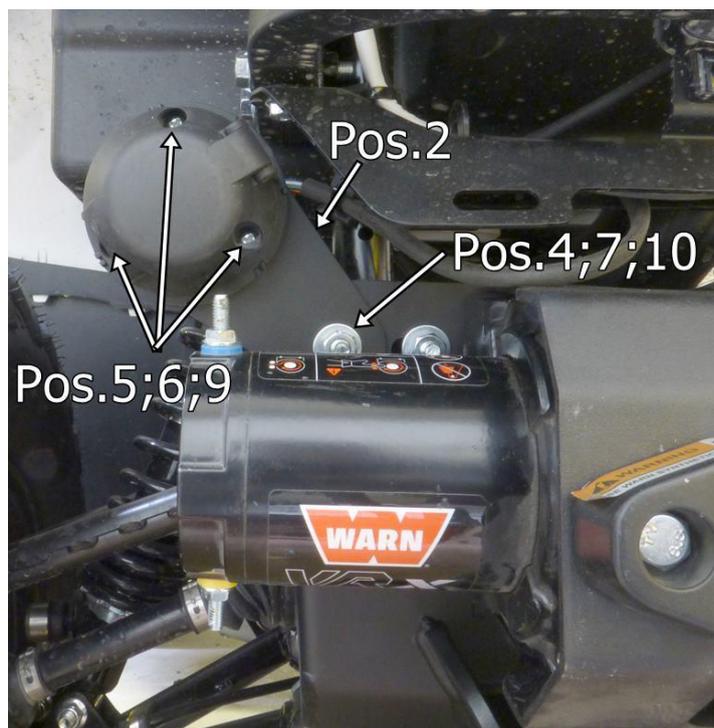

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

