

# IRON BALTIC

## REAR WINCH MOUNT + 2" RECEIVER HITCH

### LONCIN XWOLF 700 / 700L GOES XWOLF 700 / 700 MAX

Code 05.10700

Version 26112023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)


DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/0v0bcSAJ](http://code.ironbaltic.com/u/0v0bcSAJ)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	05.10701K	1
2	Fairlead holder	05.1202	1
3	Pipe clamp bracket 32mm	OT.05.04.020	2
4	Bolt M8x35 DIN933	OT.02.02.210	4
5	Bolt M8x55 DIN933	OT.02.02.241	4
6	Washer Ø8/20 SFS3738	OT.04.03.030	12
7	Nyloc nut M8 DIN985	OT.03.02.040	4

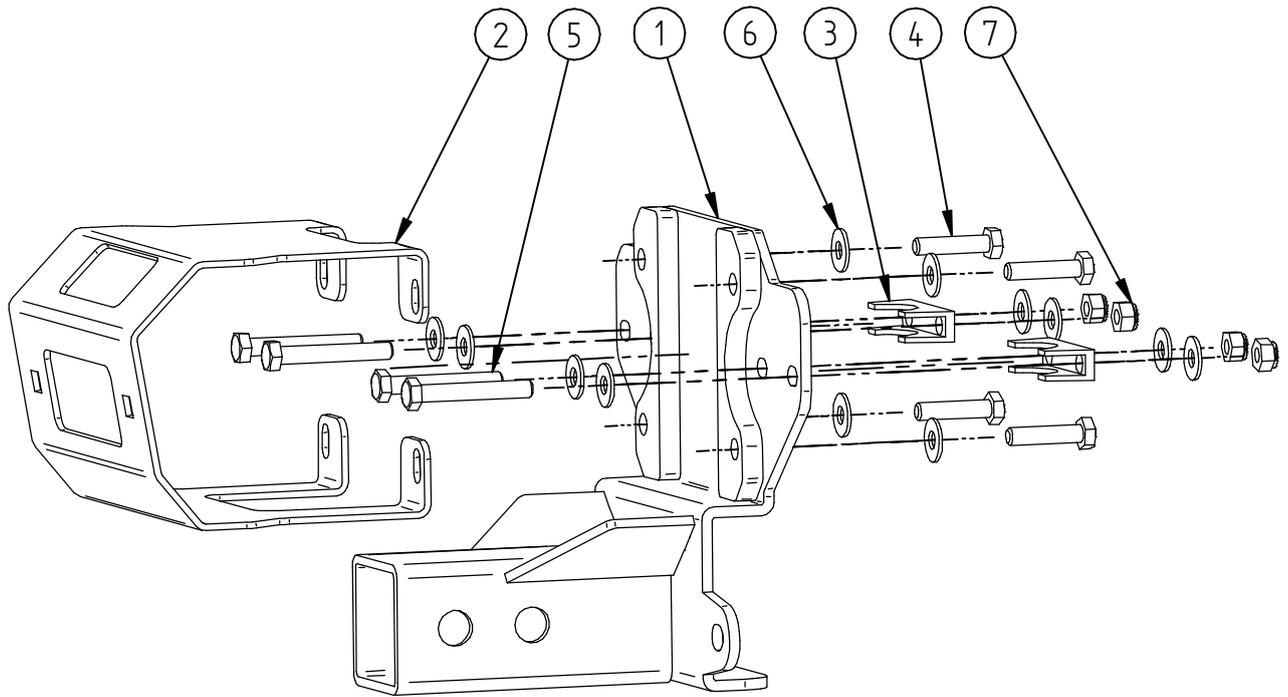

# FITTING INSTRUCTIONS


## Step 1

Remove original hitch holder and license plate holder by removing bolts shown in the picture.





## Step 2

Install fairlead to the fairlead holder 05.1202 using fasteners from winch kit. Next place winch into the fairlead holder.

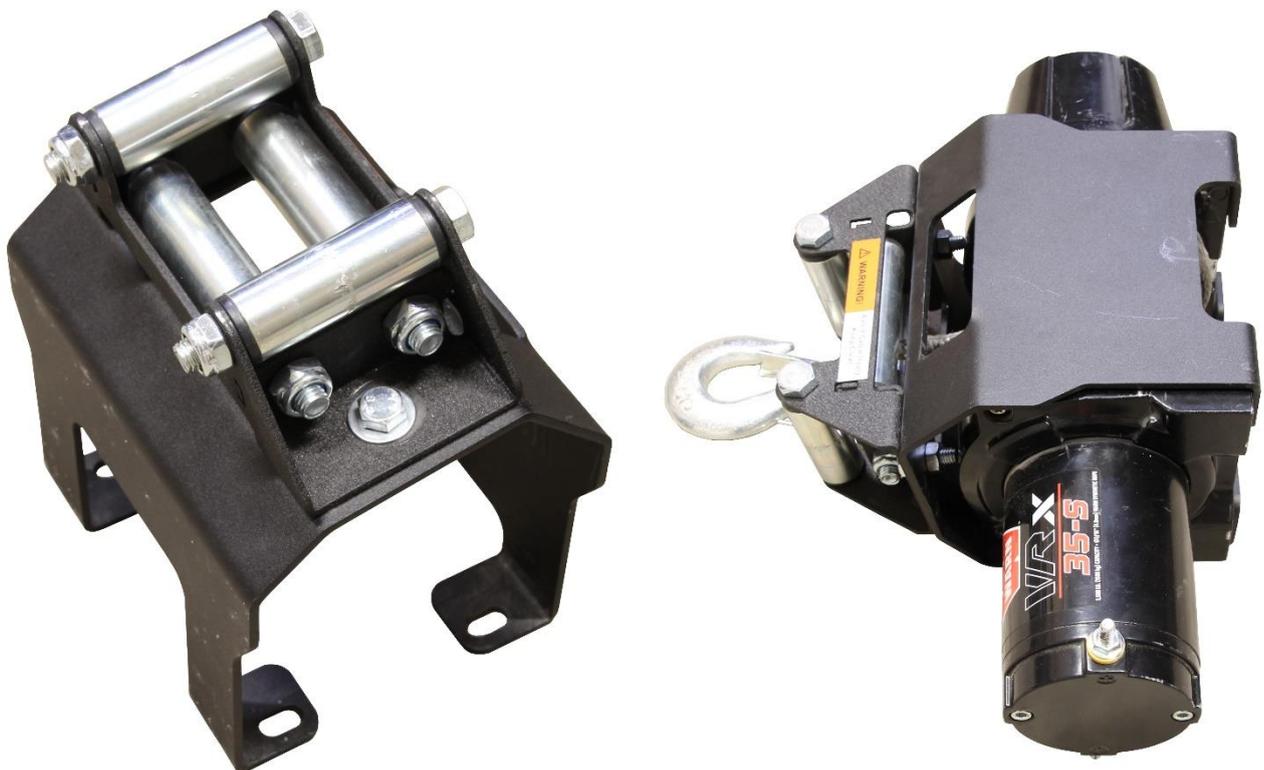



### Step 3

Install the M8x55 bolts (Pos. 5) with M8 washers (Pos. 6) to the adapter. Next install winch together with the fairlead holder to the adapter. For fastening use M8x35 bolts (Pos. 4) and M8 washers (Pos.6).

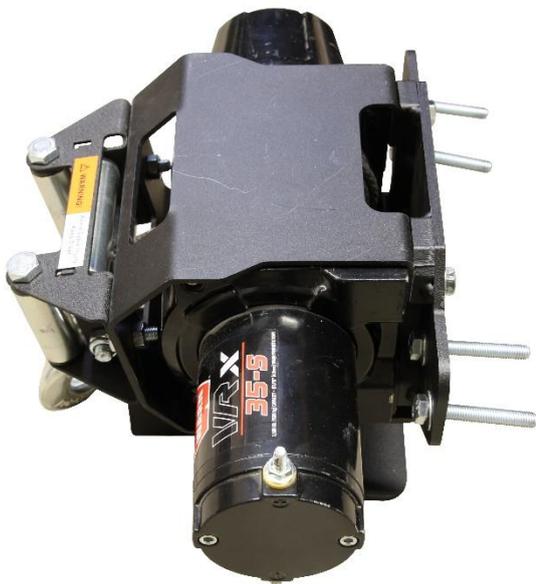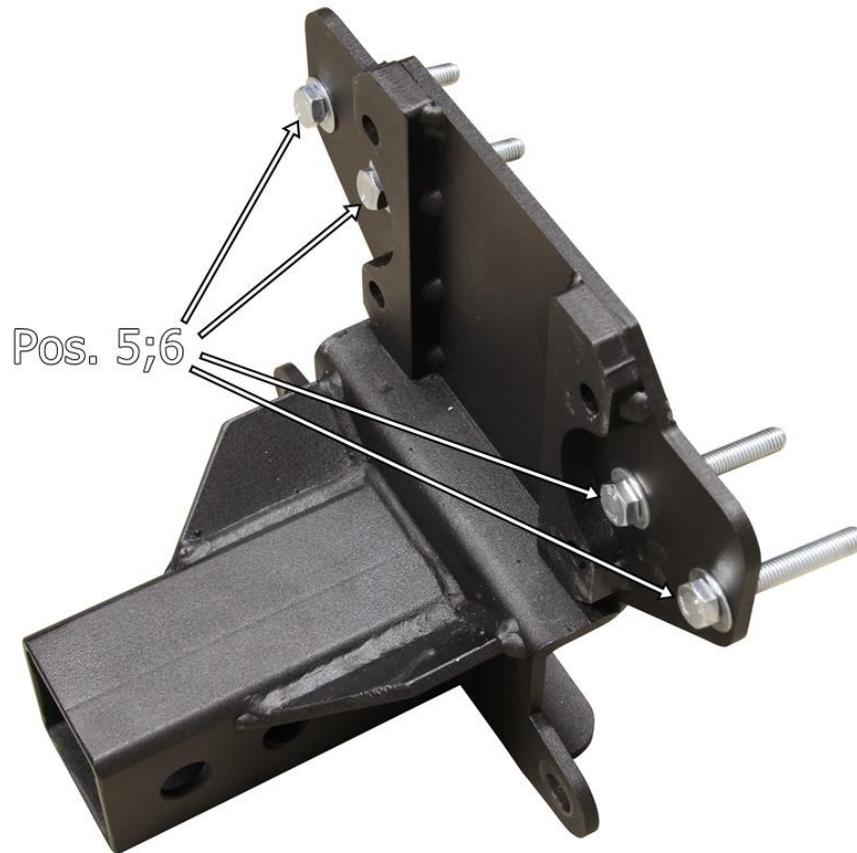

## Step 4

Install rear winch mount to the ATV. For fastening use original bolts, 32 mm pipe clamp brackets (Pos.3), M8 washers (Pos.6) and M8 nyloc nuts (Pos.7).

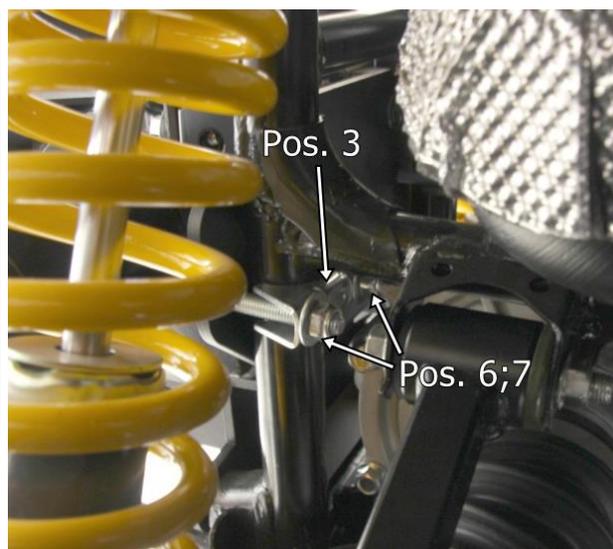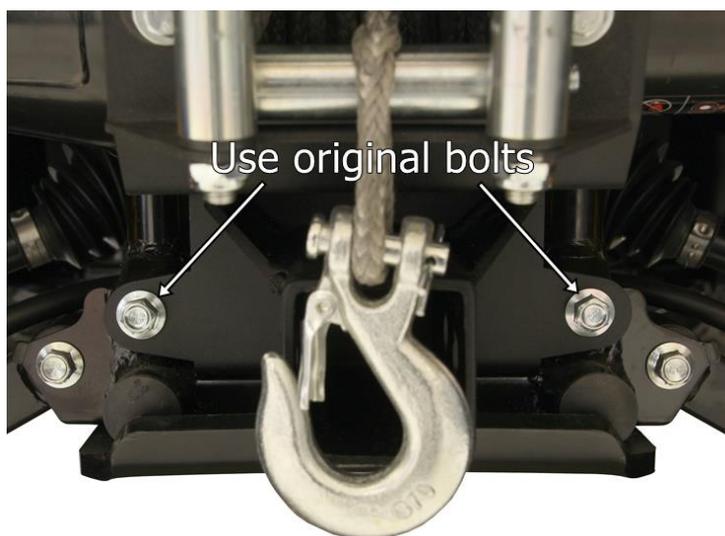



# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

