

IRON BALTIC

REAR WINCH MOUNT

SEGWAY

Snarler AT5

Code 05.11300

Version 02012024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



<https://code.ironbaltic.com/u/fX87jpct>

SPECIFICATION

Pos.	Description	Code	Amount
1	Winch adapter	05.11301K	1
2	Bracket	05.11302	1
3	Fairlead holder	05.1202	1
4	Trailer connector holder	05.9806	1
5	U-bolt M8x32	OT.05.01.020	2
6	U-bolt M8x38	OT.05.01.030	2
7	Bolt M5x40 ISO7380	OT.02.03.008	3
8	Carriage bolt M8x25 DIN603	OT.02.05.060	2
9	Bolt M8x35 DIN933	OT.02.02.210	4
10	Washer Ø5 DIN125	OT.04.01.010	3
11	Washer Ø8/20 SFS3738	OT.04.03.030	14
12	Nut M5 Nyloc DIN985	OT.03.02.020	3
13	Nut M8 Nyloc DIN985	OT.03.02.040	10

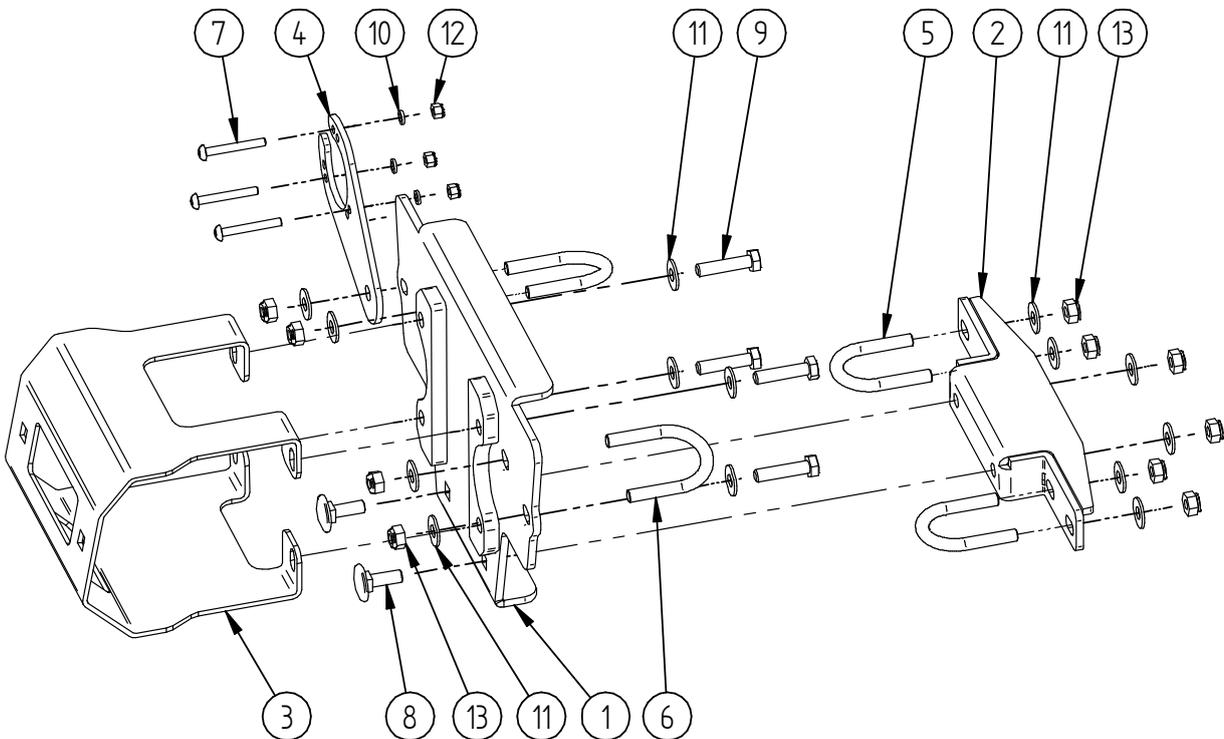

TOOLS REQUIRED FOR INSTALLATION:





- Spanner 8mm
- Spanner 10mm
- Spanner 13mm
- Socket wrench 10mm
- Socket wrench 13mm
- Allen wrench 3mm
- Allen wrench 5mm

FITTING INSTRUCTIONS

Step 1 Remove license plate holder.





Step 2 Install bracket (Pos. 2). For fastening use M8x32 U-bolts (Pos. 5), Ø8 mm washers (Pos. 11) and M8 nyloc nuts (Pos. 13). **Do not tighten the nuts!**

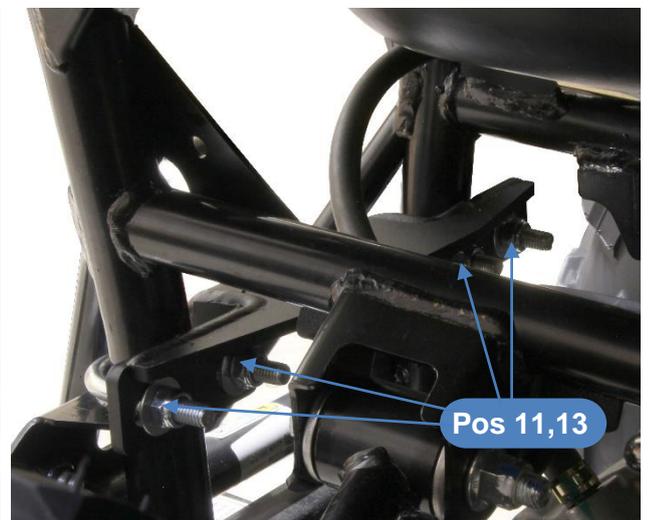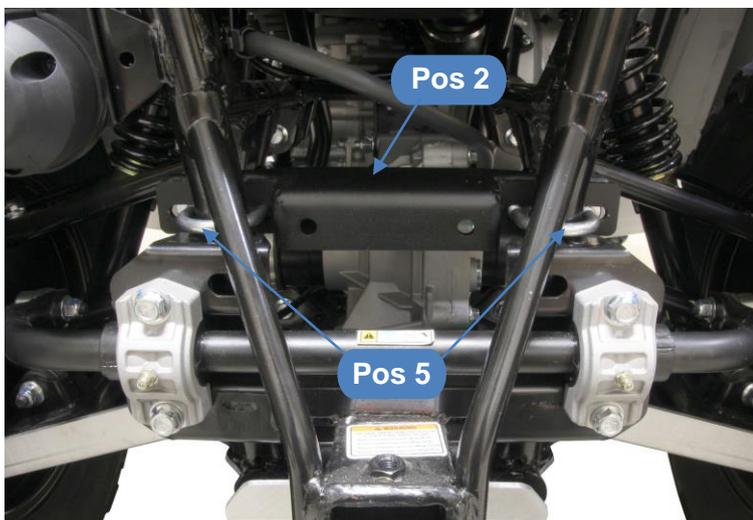

Step 3

Install winch adapter (Pos. 1). First attach the adapter to the bracket using M8x25 carriage bolts (Pos. 8), Ø8 mm washer (Pos. 11) and M8 nyloc nuts (Pos. 13). Next attach upper part of the adapter to the ATV frame using M8x38 U-bolts (Pos. 6). **Also tighten the U-bolts installed in previous step!**

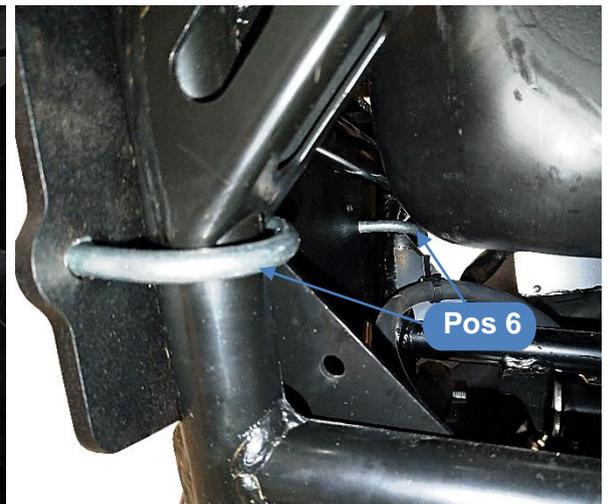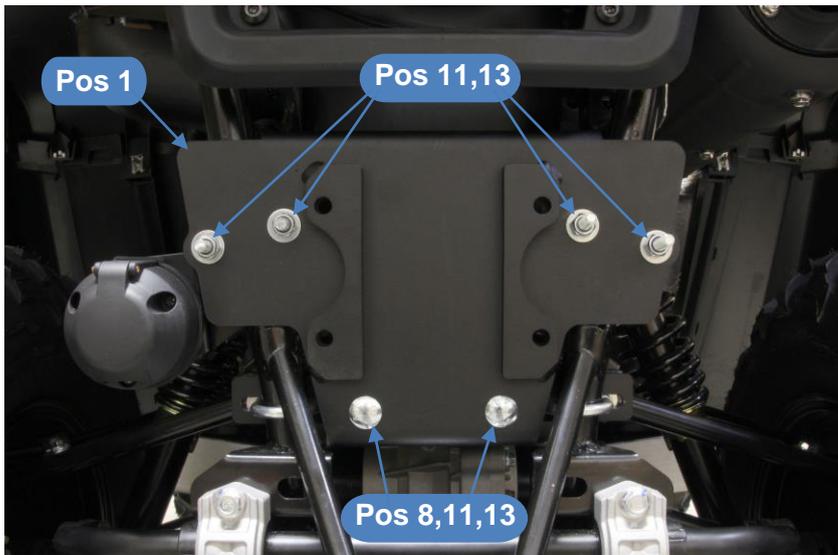


Step 4

Install fairlead to fairlead holder (Pos. 3). Use bolts and nuts supplied with the winch. Next place winch into the fairlead holder.



Step 5


Install winch with fairlead holder to the adapter. For fastening use M8x35 bolts (Pos. 9) and Ø8 mm washers (Pos. 11). Reinstall license plate holder.

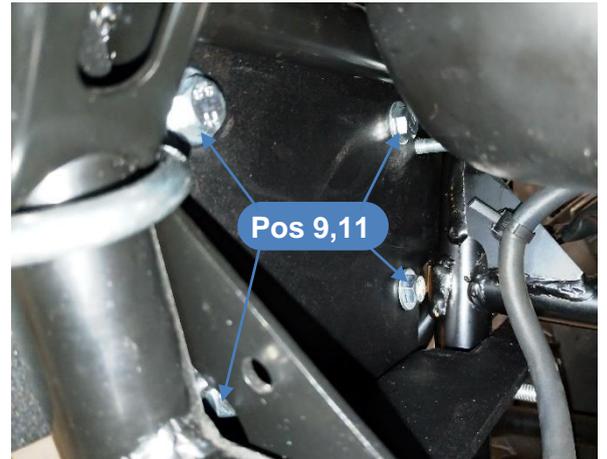


If the trailer connector blocks the installation of the winch, follow these steps:

Step 6


Remove plastic by removing bolts shown in the picture.

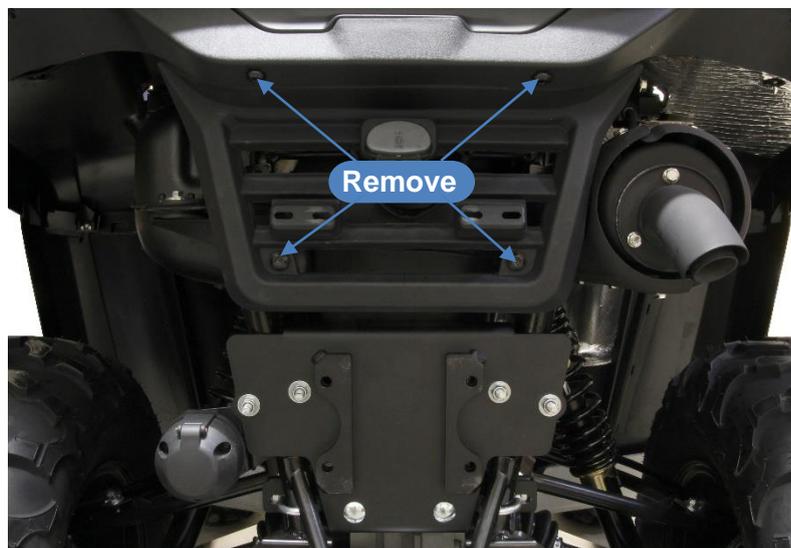

Step 7 Disconnect the cable and remove trailer connector.

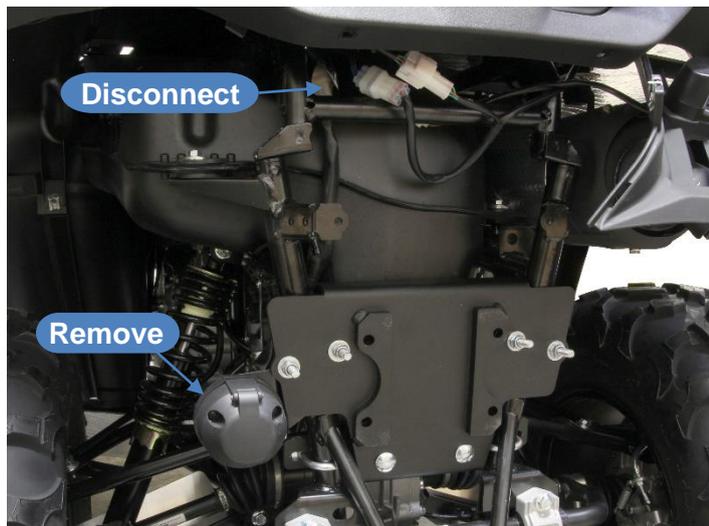

Step 8 Install trailer connector holder (Pos. 4), securing it under the U-bolt washer and nut.

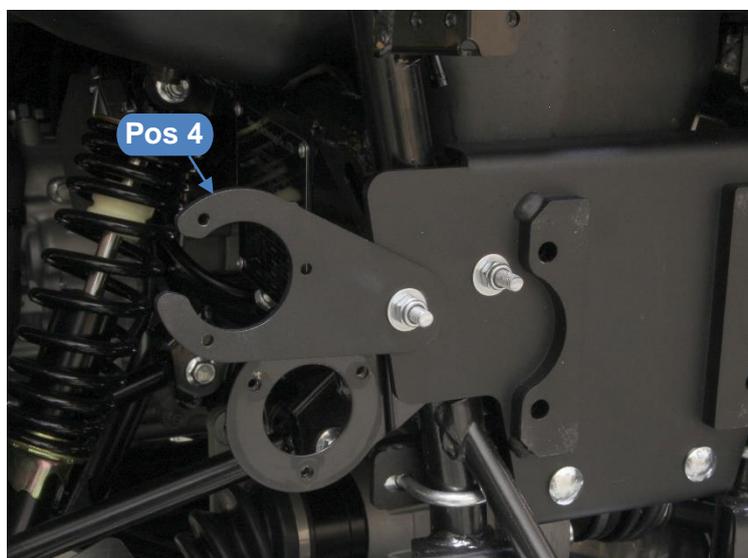

Step 9 Install trailer connector to the holder. For fastening use M5x40 bolts (Pos. 7), Ø5 mm washers (Pos. 10) and M5 nyloc nuts (Pos. 12). Reconnect the cable and reinstall the plastic. Install winch and license plate holder as shown in Step 5.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

