

# IRON BALTIC


## REAR WINCH MOUNT

# LONCIN

# X-WOLF 1000

Code 05.12000

Version 29042025

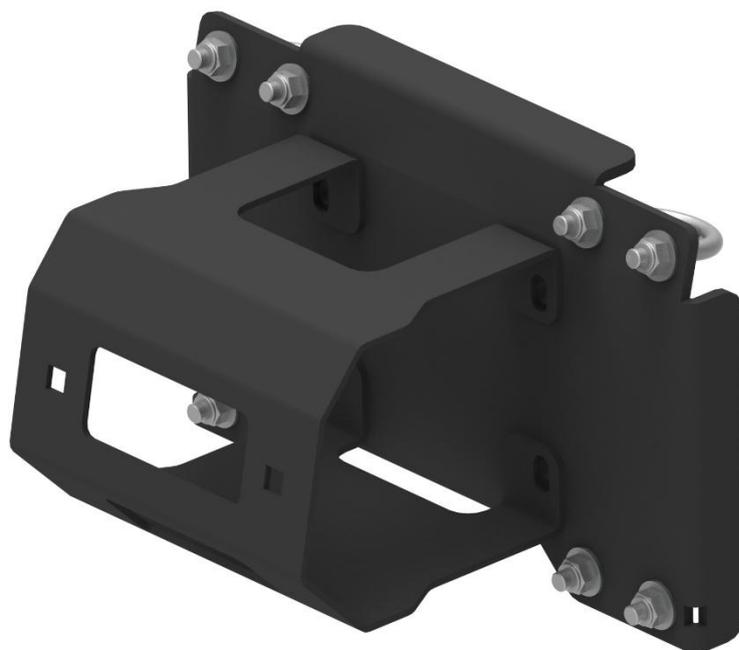

DOWNLOAD MULTILINGUAL  
USER MANUAL




[code.ironbaltic.com/u/dtrowPQT](https://code.ironbaltic.com/u/dtrowPQT)

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	05.12001	1
2	Fairlead holder	05.1202	1
3	U-clamp M8x32	OT.05.01.020	4
4	Washer Ø8/20 SFS3738	OT.04.03.030	8
5	Nyloc nut M8 DIN985	OT.03.02.040	8

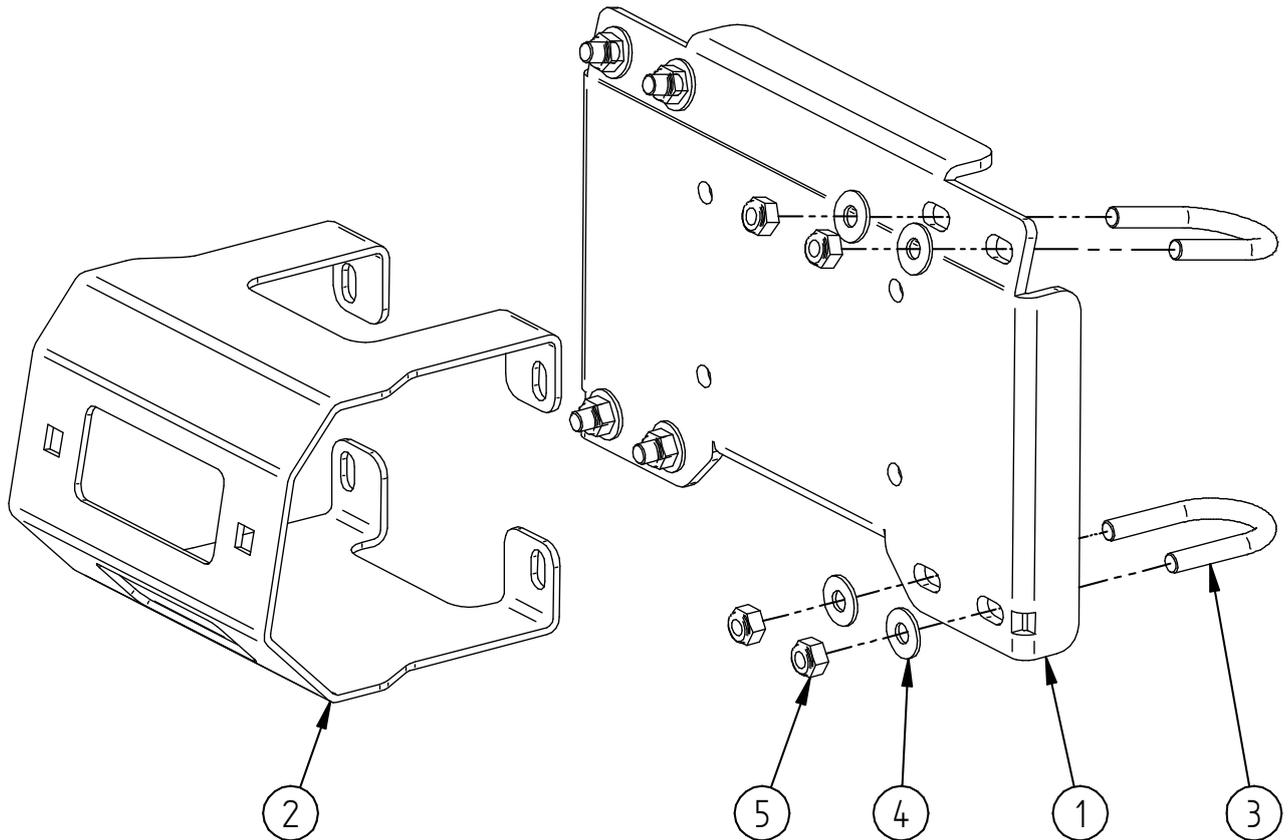

*Numbers on drawing correspond to Pos numbers on specification table*




## TOOLS REQUIRED FOR INSTALLATION:

- Spanner 13mm

# FITTING INSTRUCTIONS


## Step 1

Install fairlead to the fairlead holder (Pos. 2), using fasteners from winch kit. Next place winch into the fairlead holder.

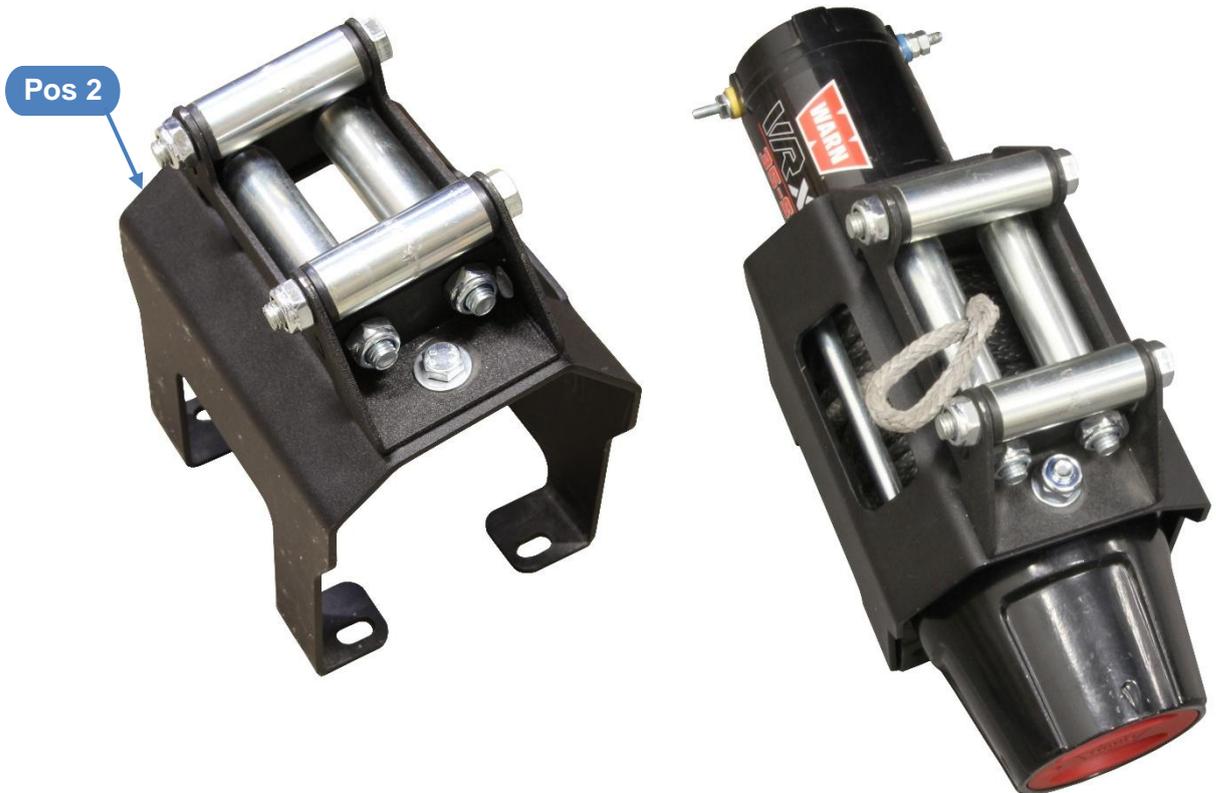



## Step 2

Install winch together with the fairlead holder to the adapter (Pos. 1). For fastening use fasteners from winch kit.

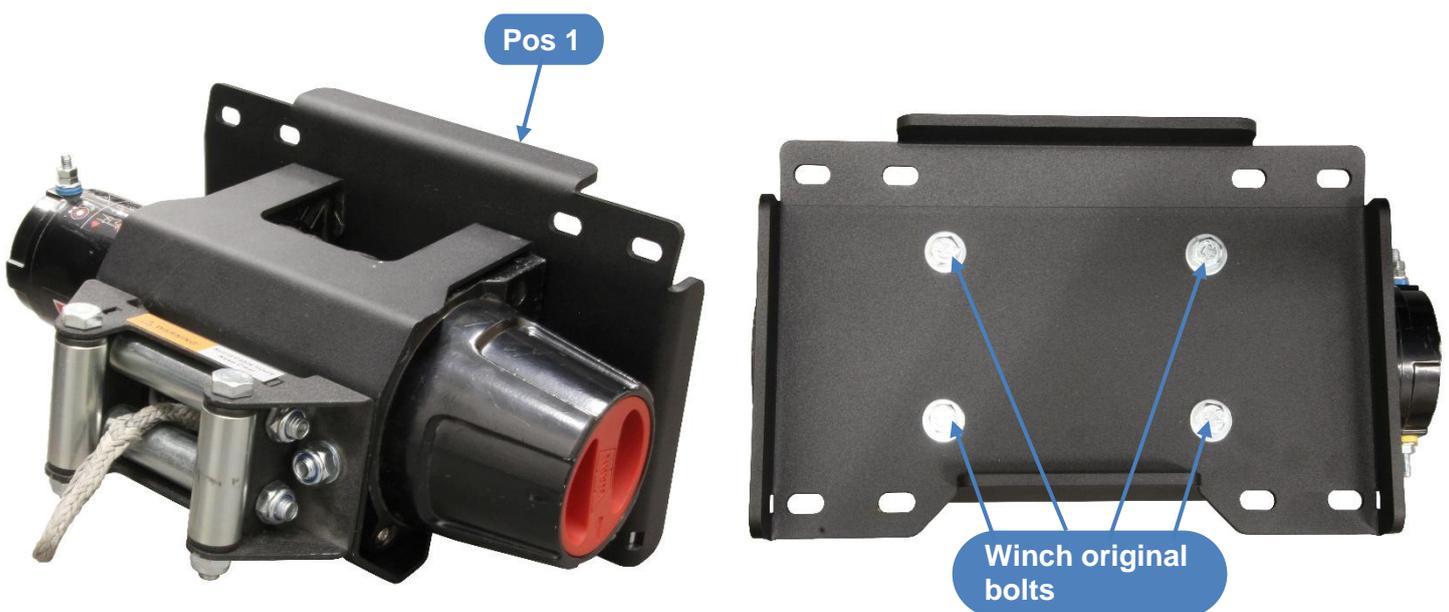

### Step 3

Install rear winch mount to the ATV. For fastening use M8x32 U-clamps (Pos. 3), Ø8 washers (Pos. 4) and M8 nyloc nuts (Pos. 5).

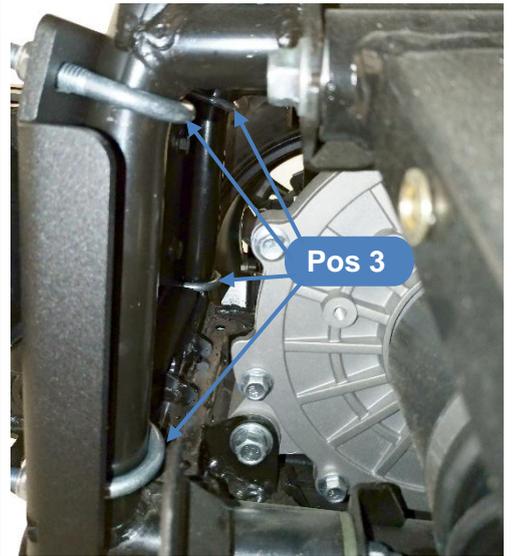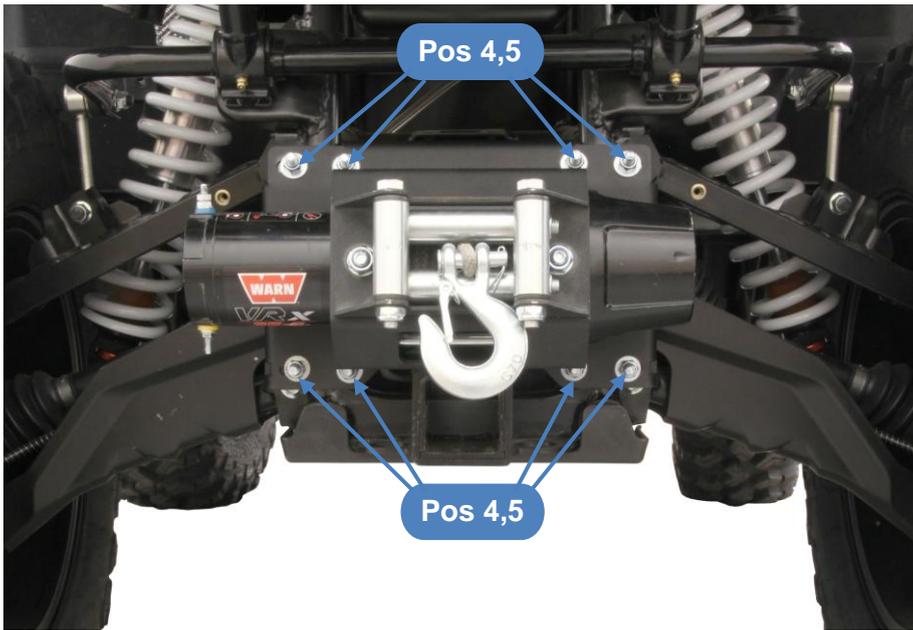







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

