

IRON BALTIC


REAR WINCH MOUNTING KIT

POLARIS

Sportsman 500 / 570 / 800 (2011-...)

Code 05.5300

Version 15082024

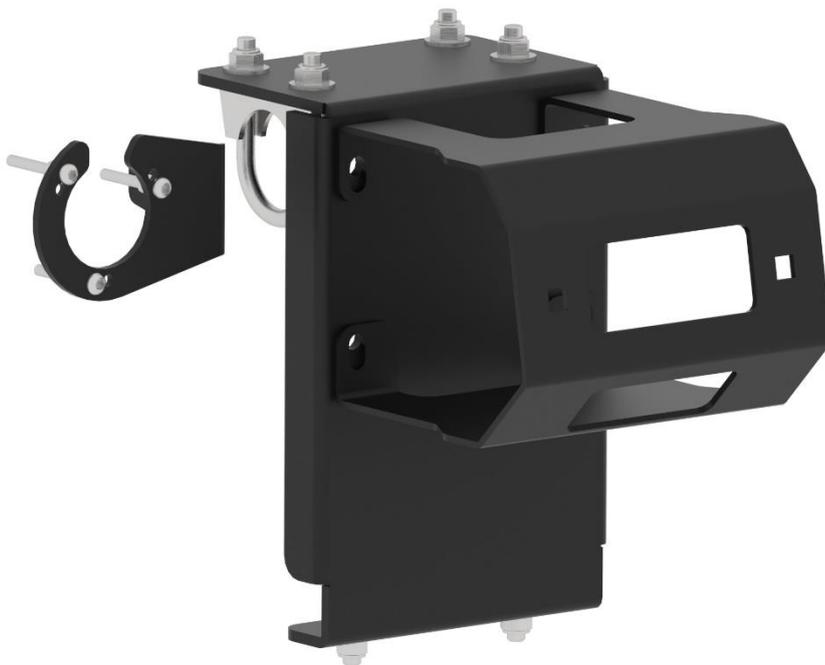

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/DaTaFzSG


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Adapter	05.5301	1
2	Fairlead holder	05.1202	1
3	Trailer plug holder	05.10903	1
4	U-clamp 38mm	14.009	2
5	Pipe clamp bracket 38mm	OT.05.04.030	2
6	Bolt M5x40 ISO 7380	OT.02.03.008	3
7	Bolt M8x20 DIN 933	OT.02.02.180	2
8	Washer Ø5 DIN 125	OT.04.01.010	3
9	Washer Ø8/20 SFS 3738	OT.04.03.030	8
10	Nut M5 Nyloc DIN 985	OT.03.02.020	3
11	Nut M8 Nyloc DIN 985	OT.03.02.040	6

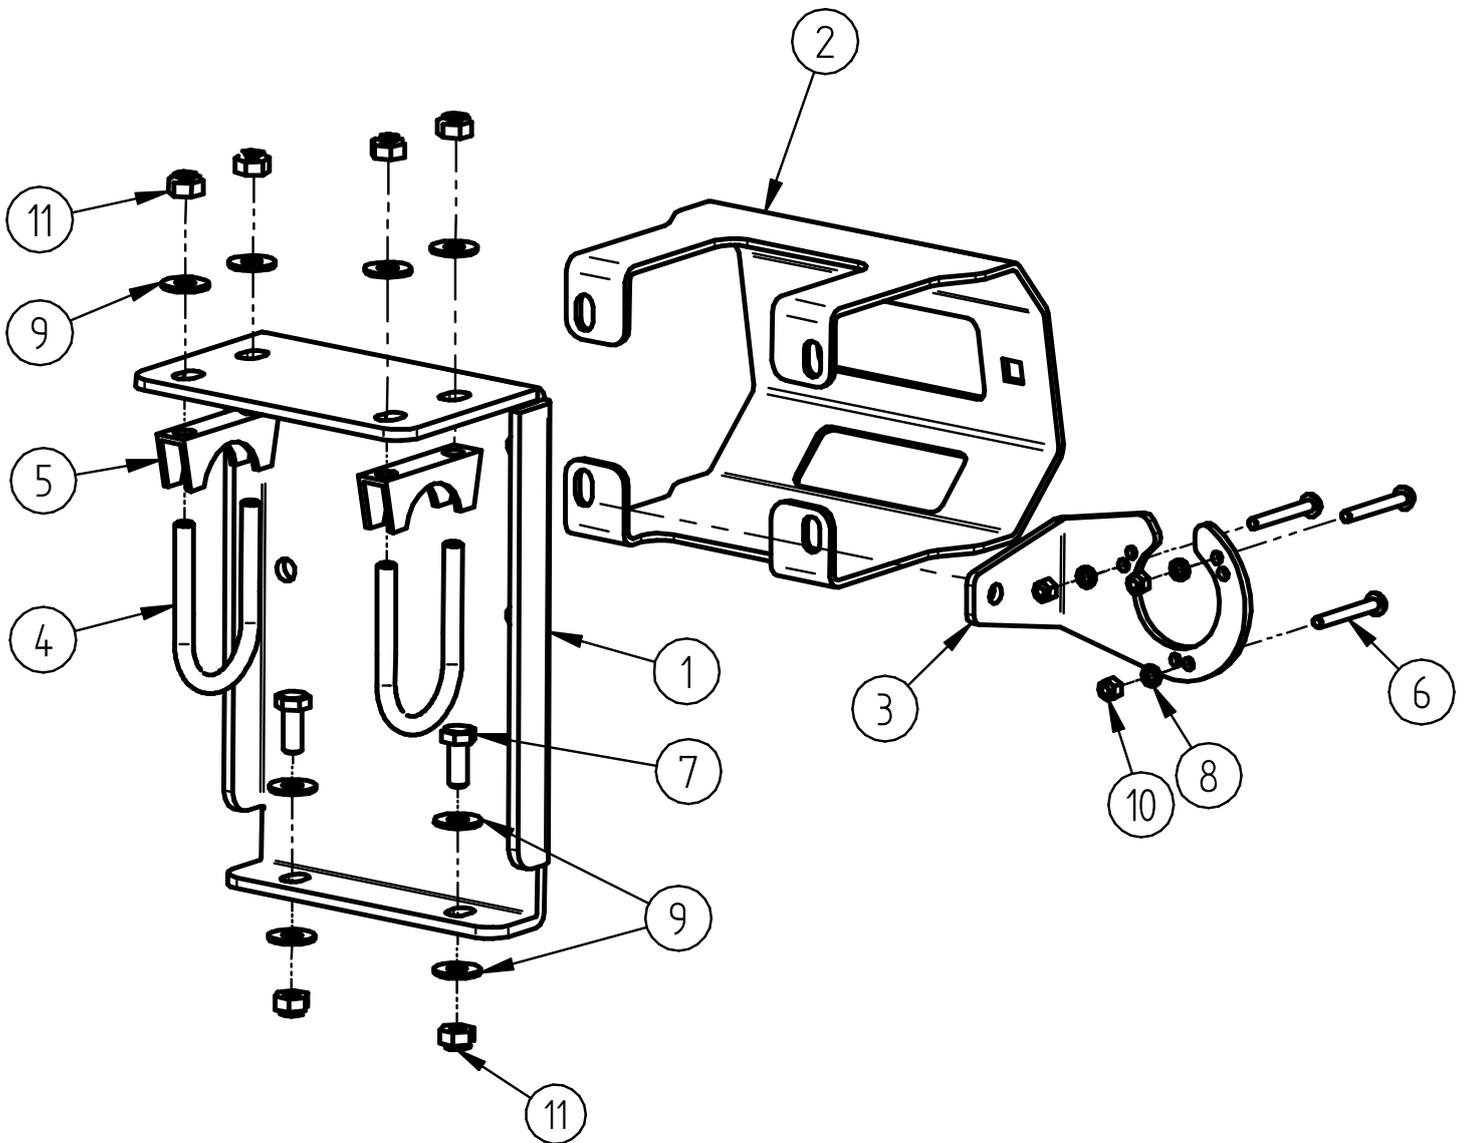

FITTING INSTRUCTIONS


Step 1

Install winch on the baseplate 05.5301 and winch rollerguide onto winch rollerguide holder 05.1202. Use bolts supplied with winch.

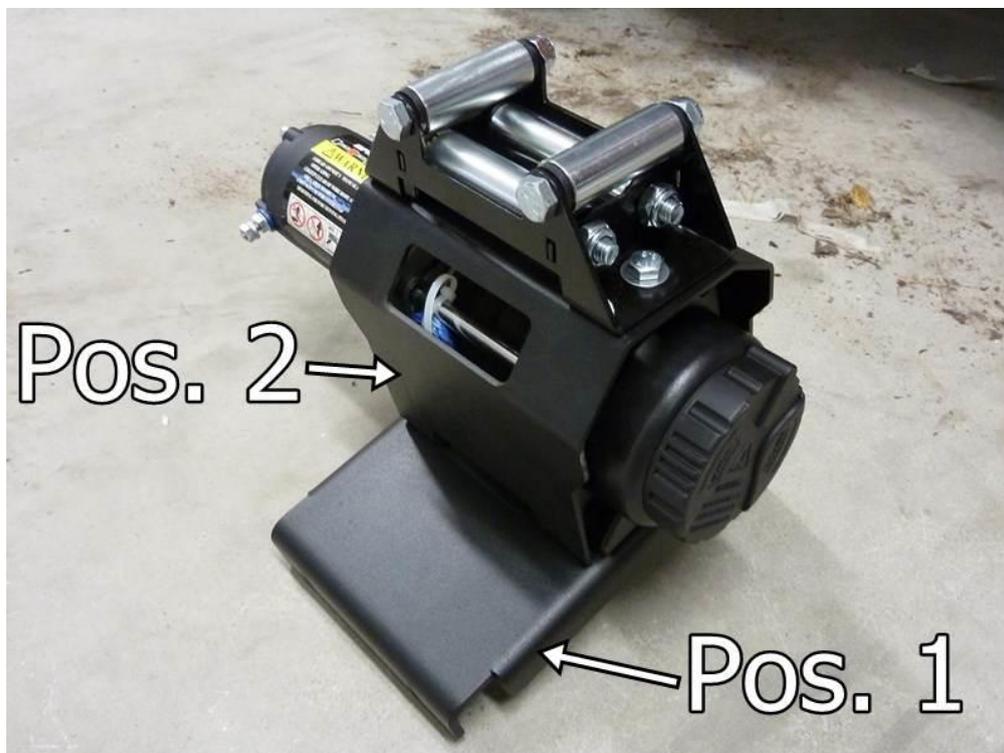


Step 2

First secure the top mounts of the adapter (pipeclamps). For easier installation pull the bottom part of the adapter away from the ATV frame. From MY2020 U bolts may need some pushing/force to go over the tube on ATV!

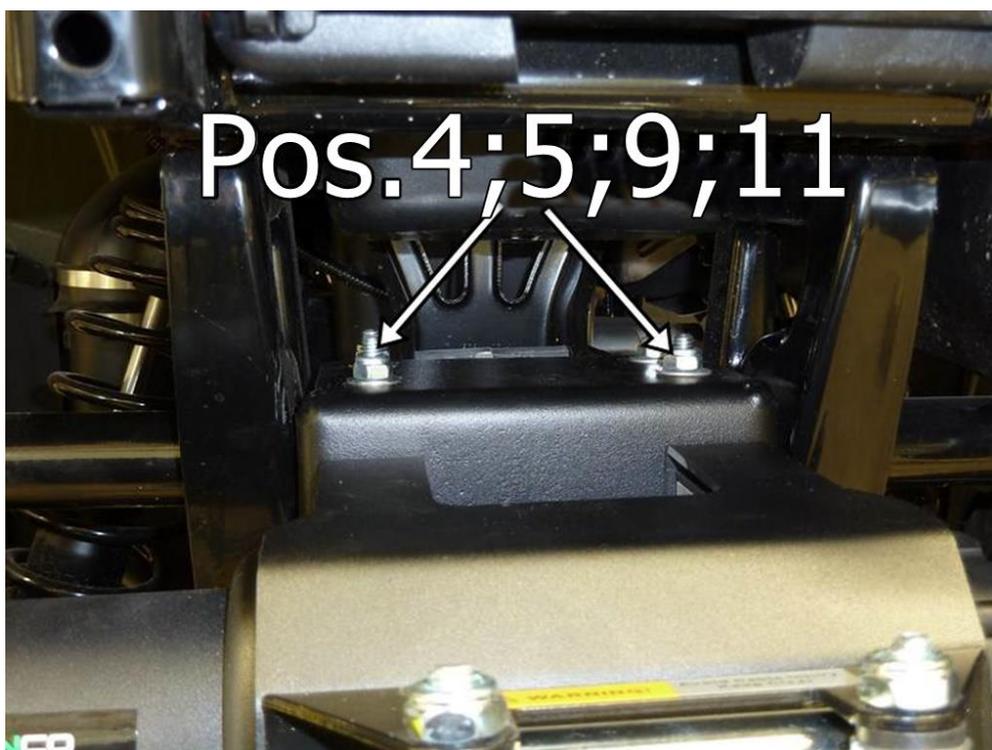


Step 3

Install winchadapter bottom bolts. If you're using IronBaltic skidplate, then release the rear installation bolts on the skidplate, to access the winch adapter nuts.

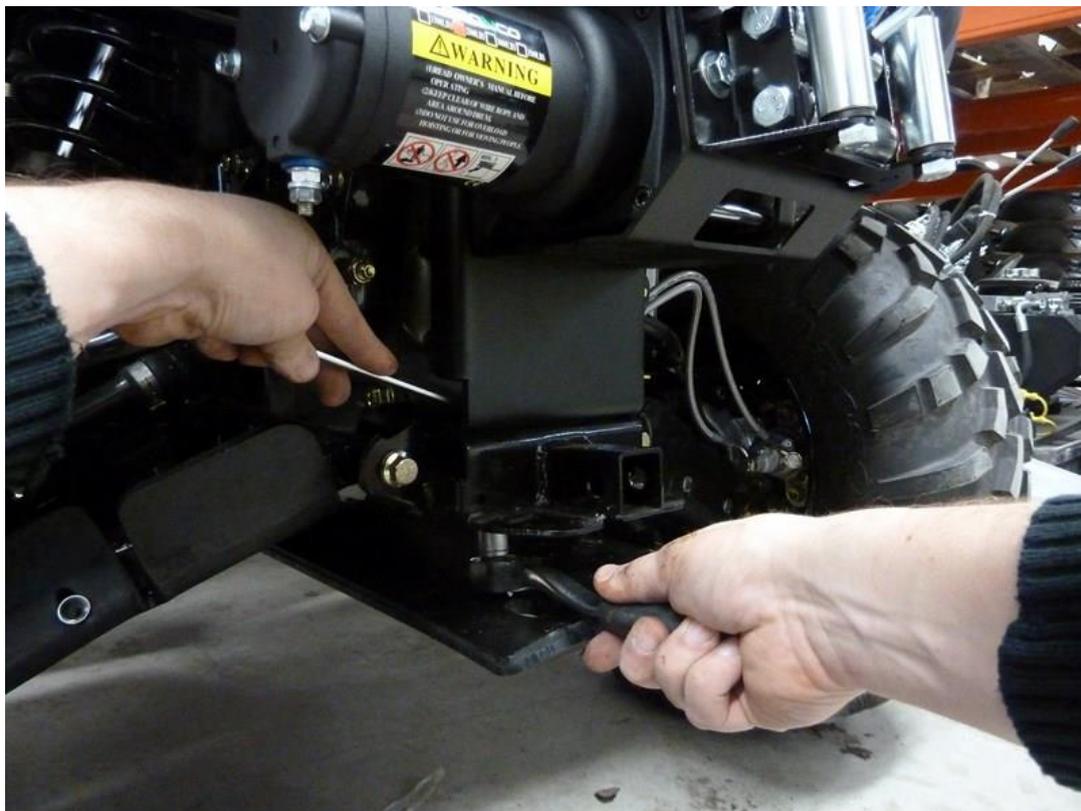

Step 4

Install trailer connector plate (Pos. 3) to the ATV and trailer socket to connector plate.

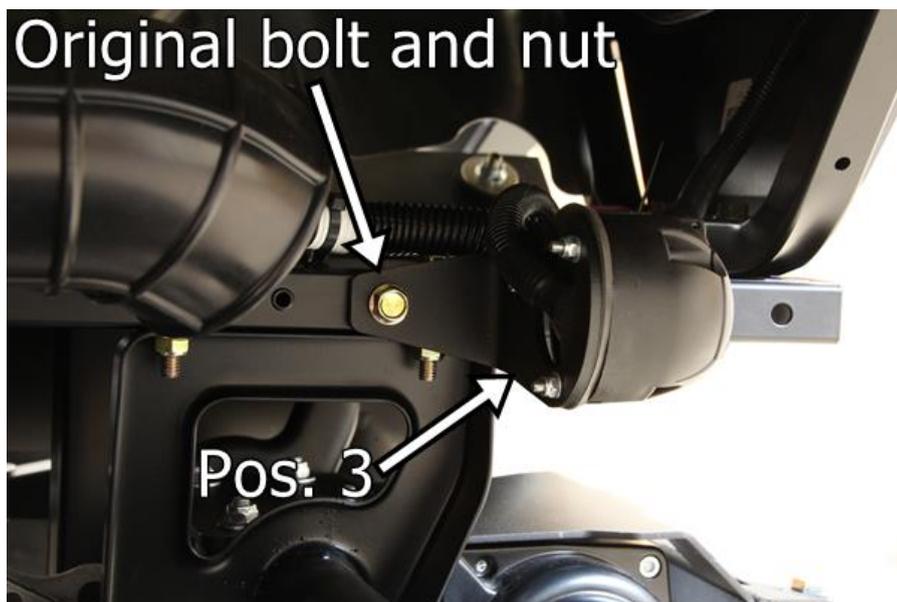

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

