

IRON BALTIC

REAR WINCH MOUNTING KIT

POLARIS

Sportsman 500 / 570 / 800 (2011-...)

Code 05.5300

Version 22112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/DaTaFzSG

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	05.5301	1
2	Holder	05.1202	1
3	Pipe clamp bracket 38mm	OT.05.04.030	2
4	U-clamp 38mm	OT.05.01.030	2
5	Bolt M8x20 DIN 933	OT.02.02.180	2
6	Washer 8/20 SFS 3738	OT.04.03.030	8
7	Nut M8 Nyloc DIN 985	OT.03.02.040	6

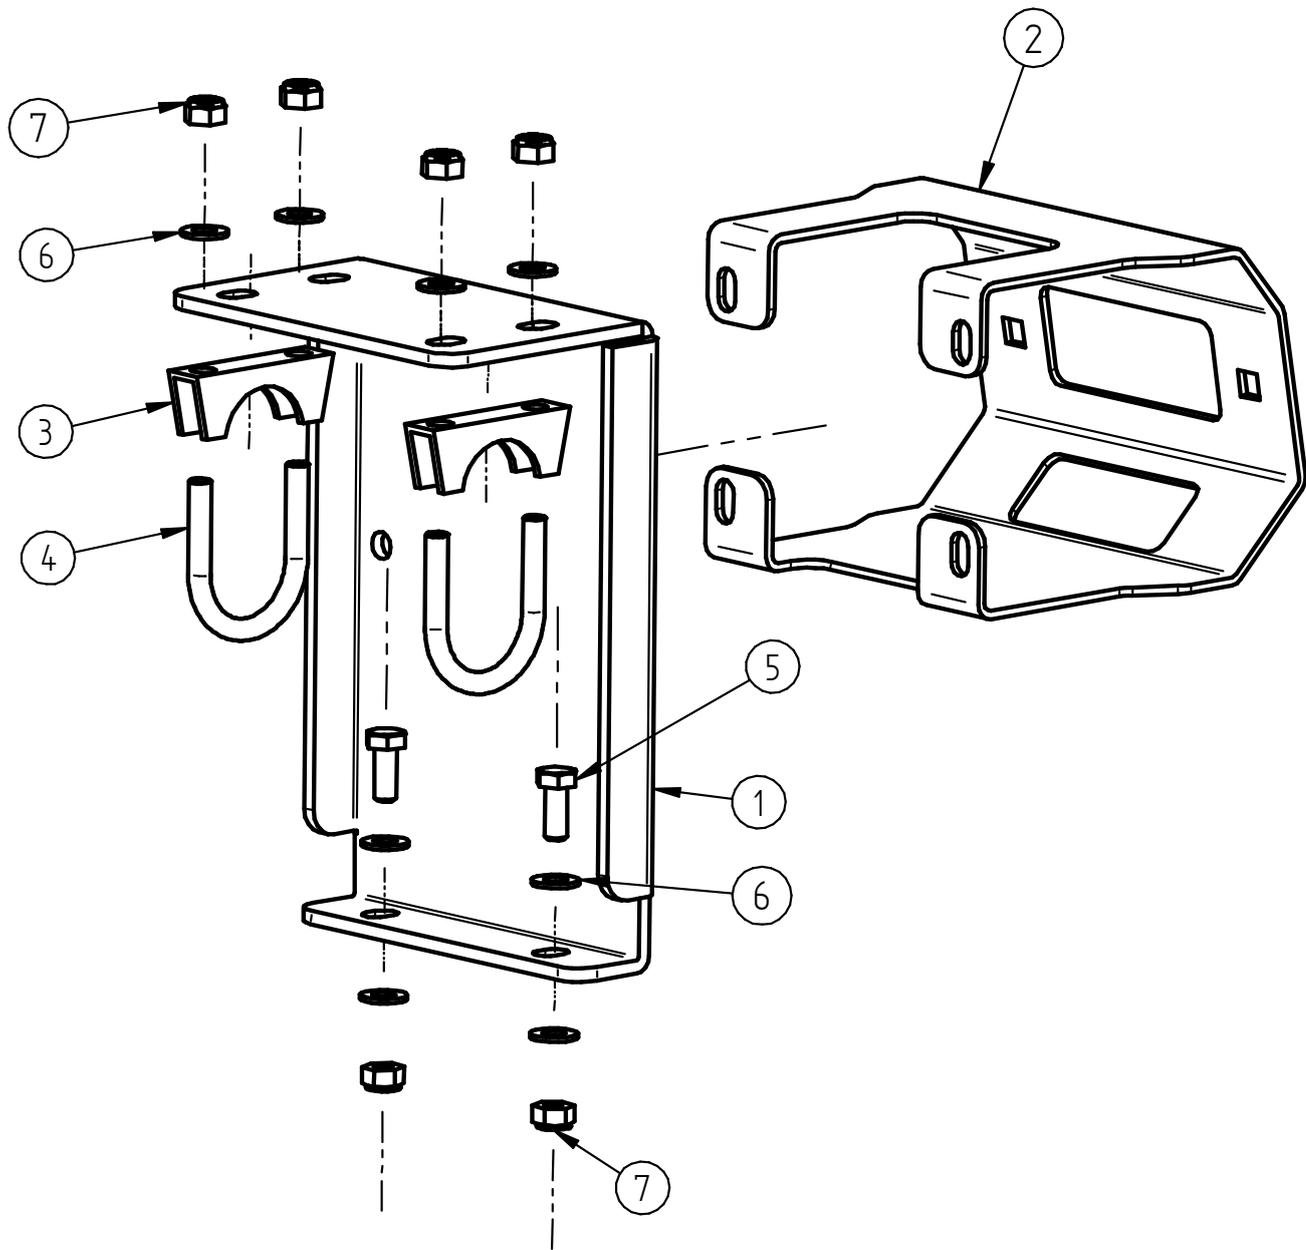

FITTING INSTRUCTIONS


Step 1

Install winch on the baseplate 05.5301 and winch rollerguide onto winch rollerguide holder 05.1202.




Step 2

First secure the top mounts of the adapter (pipeclamps). For easier installation pull the bottom part of the adapter away from the ATV frame. From MY2020 U bolts may need some pushing/force to go over the tube on ATV!

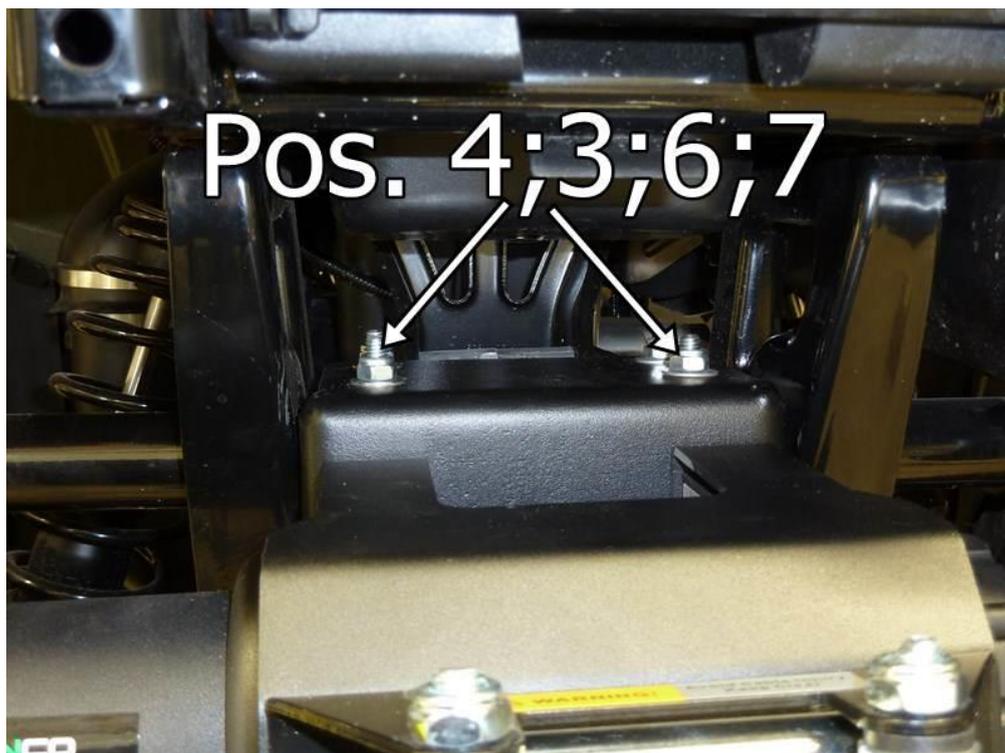

Step 3

Install winchadapter bottom bolts. If you're using IronBaltic skidplate, then release the rear installation bolts on the skidplate, to access the winch adapter nuts.

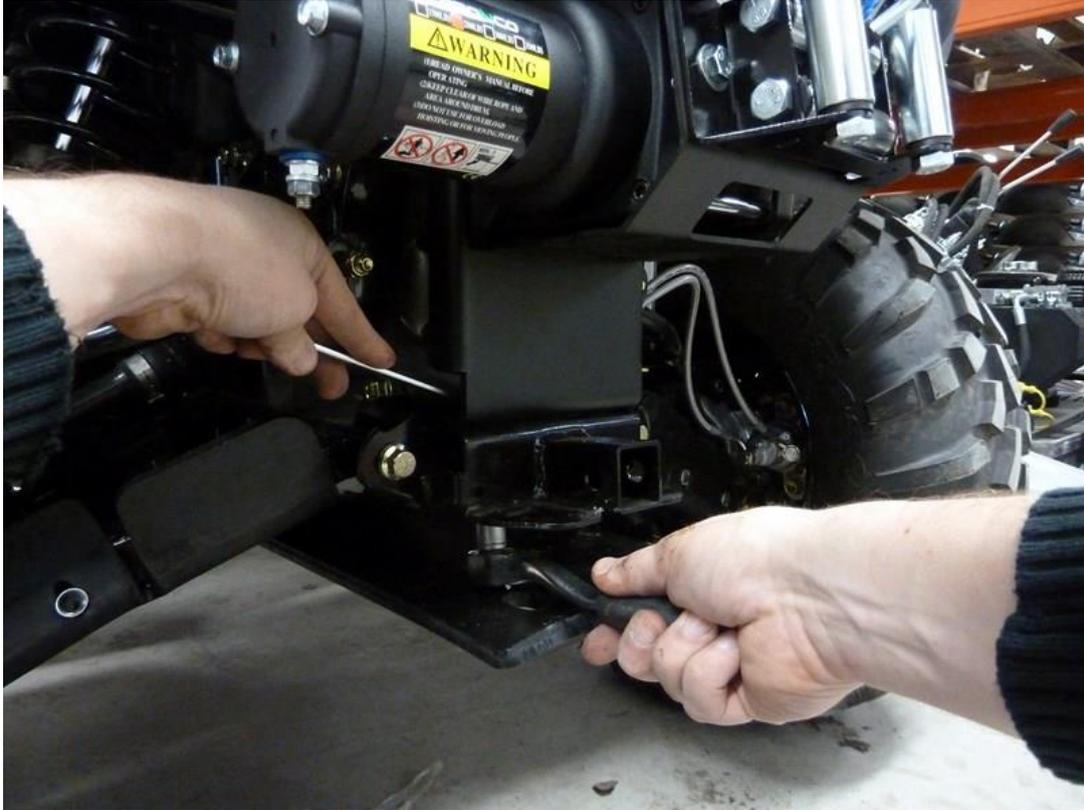

IRON BALTIC

IRON BALTIC OÜ
Põldmäe tee 1
Vatsla 76915
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

