

# IRON BALTIC

## WINCH MOUNTING KIT

### HONDA TRX 420 FE

Code 05.5400

Version 22112023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)


DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/1T7DpHeG](http://code.ironbaltic.com/u/1T7DpHeG)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Winch mounting bracket	05.5401K	1
2	Lower winch mounting bracket	05.5403	1
3	Side mounting bracket	05.5404	1
4	Spacer bush	05.5405	2
5	Spacer bush	05.5406	1
6	Washer 8/20 SFS 3738	OT.04.03.030	4
7	Bolt M8x30 DIN 933	OT.02.02.200	4
8	Bolt M6x12 DIN 933	OT.02.02.030	2
9	Nut M8 Nyloc DIN 985	OT.03.02.040	1

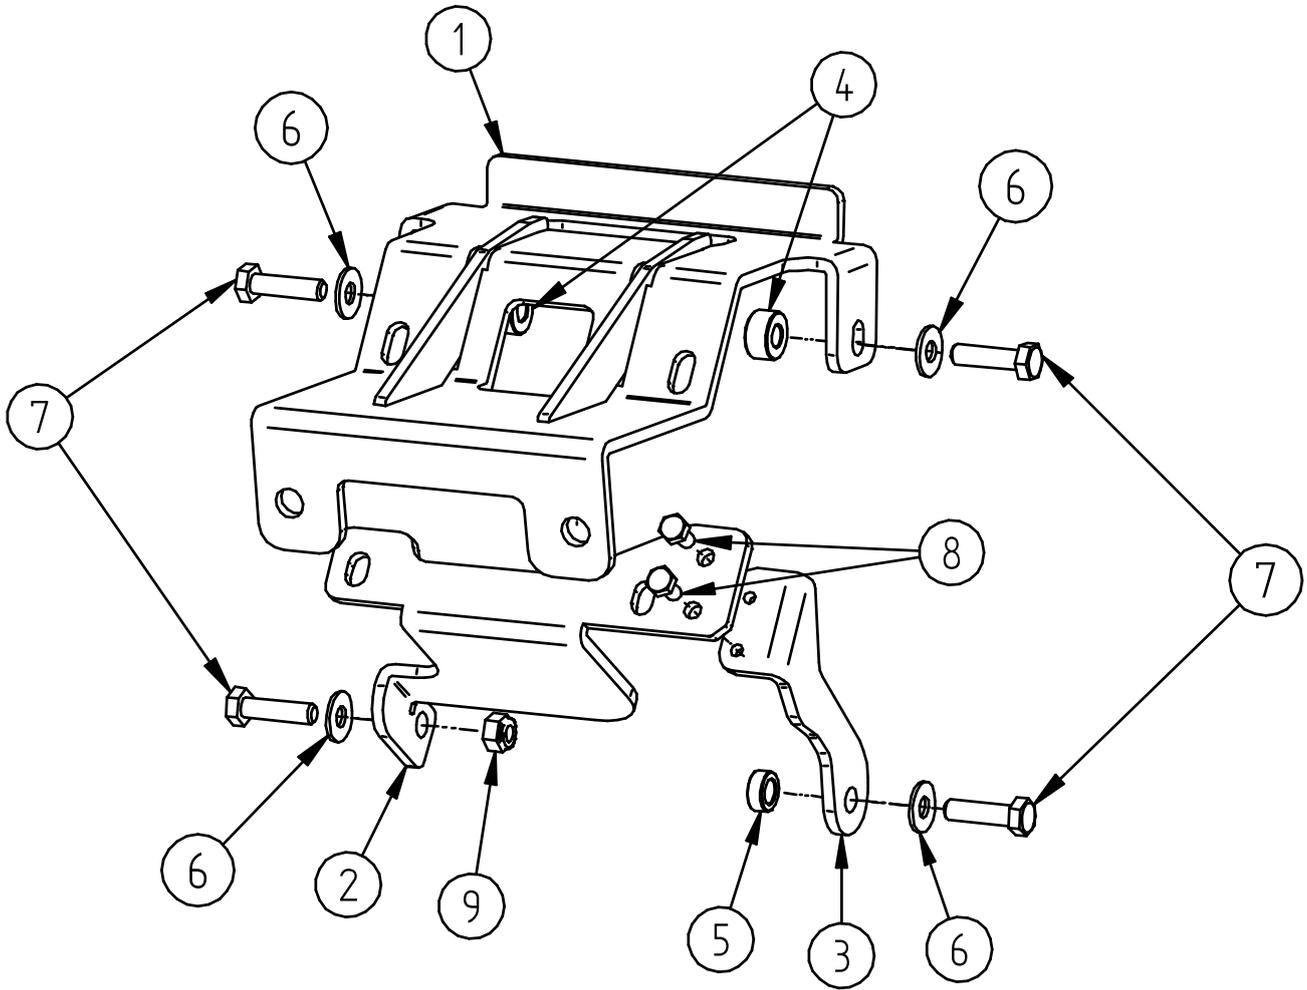

# FITTING INSTRUCTIONS

## Step 1

Remove the two plastic rivets that secure the front plastic cover.




## Step 2

Remove the two M6 bolts securing the front plastic cover.




### Step 3

Remove the four M6 bolts that secure the front skid plate.

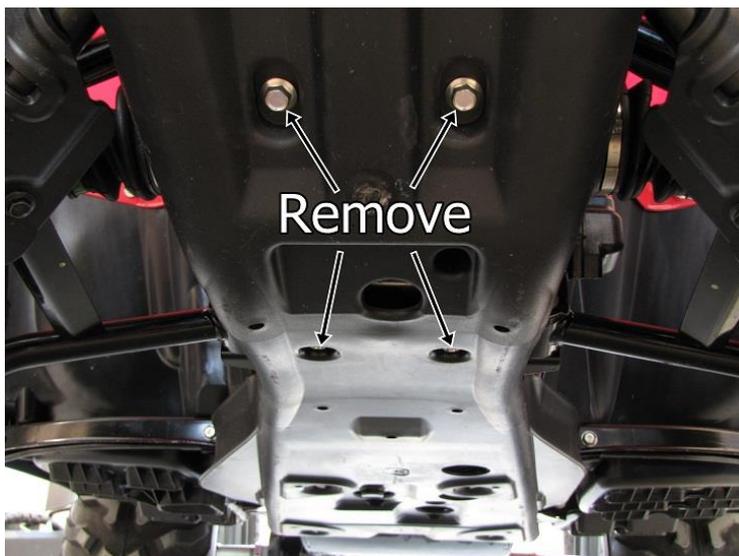

### Step 4

Remove the two M6 bolts that attach the front bumper to the headlight assembly.

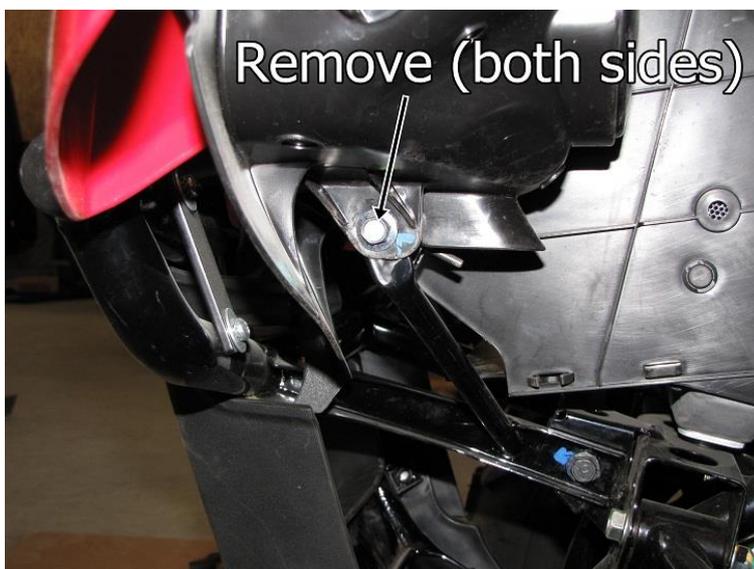


### Step 5

Remove the two M8 bolts that attach the front bumper to the front rack.




**Step 6**

Remove the four M8 bolts that attach the front bumper to the ATV frame.

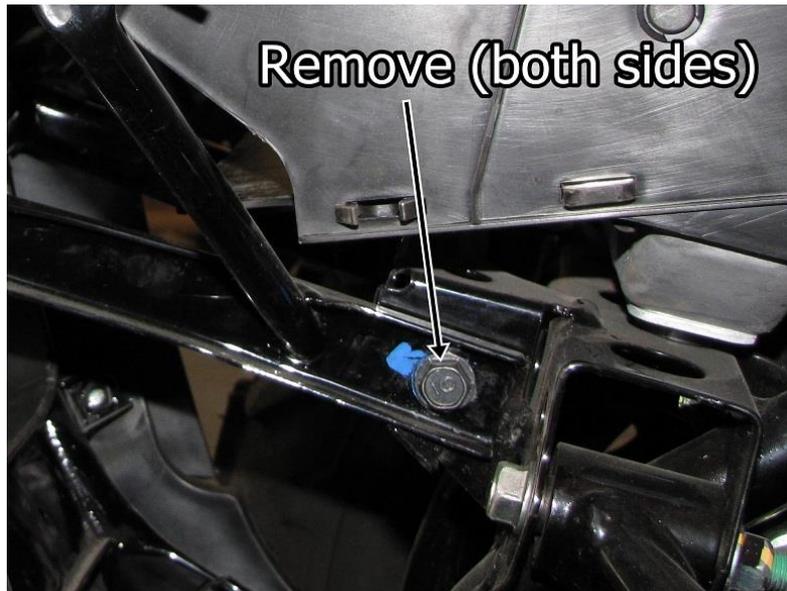


**Step 7**

Depress the locking tabs and remove the plastic radiator panel.

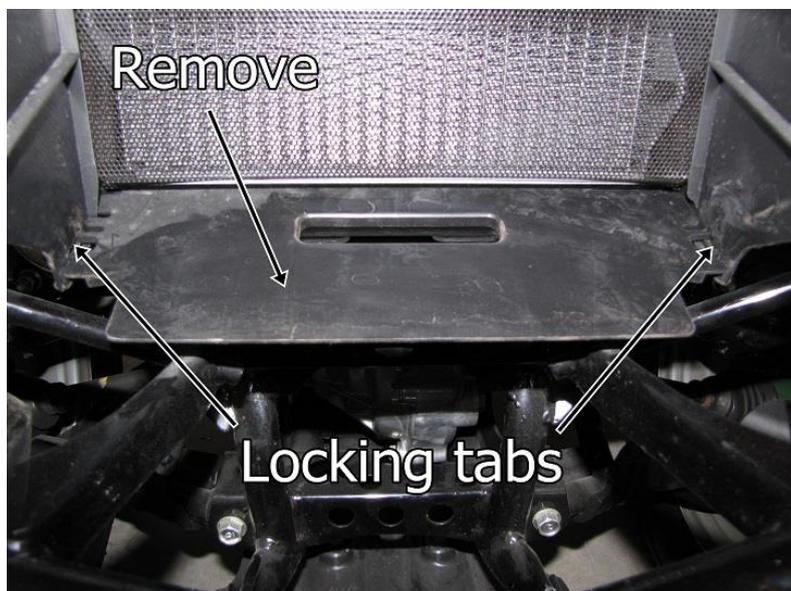

### Step 8

Attach the winch to the lower mounting bracket (Pos. 2).

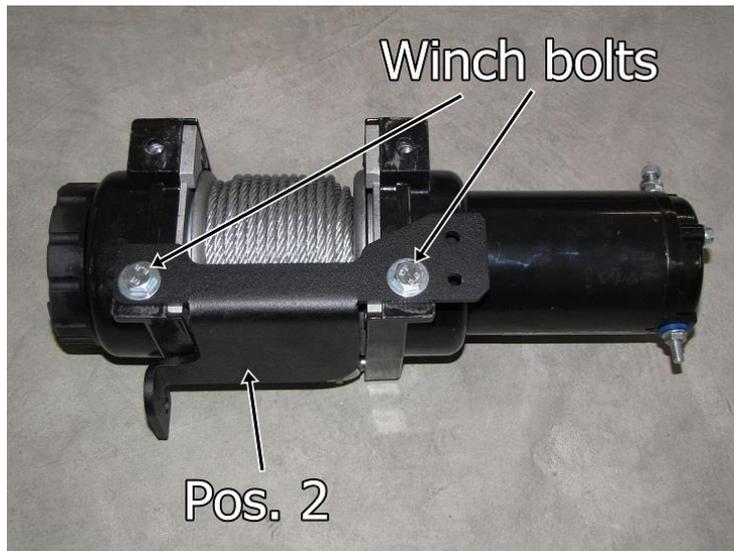

### Step 9

Place the winch and lower mounting bracket assembly between ATV frame and front bumper.




### Step 10

Place front bumper back to its position, reinstall the two M8 bolts.




### Step 11

Place the winch mounting bracket (Pos.1) onto ATV frame, install winch bolts.

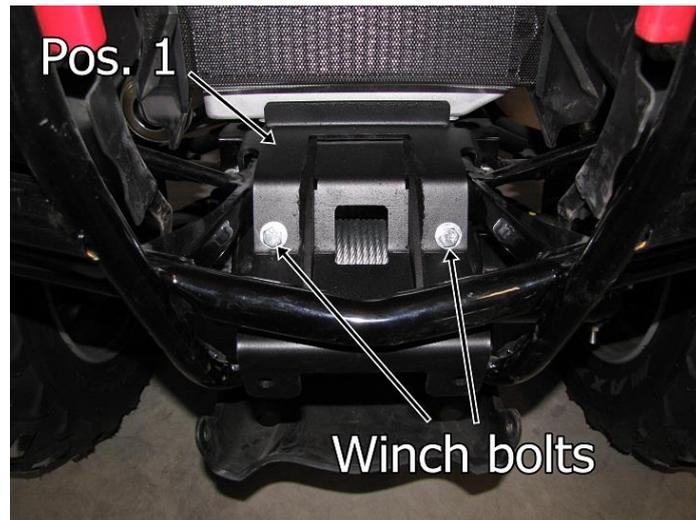


### Step 12

Place spacer bush (Pos. 4) between winch bracket and front bumper. Align holes of winch bracket, spacer bush, front bumper and ATV frame and install M8 bolt (Pos. 7) with washer (Pos. 6).

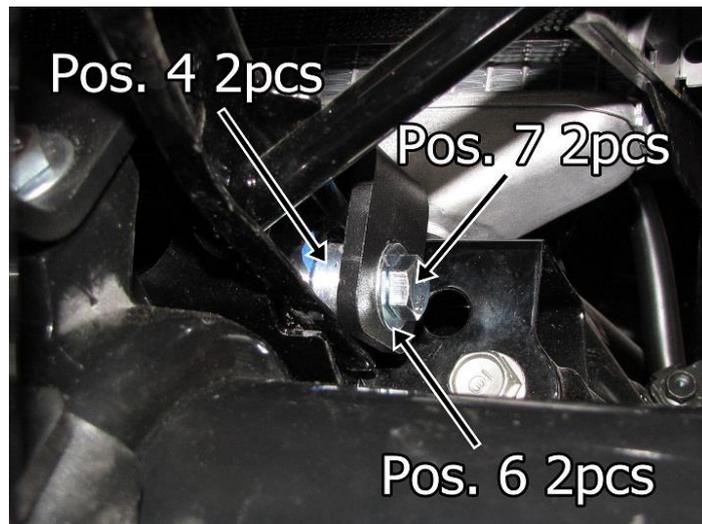


### Step 13

Align front bumper, ATV frame and lower winch bracket. Install M8 bolt (Pos.7) with washer (Pos. 6) and secure it with M8 nylock nut (Pos.10).

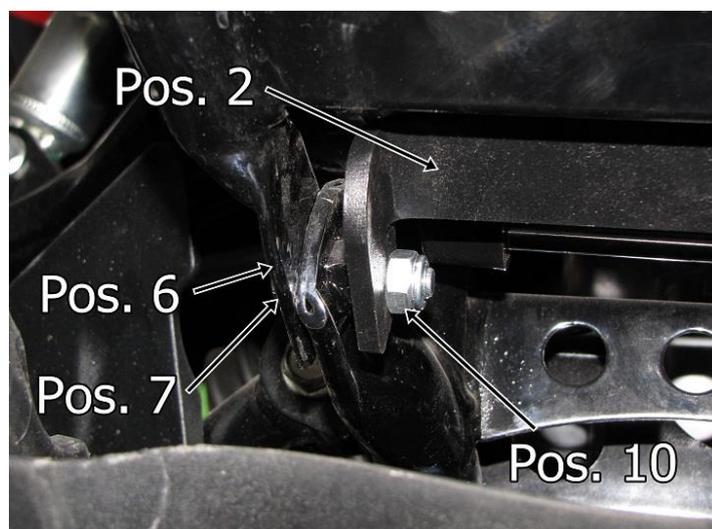

## Step 14

Place the side mounting bracket (Pos. 3) onto the lower mounting bracket and install the two M6 bolts (Pos. 9). Place the spacer bush (Pos. 5) between side mounting bracket and front bumper. Fasten the M8 bolt (Pos. 7) through the washer (Pos. 6), side mounting bracket, spacer bush, front bumper and into the ATV frame threaded hole.

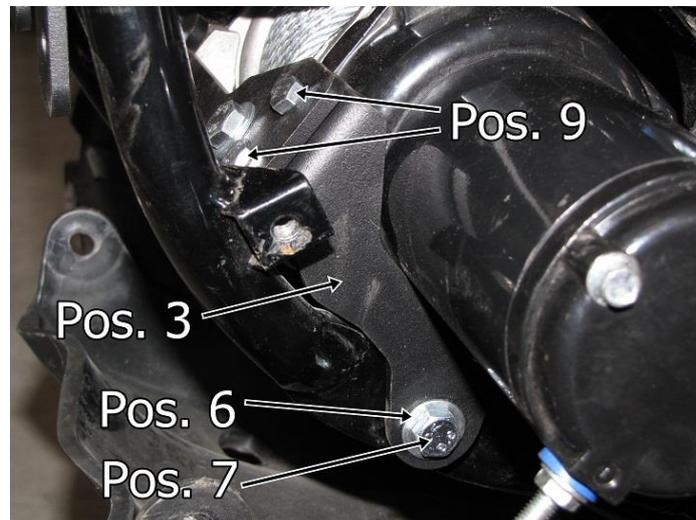


## Step 15

Make sure that winch clutch dial clears plastic skid plate. If necessary trim skid plate.




**Step 16**

Install the winch roller fairlead and hook.

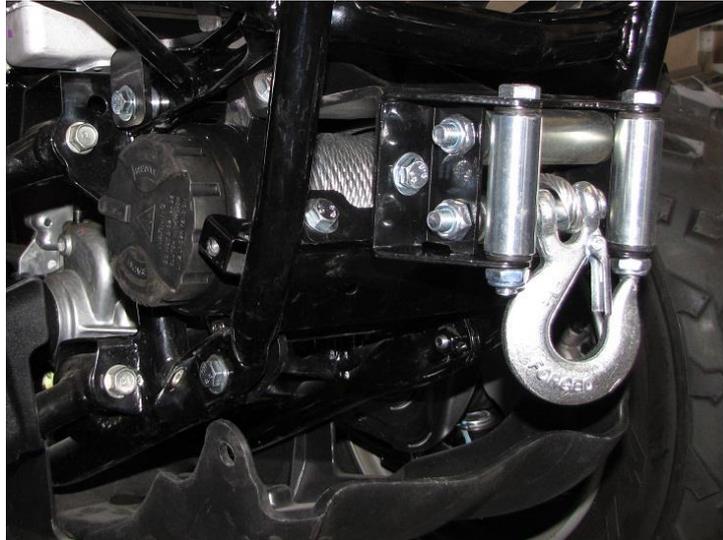

**Step 17**

Reinstall the plastic skid plate with the four M6 bolts.

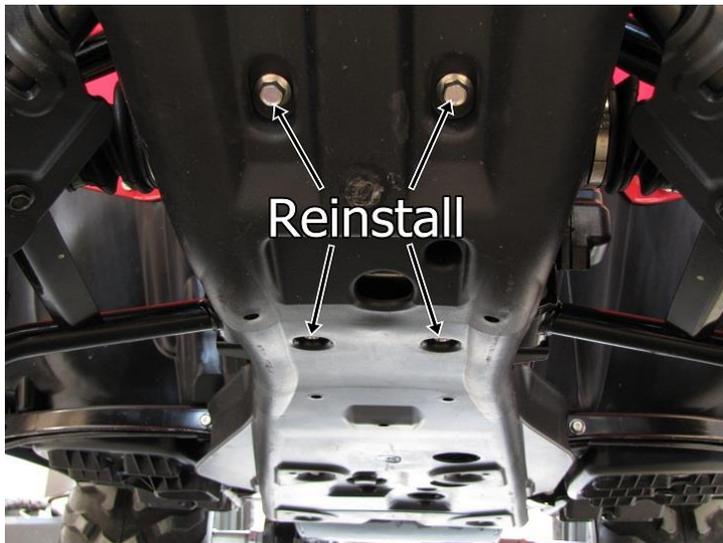

**Step 18**

Reinstall the plastic cover with the two plastic rivets and M6 bolts .





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

