

IRON BALTIC

REAR WINCH MOUNTING KIT

POLARIS

500 Sportsman (...-2010)

Code 05.6000

Version 24112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/yIEMPDwf

SPECIFICATION


Pos.	Description	Code	Amount
1	Adapter	05.6001	1
2	Holder	05.1202	1
3	Pipeclamp 38mm	OT.05.01.030	2
4	Pipe clamp bracket 38mm	OT.05.04.030	2
5	Bolt M8x20 DIN 933	OT.02.02.180	2
6	Washer 8/20 SFS 3738	OT.04.03.030	8
7	Nut M8 Nyloc DIN 985	OT.03.02.040	6

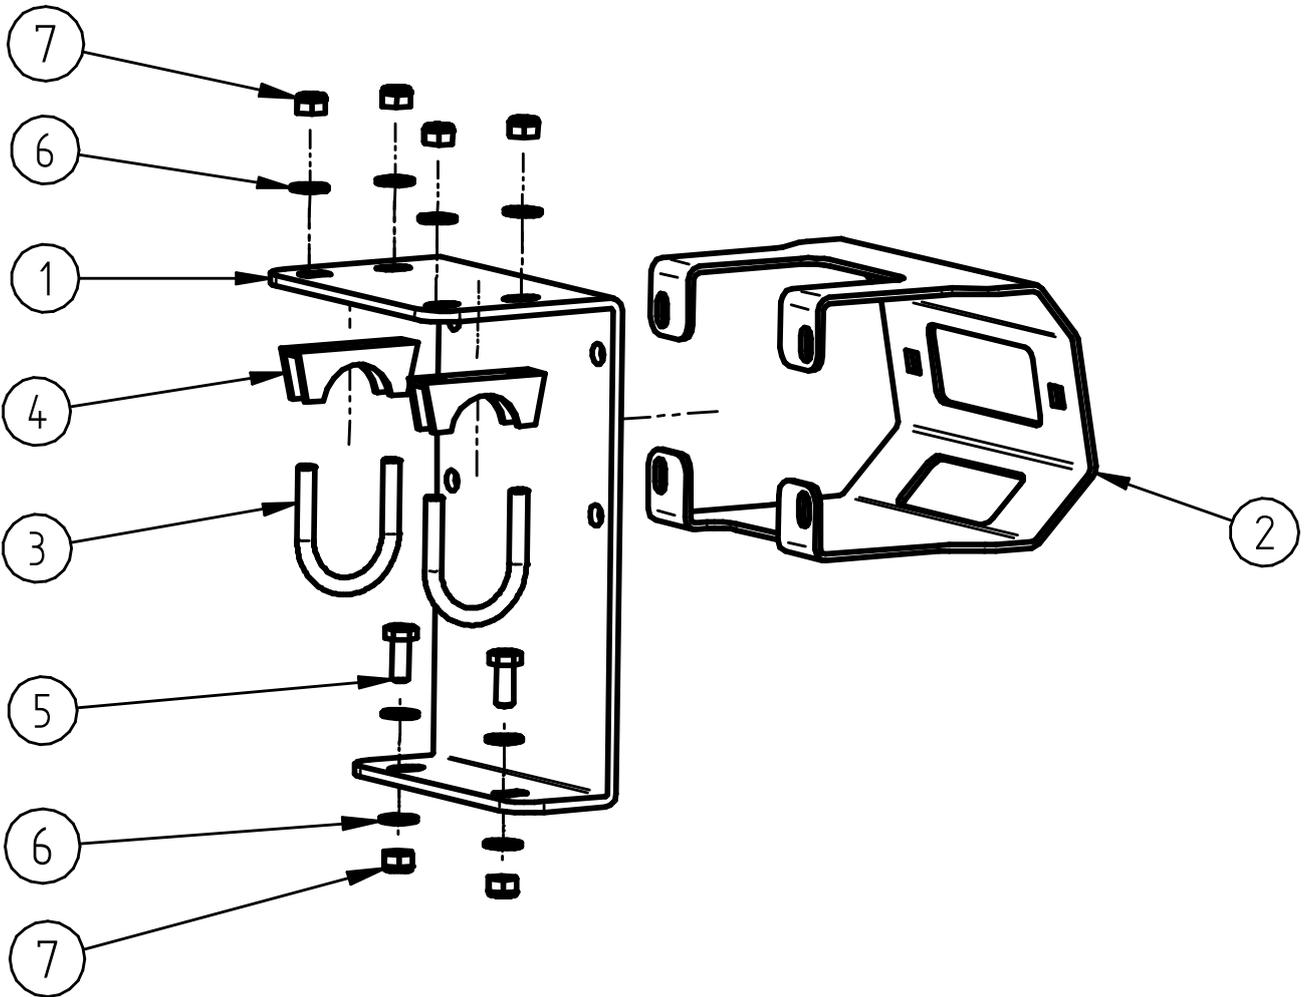

FITTING INSTRUCTIONS


Step 1

Install winch on the baseplate 05.6001 and winch rollerguide onto winch rollerguide holder 05.1202.

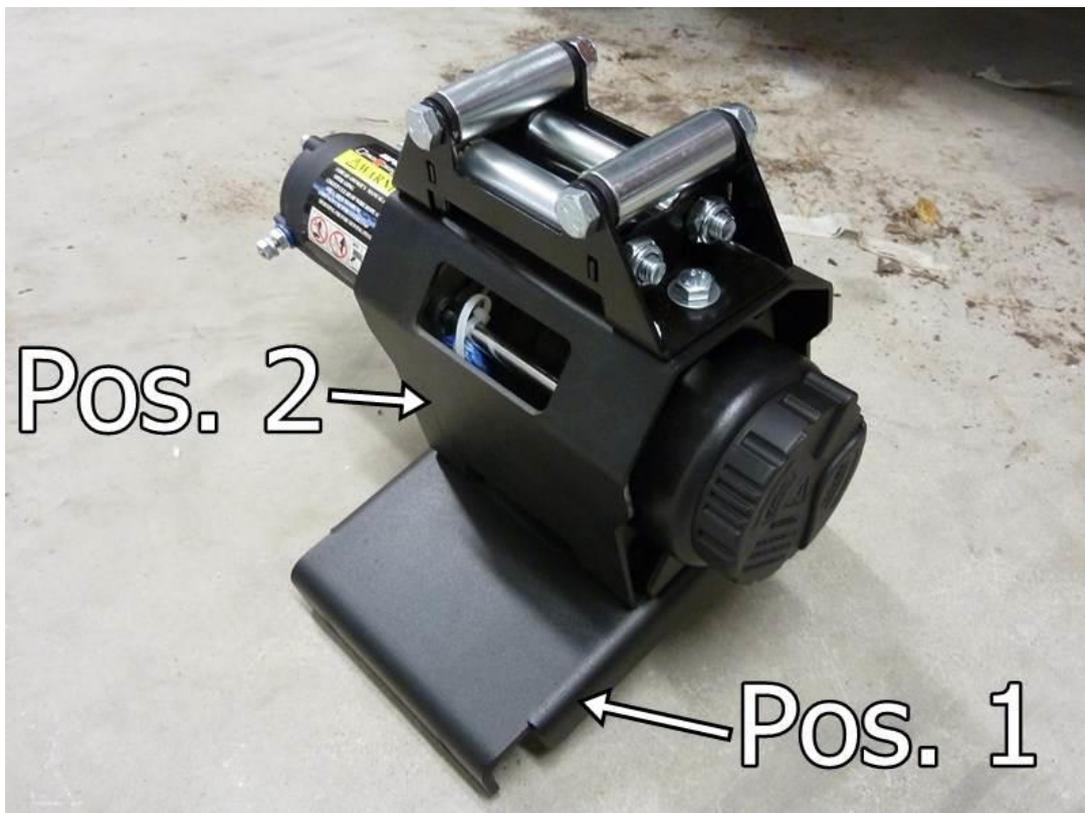

Step 2


First secure the top mounts of the adapter (pipeclamps). For easier installation pull the bottom part of the adapter away from the ATV frame.

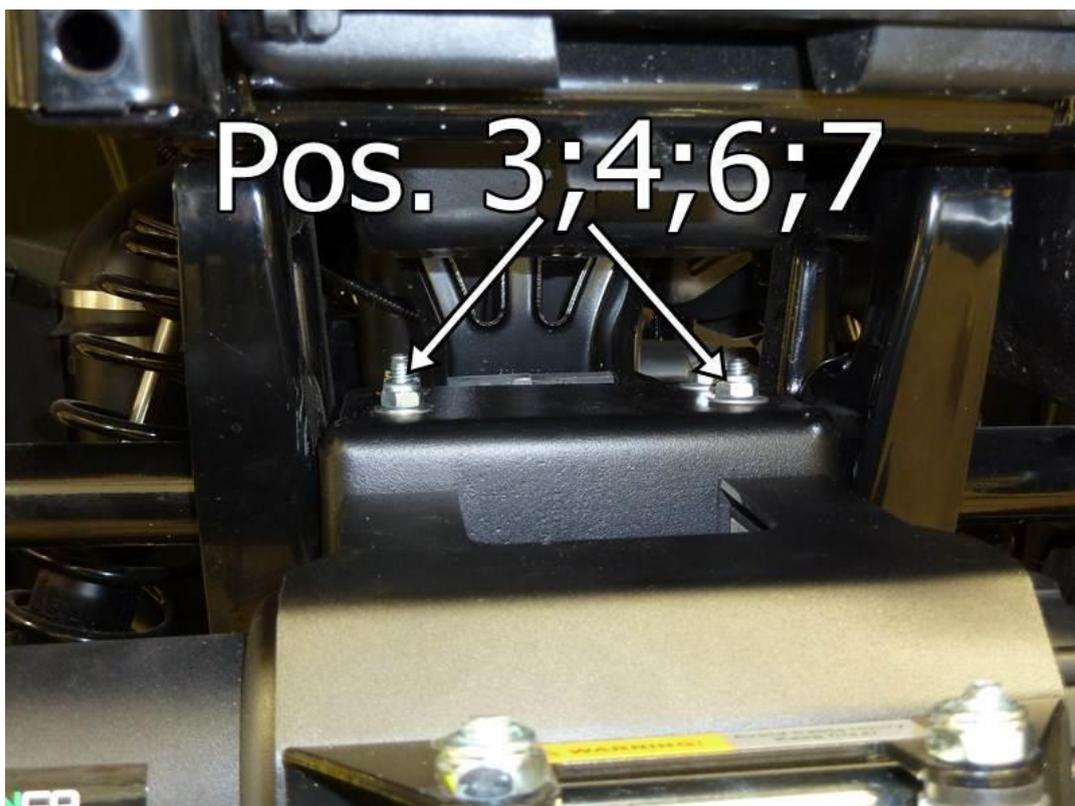

Step 3

Install winchadapter bottom bolts.

If you're using IronBaltic skidplate, then release the rear installation bolts on the skidplate, to access the winchadapter nuts.

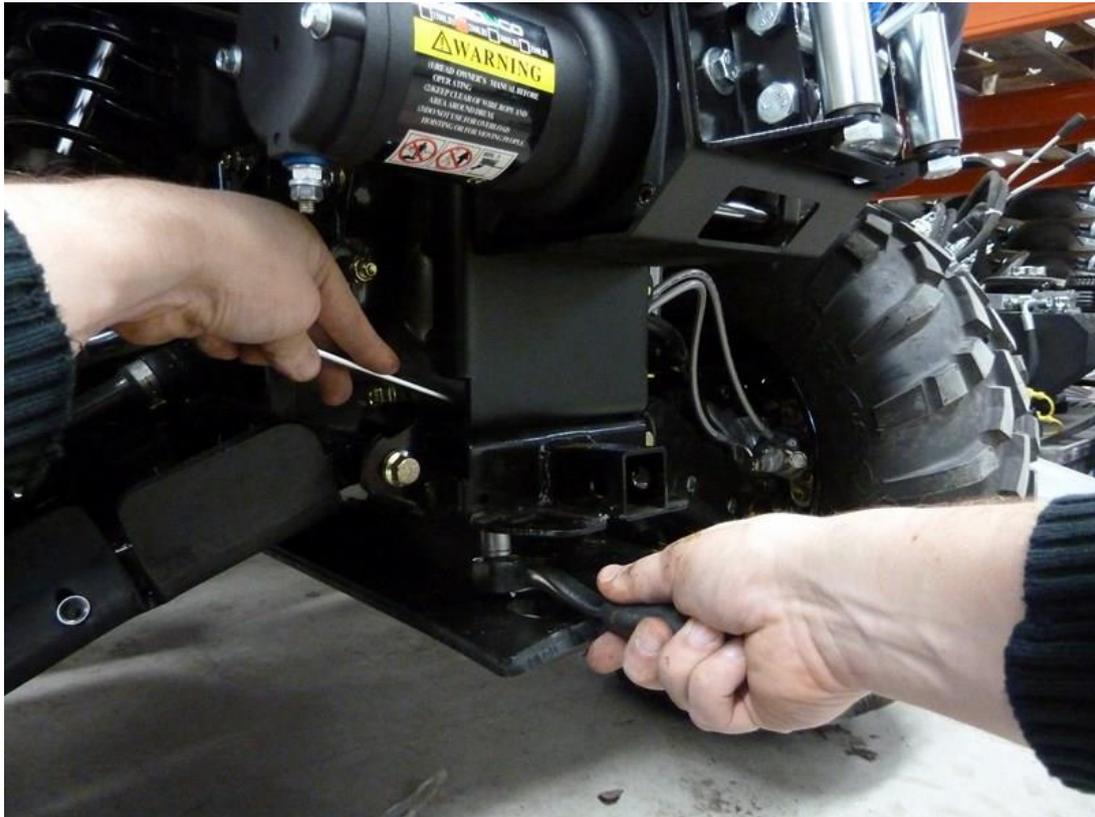

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

