

IRON BALTIC


FRONT WINCH MOUNTING KIT

HONDA

420 / 500 (2014-...)

Code 05.6100

Version 24112023

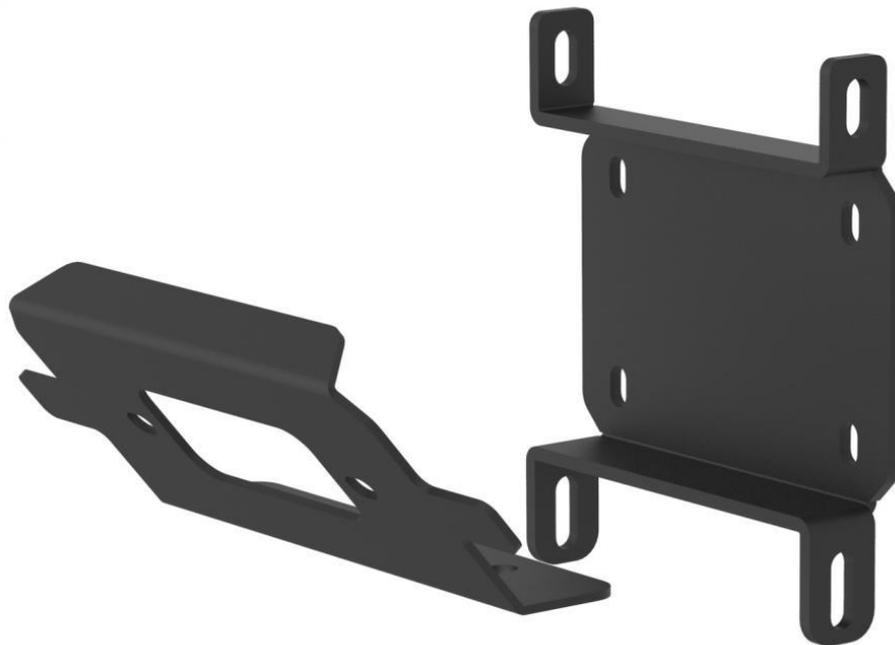

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/UTteyta3

SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	05.6101	1
2	Fairlead holder	05.6102	1
3	Distance bush	05.5406	2
4	Bolt M8x20 DIN 933	OT.02.02.180	2
5	Bolt M8x30 DIN 933	OT.02.02.200	4
6	Washer 8/20 SFS 3738	OT.04.03.030	8
7	Nut M8 Nyloc DIN 985	OT.03.02.040	2

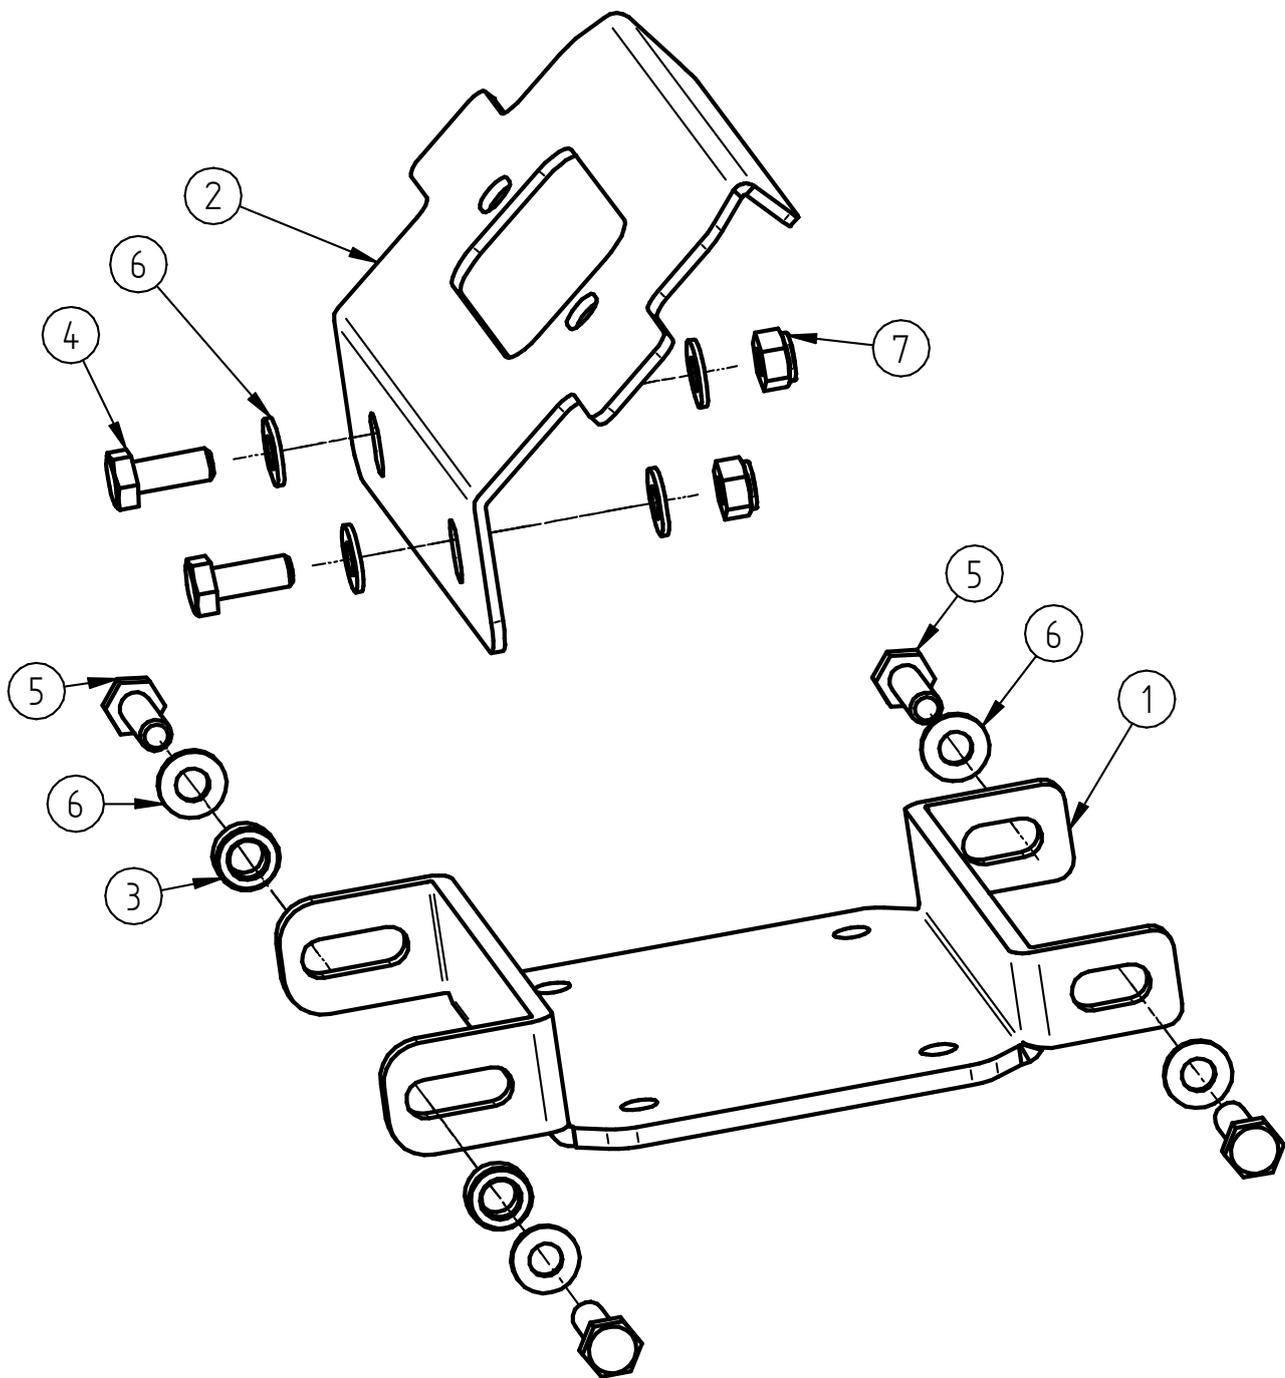

FITTING INSTRUCTIONS




Step 1

Install winch on the baseplate 05.6101, so that the baseplate longer mounting ears will face forward and winch motor will place on the right side. Mount the winch fairlead onto winch fairlead holder 05.6102. If you're using IronBaltic aluminium skidplate then it's not necessary to install fairlead holder. In that case the rollerguide will be installed onto the front part of the skidplate. If using plastic skidplate then install the fairlead holder under the plastic protection and use bolts supplied with skidplate.





Step 2

Remove four bolts holding the front bars in place and lift the bars up as high as possible. Mount the fairlead holder first, under the bars.

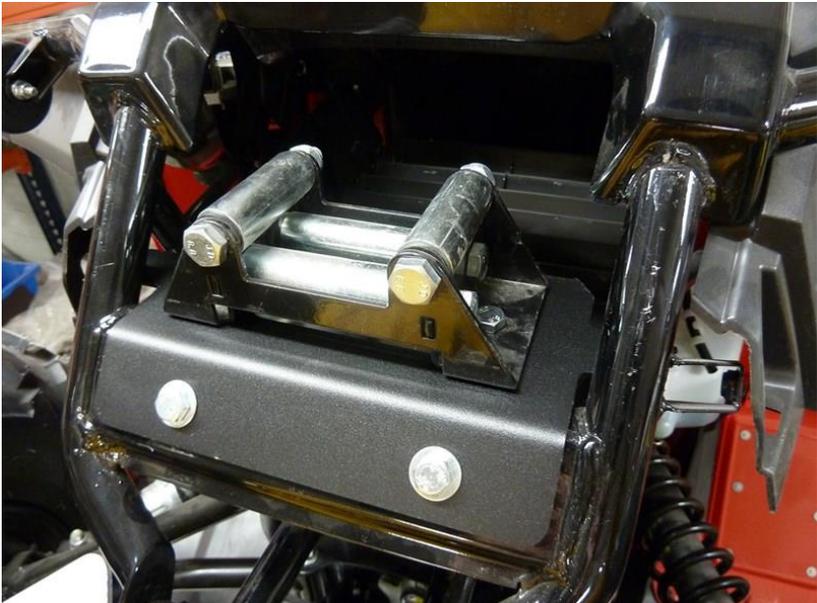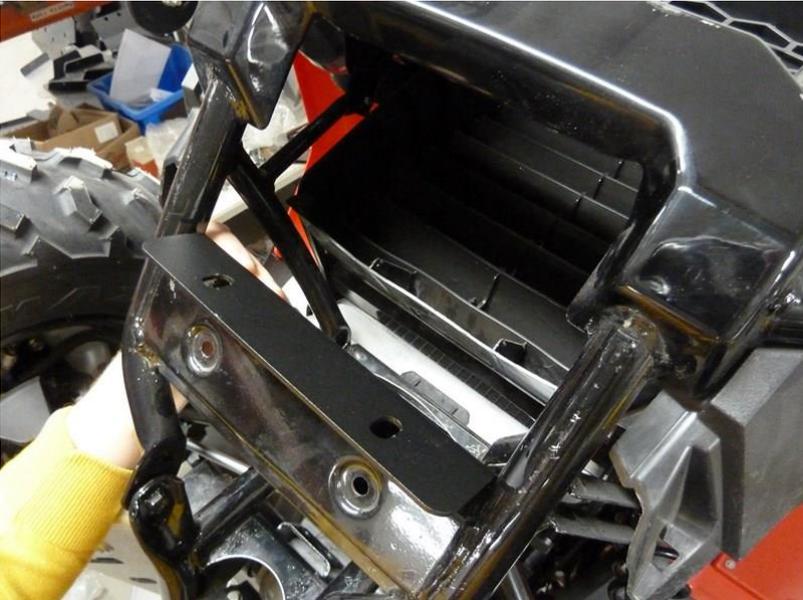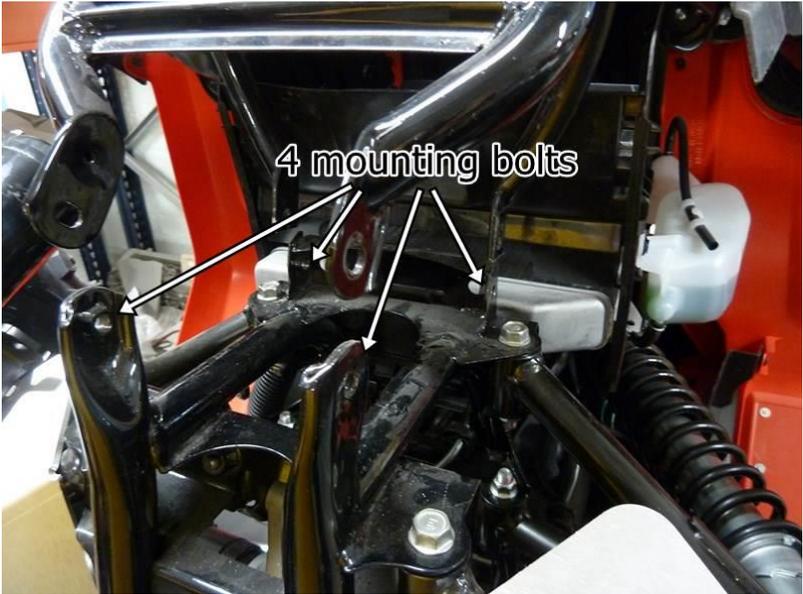

Step 3

Install the winch adapter under the front bars. Release the front bars and secure the winch adapter with M8x30 bolts to the front bar mountings. Place the distance bushes between the winch adapter and the frame.

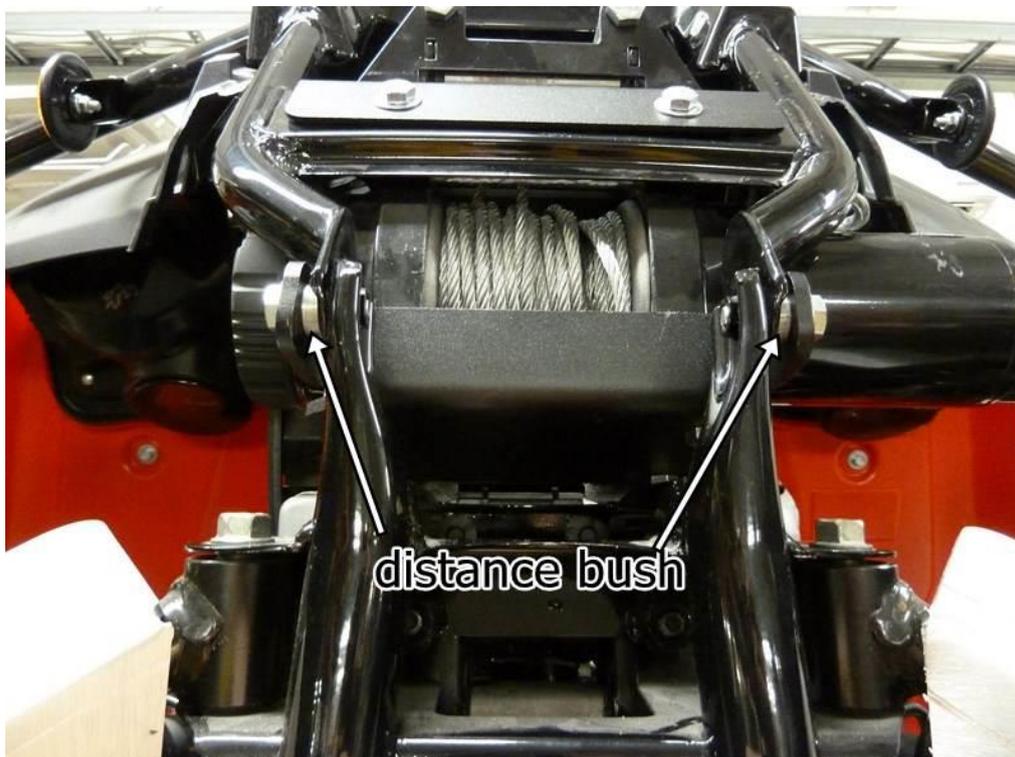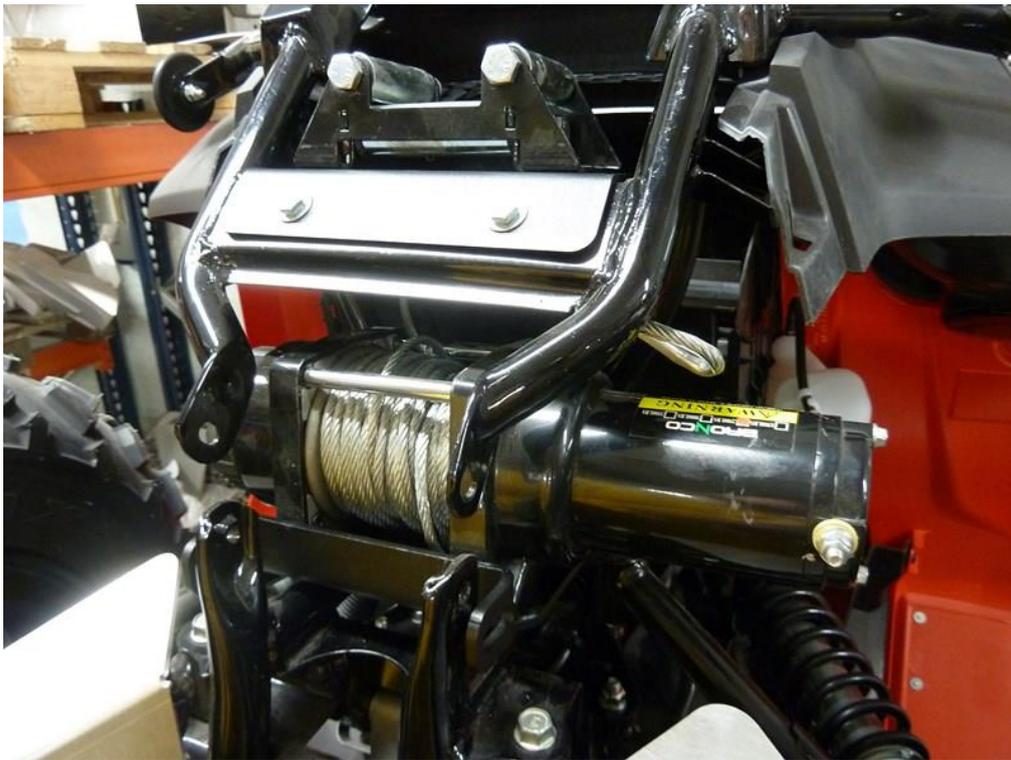

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

