

# IRON BALTIC


## FRONT WINCH MOUNTING KIT

### POLARIS

### RZR XP 1000 / 900S / 1000S

Code 05.6400

Version 24112023

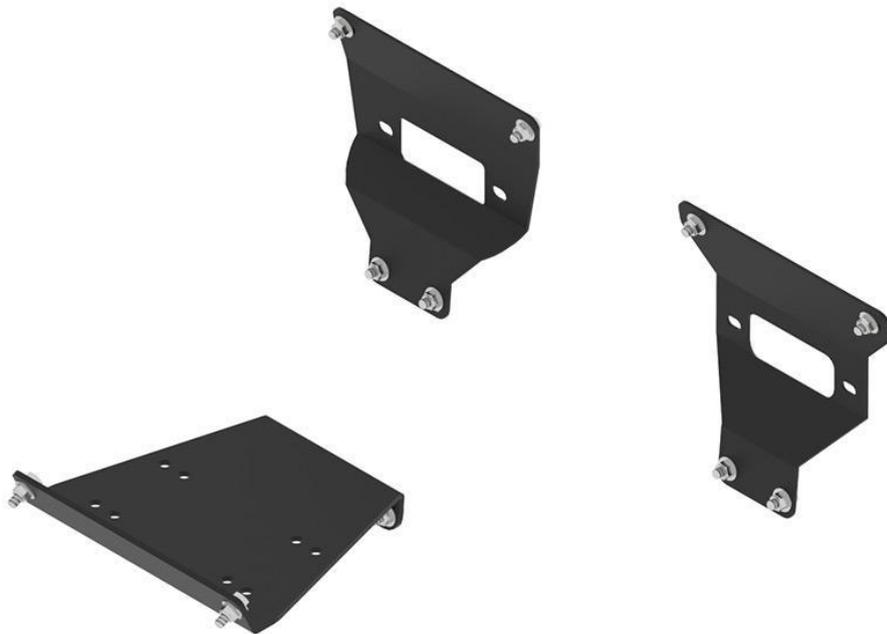

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)


DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/hKZfDjDR](http://code.ironbaltic.com/u/hKZfDjDR)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Adapter	05.6401	1
2	Fairlead holder RZR 1000	05.6402	1
3	Fairlead holder RZR 1000 S	05.6403	1
4	Bolt M8x20 DIN933	OT.02.02.180	4
5	Bolt M8x25 DIN933	OT.02.02.190	4
6	Washer 8/20 SFS3738	OT.04.03.030	12
7	Washer 8/24 DIN9021	OT.04.02.040	4
8	Nut M8 Nyloc DIN985	OT.03.02.040	8

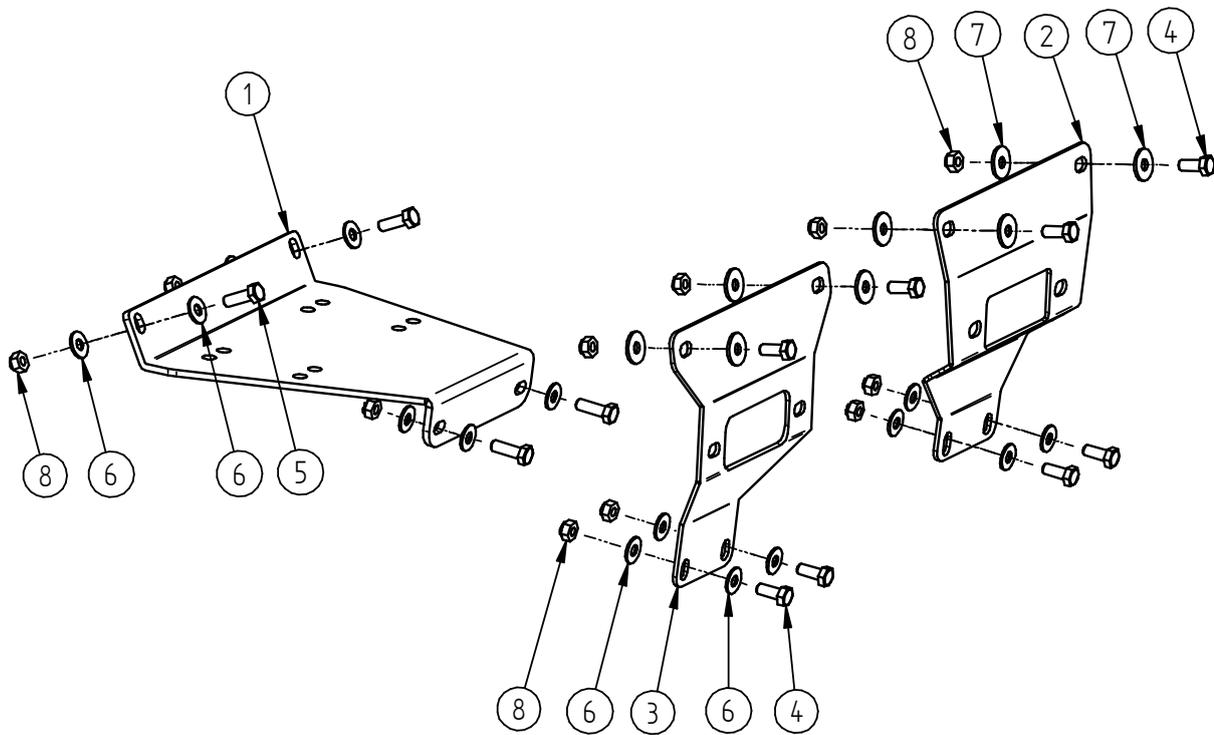

# FITTING INSTRUCTIONS

## RZR 1000


### Step 1

For easier installation remove the plastic guard in front of the radiator. To remove the guard, push two securing clips down and pull out the guard.





### Step 2

Install winch adapter 05.6401 first. Adapter situates on top of the front differential, between two frame tubes. Make sure that the brake hose and differential breather clears the adapter. Afterwards install the winch.

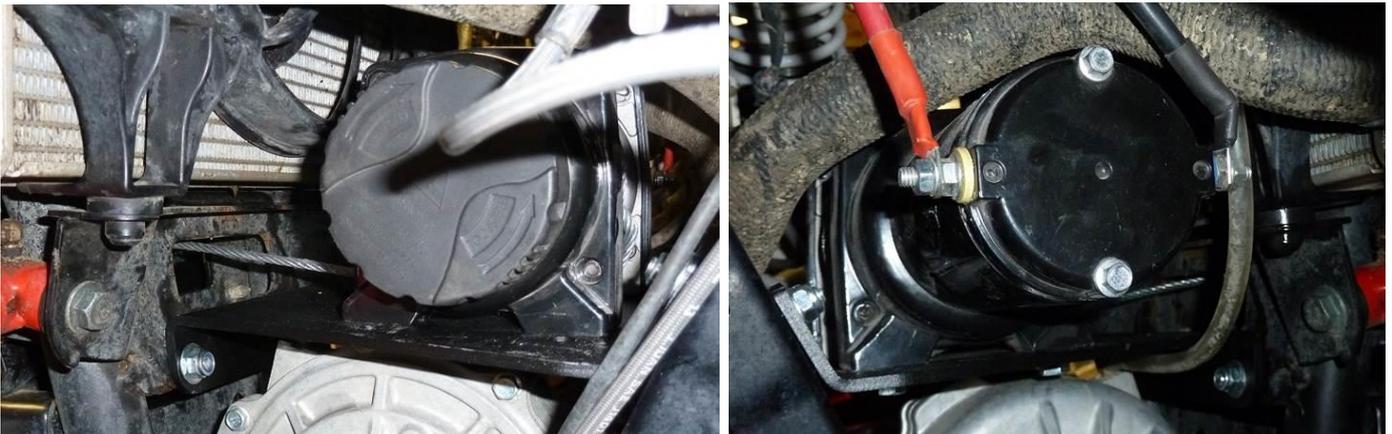

### Step 3

Install roller fairlead to the fairlead holder 05.6402 (Pos.2) and then to the ATV. You can access the installation nuts easier from the opening from step one.

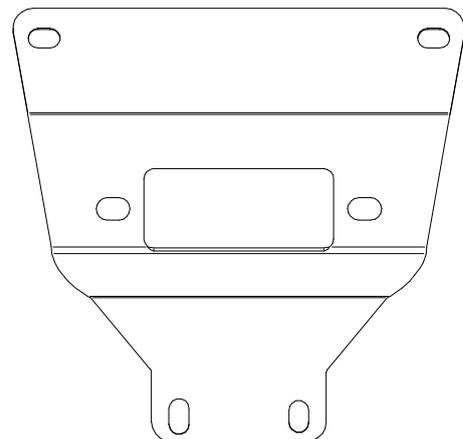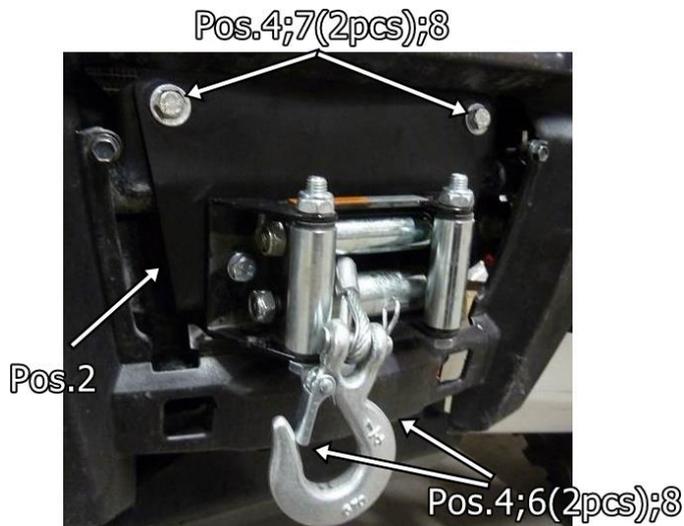

RZR 1000

# FITTING INSTRUCTIONS

## RZR 900S / 1000S


### Step 1

For easier installation remove the plastic guard in front of the radiator. To remove the guard, push two securing clips down and pull out the guard.





### Step 2

Install winch adapter 05.6401 first. Adapter situates on top of the front differential, between two frame tubes. Make sure that the brake hose and differential breather clears the adapter. Afterwards install the winch.

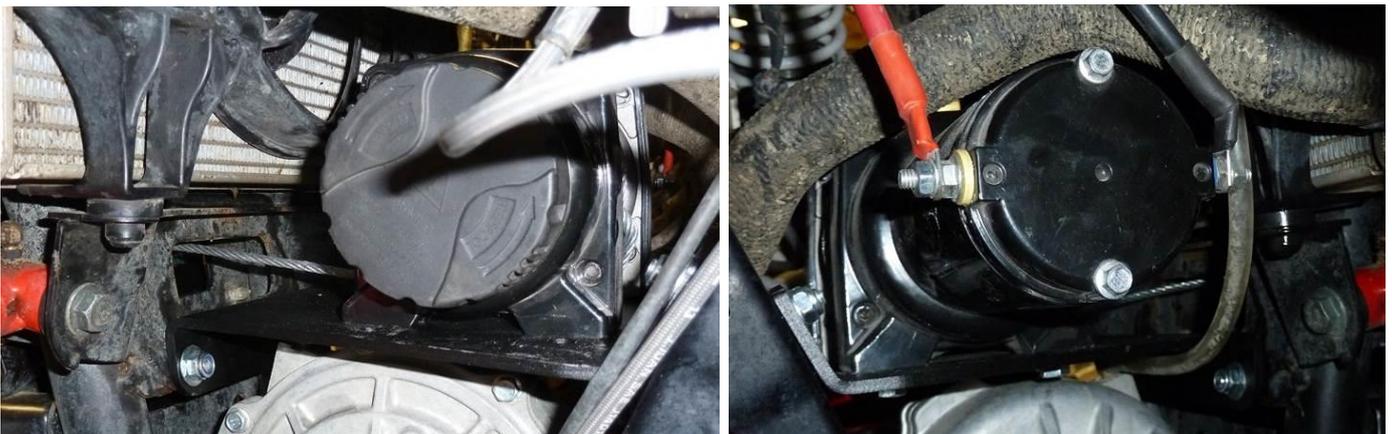

### Step 3

Install roller fairlead to the fairlead holder 05.6403 (Pos. 3) and then to the ATV. You can access the installation nuts easier from the opening from step one.

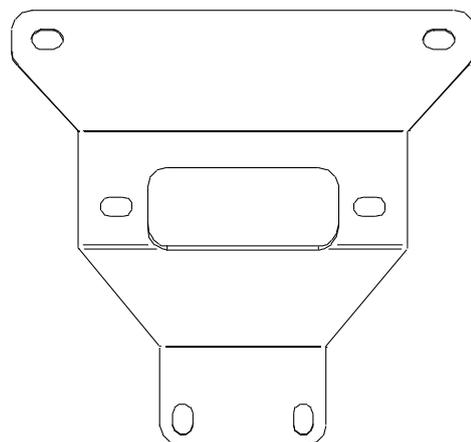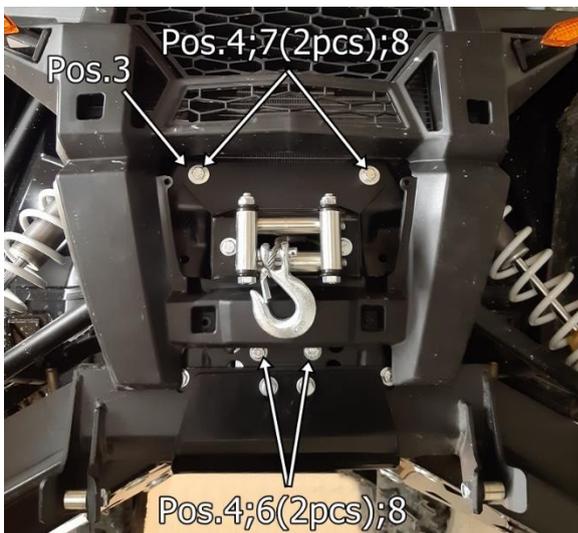

RZR 900 S / 1000 S





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

