

IRON BALTIC

REAR WINCH MOUNT

CFORCE

850 / 1000

Code 05.7700

Version 29042024



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/Vw0k6X2D

SPECIFICATION


Pos.	Description	Code	Amount
1	Winch plate	05.7701K	1
2	Fairlead holder	05.1202	1
3	Distance plate	05.7705	1
4	Bolt M6x25 DIN933	OT.02.02.070	2
5	Washer Ø6/15 SFS3738	OT.04.03.020	2

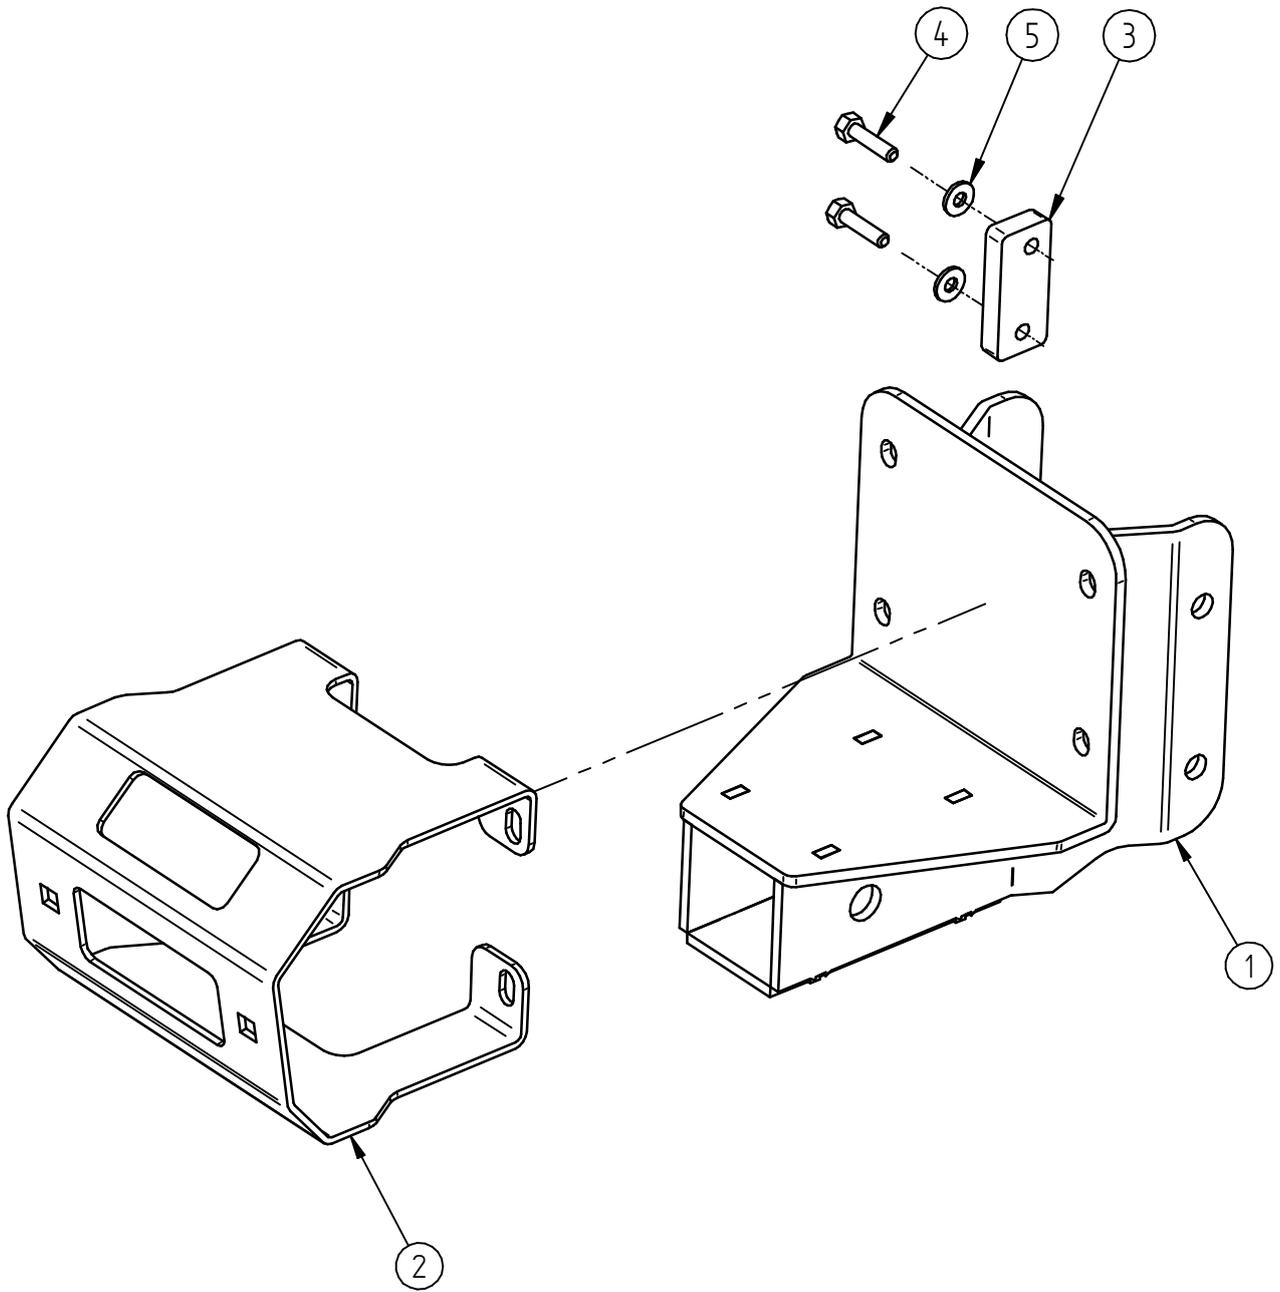

FITTING INSTRUCTIONS



Step 1

Remove towing hook and frame with bolts.

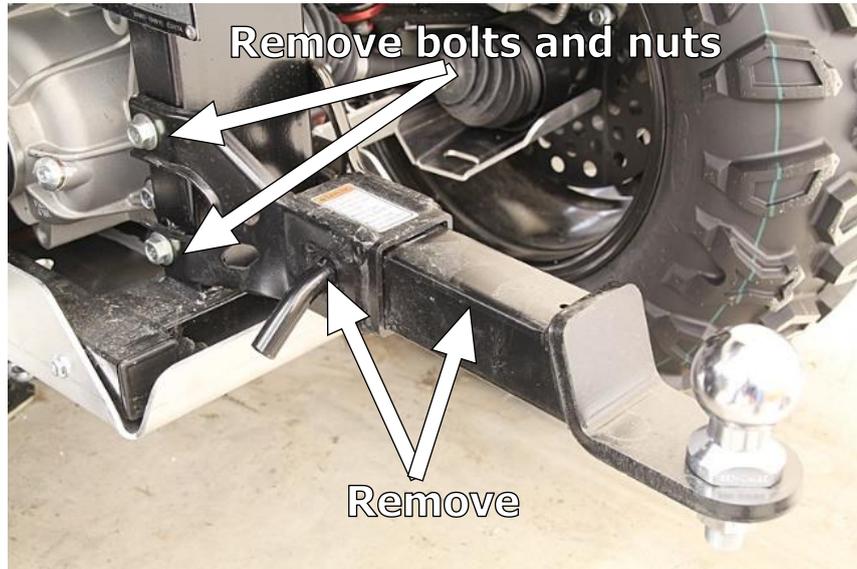

Step 2

Install fairlead to fairlead holder 05.1202 then install winch and fairlead holder to the winch adapter 05.7701K.

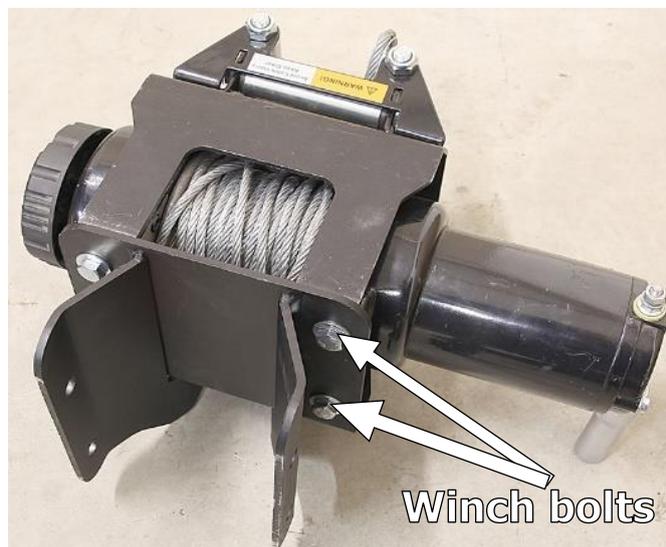
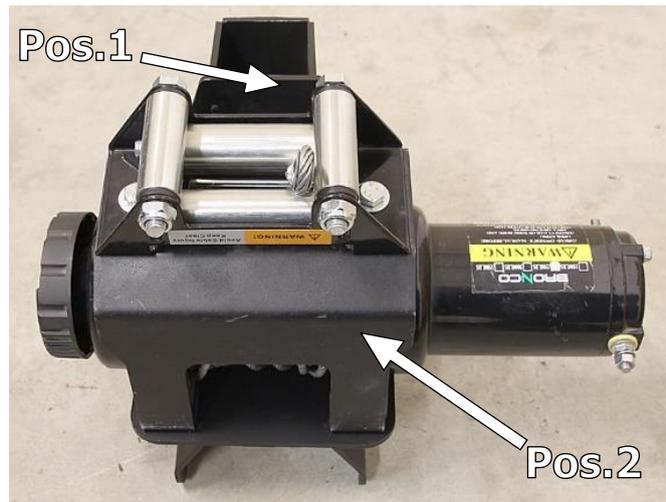


Step 3

Install winch adapter and towing hook.



If necessary, install distance plate (Pos. 3) between trailer socket holder and ATV frame. For fastening use M6x25 bolts (Pos. 4) and Ø6 washers (Pos. 5).

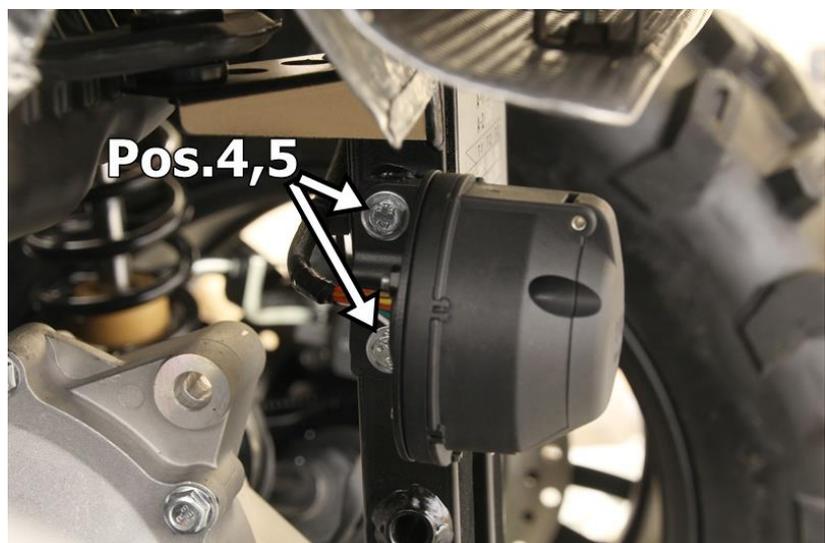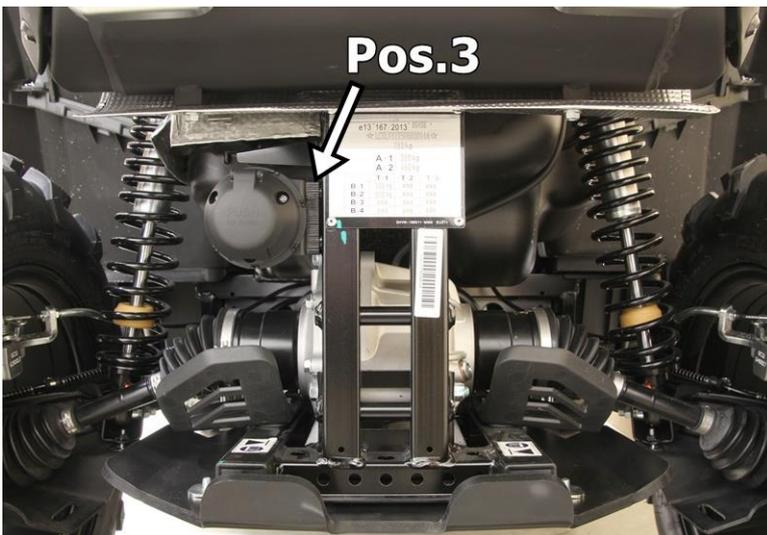

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

