

IRON BALTIC

REAR WINCH MOUNT

YAMAHA

Kodiak 450 (2017-...)

Code 05.8100

Version 25112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/SMXo2hWO

SPECIFICATION

Pos.	Description	Code	Amount
1	Winch plate	05.8101K	1
2	Fairlead holder	05.1202	1
3	Universal hitch	15.1001K	1
4	Hitch pin	15.1003	1
5	Pin	15.1403	1
6	Hitch extension	15.1901K	1
7	Spring pin 3mm	OT.07.01.020	2
8	Pipe clamp bracket 32mm	OT.05.04.020	2
9	Pipe clamp 32mm	OT.05.01.020	2
10	Bolt M8x35 DIN 933	OT.02.02.210	4
11	Bolt M10x1,25-20 DIN 961	OT.02.08.330	2
12	Bolt M12x40 DIN 933	OT.02.02.410	2
13	Washer M8/20 SFS 3738	OT.04.03.030	8
14	Washer 10/20 DIN 125	OT.04.01.040	2
15	Washer 12/24 DIN 125	OT.04.01.050	4
16	Nut M8 Nyloc DIN 985	OT.03.02.040	4
17	Nut M12 Nyloc DIN 985	OT.03.02.060	2

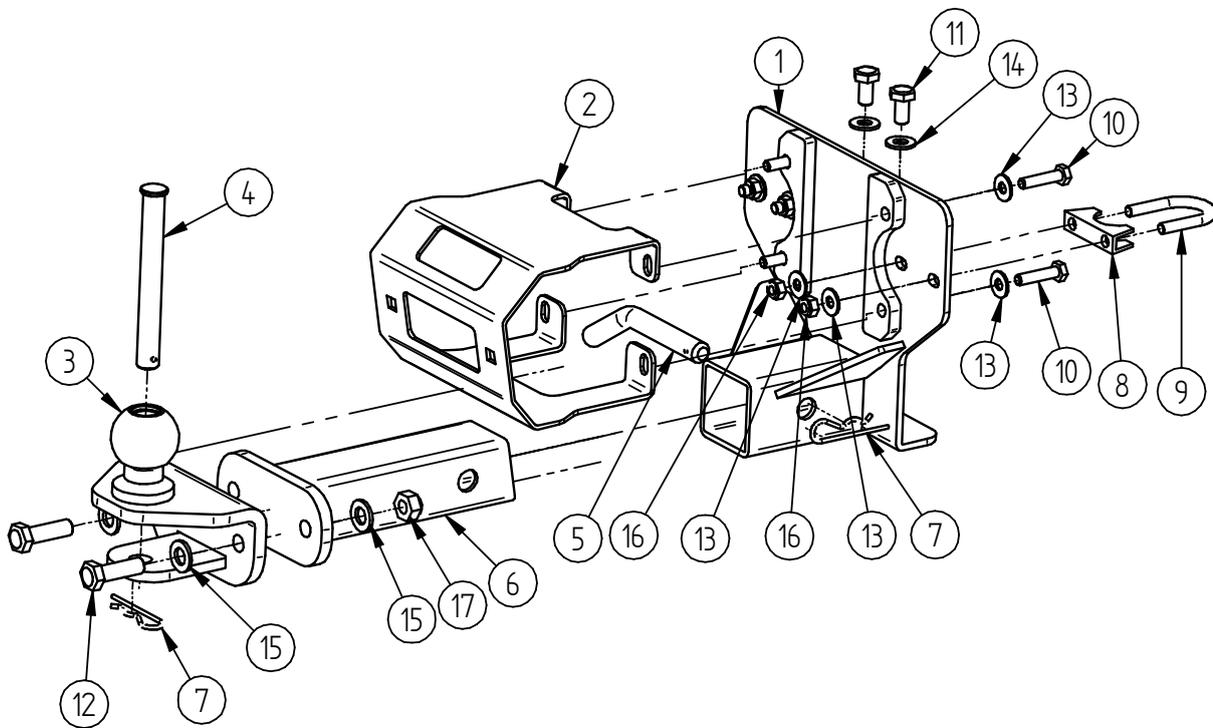

FITTING INSTRUCTIONS


Step 1

Remove original bolts.




Step 2

Install fairlead to fairlead holder.

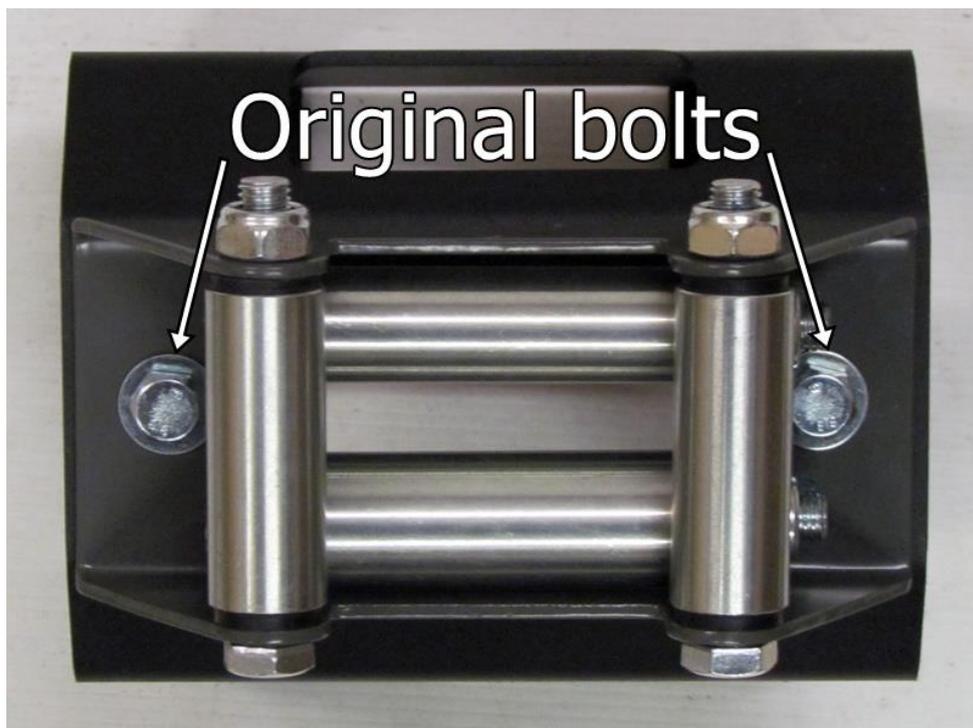


Step 3

Install fairlead holder 05.1202 and winch to the winch adapter 05.8101K.

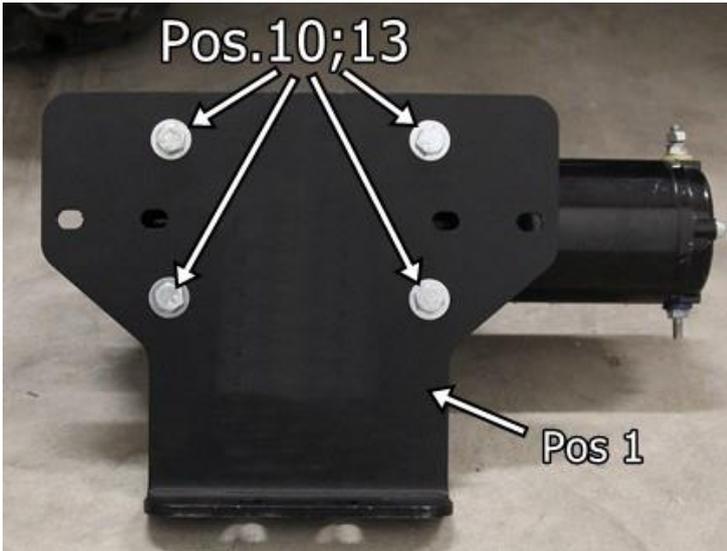


Step 4

Install winch adapter. You need 17mm socket with extension and joint adapter for installation! Install bottom M10 bolts first, tighten them with hand as much as possible. Then install U-bolts. Tighten all bolts and nuts!

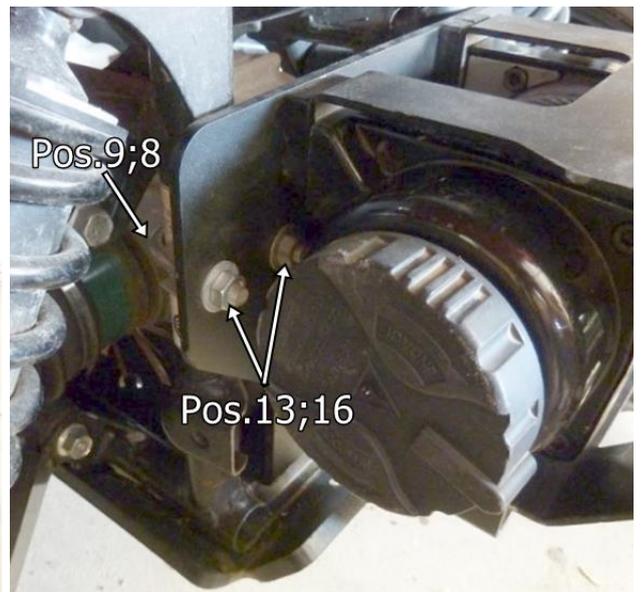

Step 5

Assemble hitch extension.

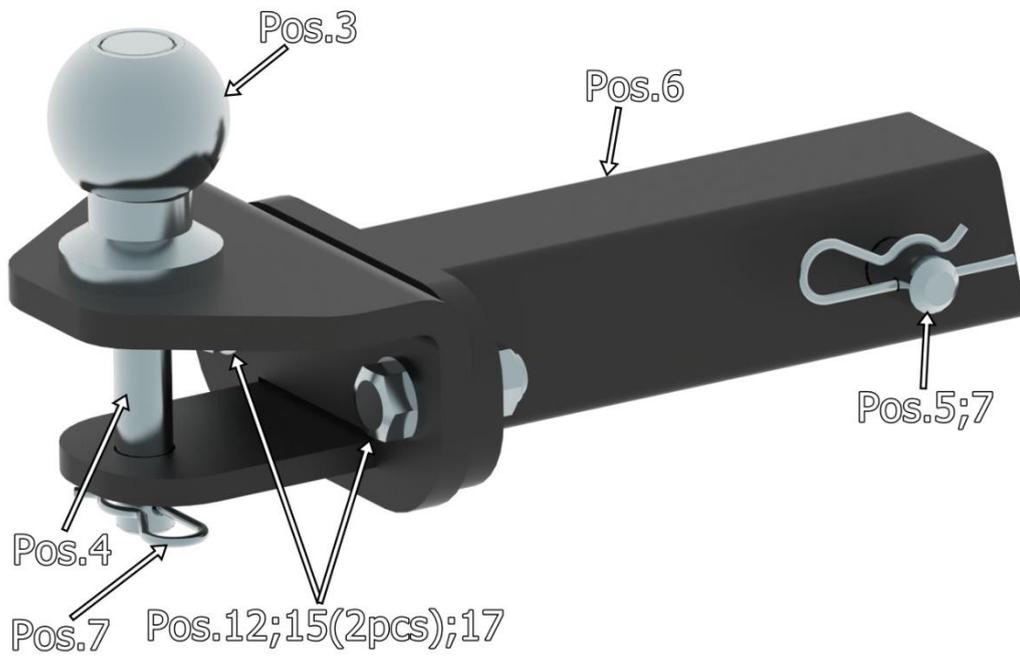

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

