

IRON BALTIC

FRONT WINCH MOUNT

POLARIS

Scrambler 1000 S

Code 05.9900

Version 26112023



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/fnUEMUyX


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Winch adapter	05.9901K	1
2	Fairlead adapter	05.9903	1
3	Installation bracket	02.12909	2
4	Bolt M8x20 DIN933	OT.02.02.180	6
5	Washer Ø8/20 SFS3738	OT.04.03.030	6

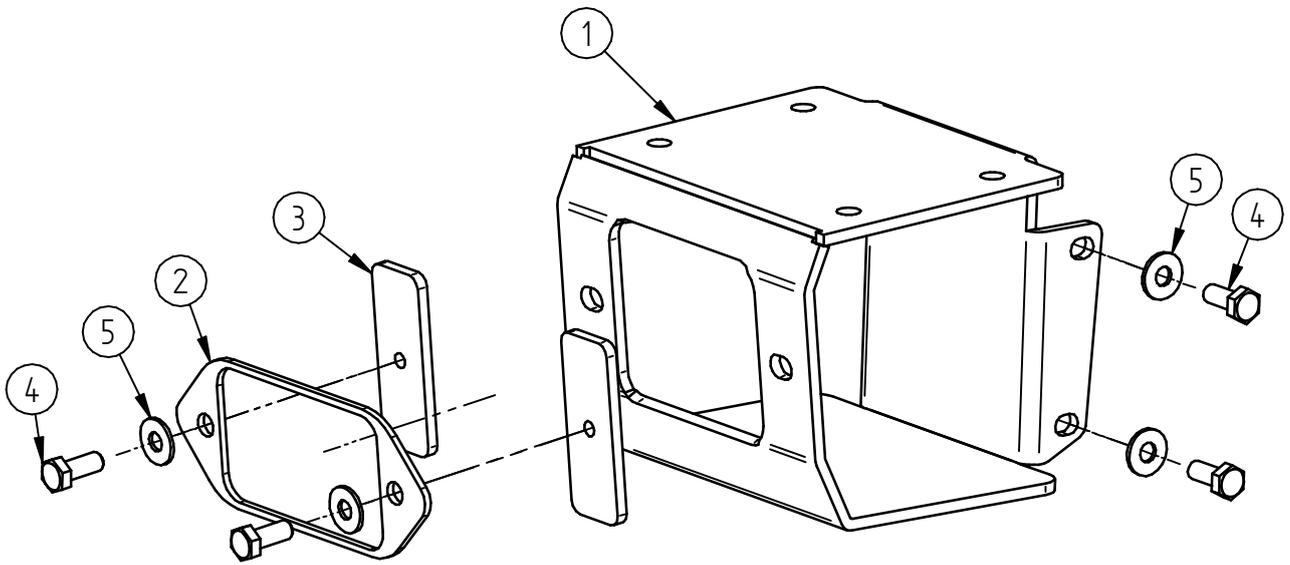

FITTING INSTRUCTIONS

Step 1

Install rope fairlead and winch to adapter, use bolts and nuts supplied with winch.
NB! If you are using wire instead of rope and roller fairlead, install only winch to the adapter and see Step 5!



Step 2

Remove original front bumper.



Step 3

Install the winch adapter to the ATV.





Step 4

Re-install front bumper.



Step 5

If you are using winch with wire instead of rope and fairlead with rollers, use fairlead adapter plate Pos.2 and installation plates Pos.3 to install fairlead.

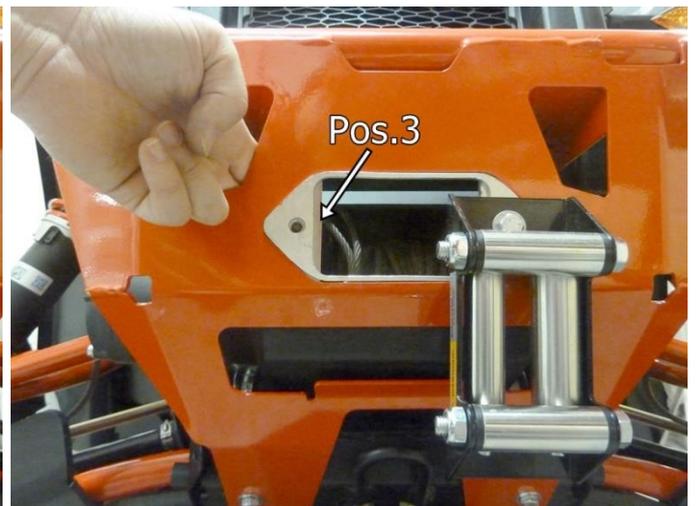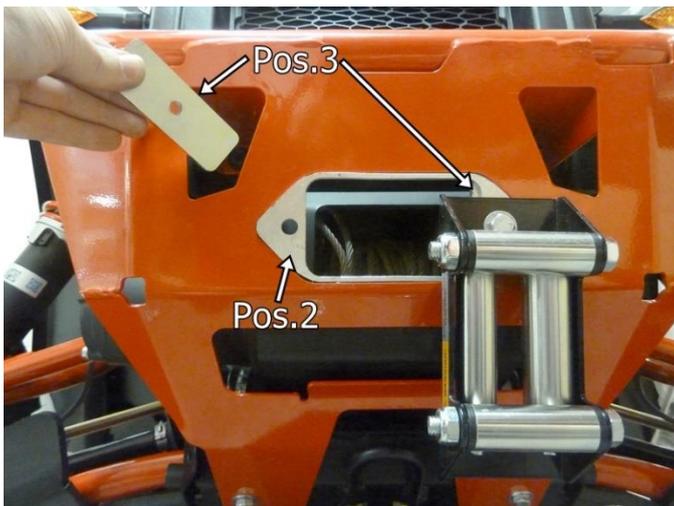

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

