

IRON BALTIC

FRONT PROTECTION

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/v1PqZYN6

KAWASAKI

KVF 650 / 750 BruteForce (2010-...)

Code 09.700

Version 27112023





Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	09.701K	1
2	Right bracket	09.704	1
3	Left bracket	09.705	1
4	Fixing plate	02.4011	2
5	Bolt M8x20 DIN933	OT.02.02.180	2
6	Bolt M6x20 DIN7991	OT.02.04.030	4
7	Bolt M6x25 DIN7991	OT.02.04.040	2
8	Bolt M8x20 DIN7991	OT.02.04.150	2
9	Washer 8/20 SFS 3738	OT.04.03.030	4
10	Conical washer 6	14.502	6
11	Conical washer 8	14.501	2
12	Nut M8 Nyloc DIN985	OT.03.02.040	2

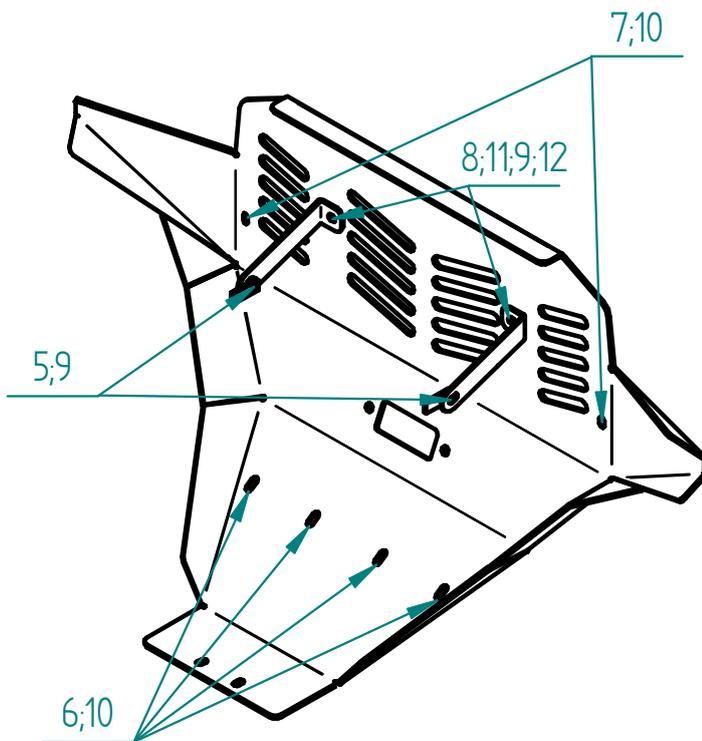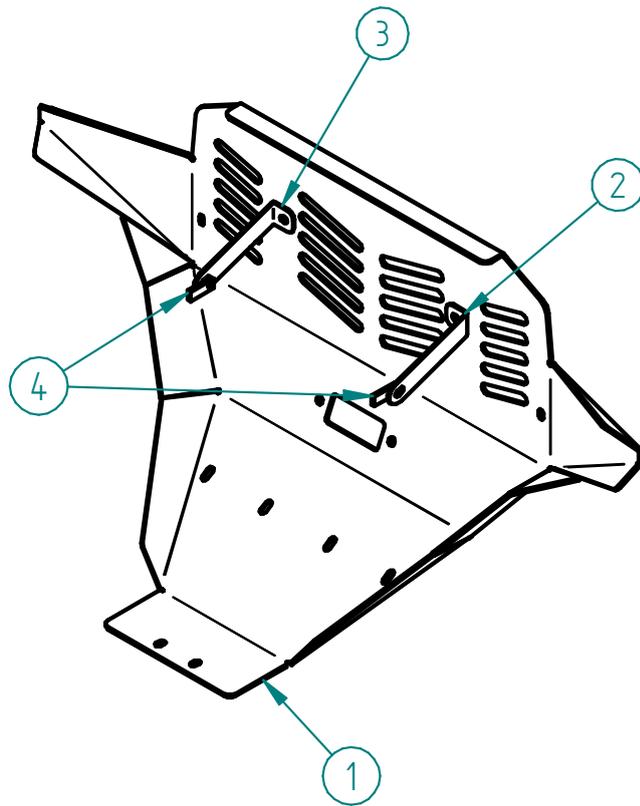

FITTING INSTRUCTIONS

Step 1 Remove plastic bumper and front part of the skid plate.



Step 2 Install front protection, use bolts M6x25 and M6x20.



Step 3

Install brackets 09.704 and 09.705, use bolts M8x20 DIN933, washers 8/20, fixing plates 02.4011, bolts M8x20 DIN7991 and nuts M8.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

