

# IRON BALTIC


## FRONT PROTECTION

### CFORCE

### 850 / 1000

Code 09.800

Version 27112023

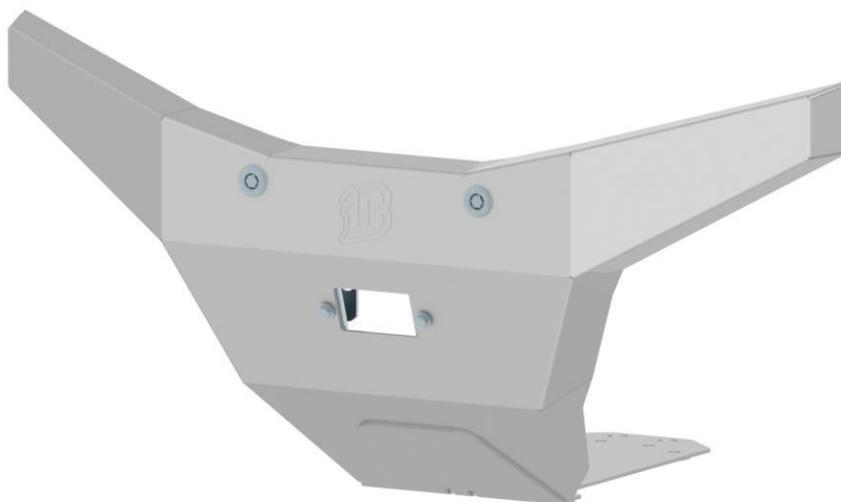

DOWNLOAD MULTILINGUAL  
USER MANUAL




[code.ironbaltic.com/u/GstBs6LC](https://code.ironbaltic.com/u/GstBs6LC)

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	09.801K	1
2	Front skid plate	09.807K	1
3	Frame	09.809K	1
4	Installation plate	09.811	1
5	Dished washer	14.503	2
6	Bolt M6x25 DIN933	OT.02.02.070	1
7	Bolt M8x20 DIN933	OT.02.02.180	4
8	Bolt M8x70 DIN933	OT.02.02.260	3
9	Washer Ø6/15 SFS3738	OT.04.03.020	1
10	Washer Ø8/20 SFS3738	OT.04.03.030	5

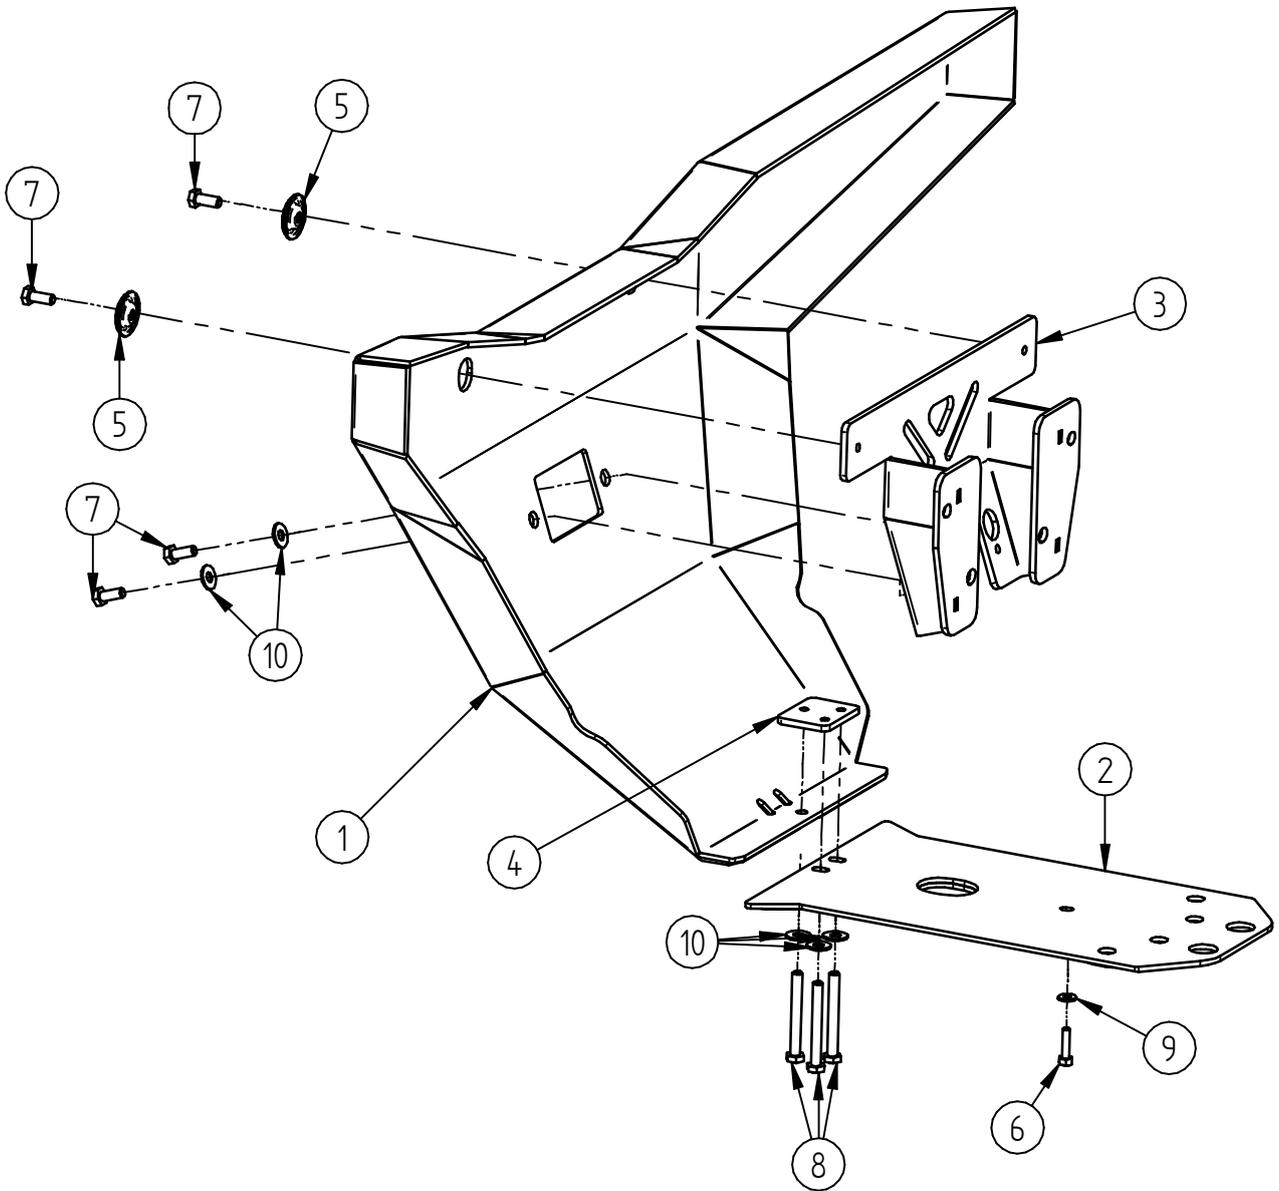

# FITTING INSTRUCTIONS


## Step 1

Remove original front protections and winch fairlead.




## Step 2

Install frame 09.809K with original bolts.

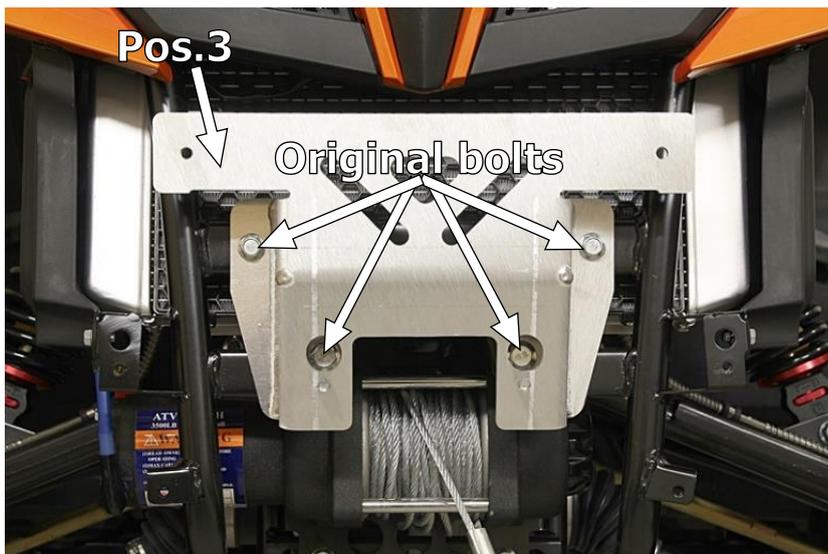




## Step 3

Install front protection 09.801K.

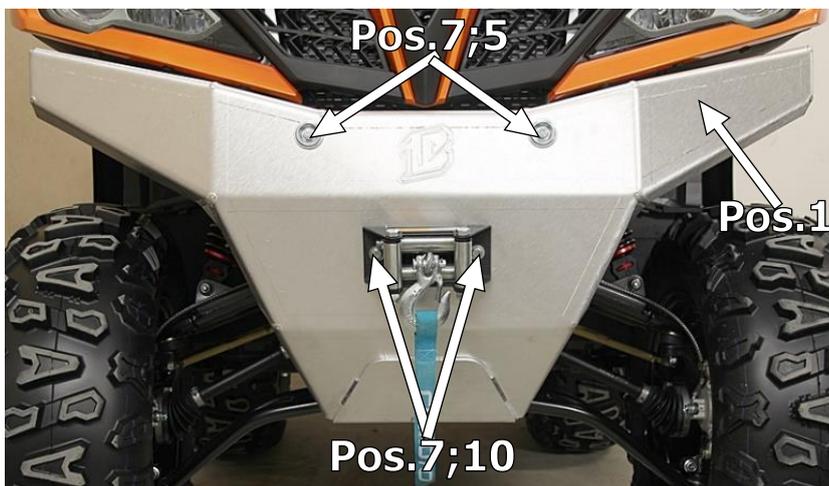

## Step 4

If IRON BALTIC skid plate is used, then install front protection connecting plate 09.807K. If front protection is used with CForce original skid plate, then drill hole for bolt (see Picture).

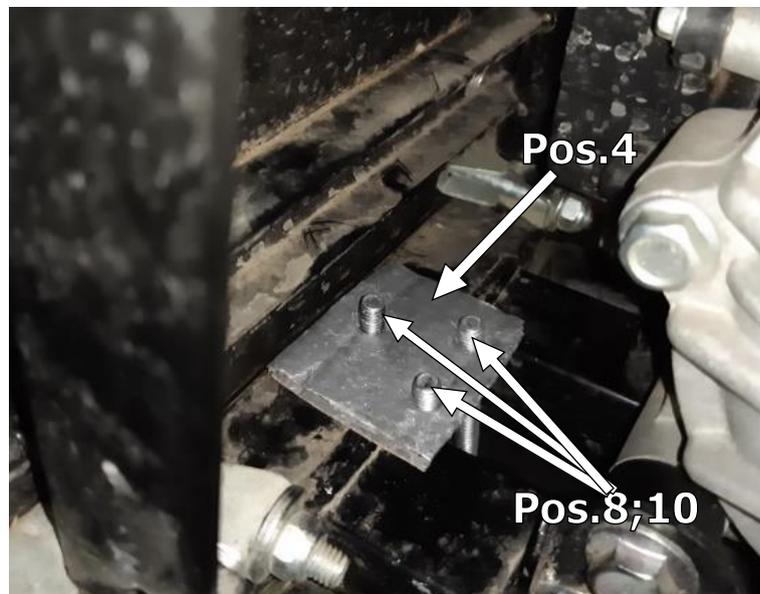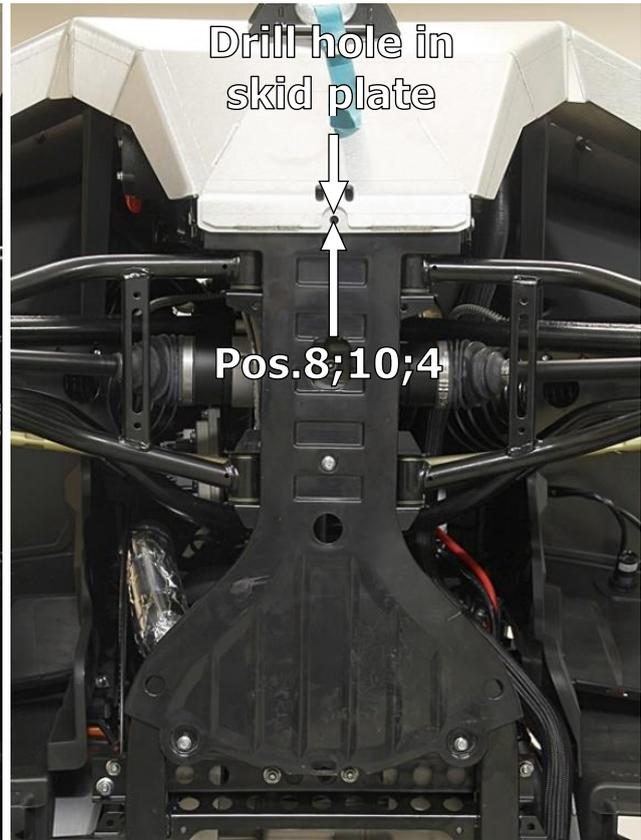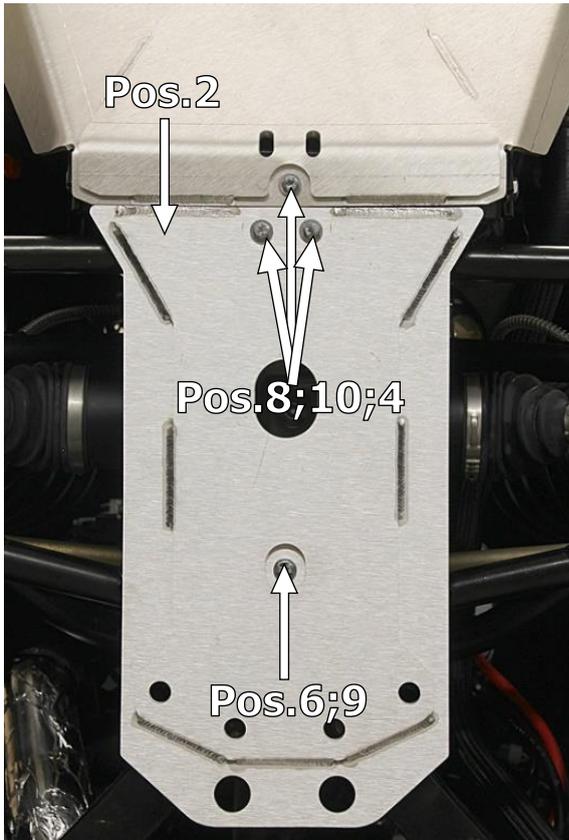





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

