

IRON BALTIC


BED WALL EXTENDER

POLARIS

570 BigBoss

Code 14.10600

Version 29112023

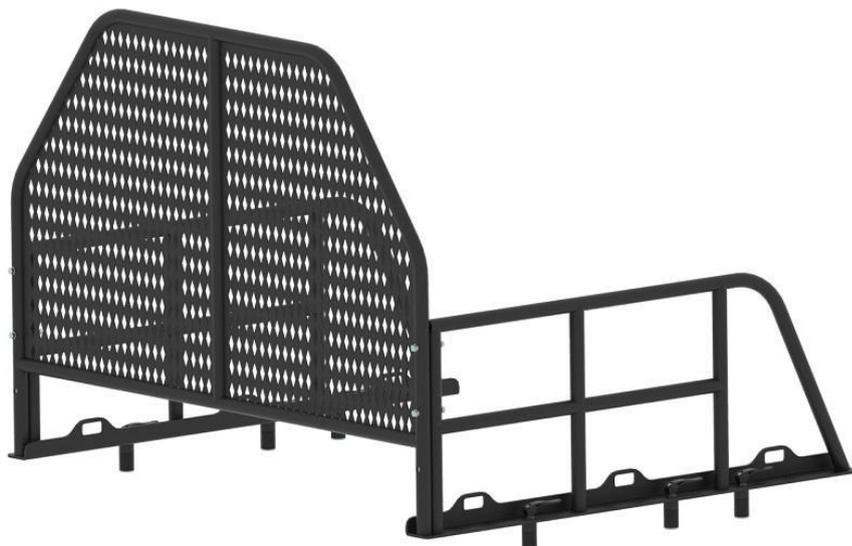

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/qYEMS8TH

SPECIFICATION

Pos.	Description	Code	Amount
1	Left side	14.10601K	1
2	Support arc	14.10604K	1
3	Right side	14.10605K	1
4	Eccentrik clamp	14.10000	6
5	Bolt M6x60 DIN933	OT.02.02.140	4
6	Washer 6/15 SFS3738	OT.04.03.020	8
7	Nut M6 Nyloc DIN985	OT.03.02.030	4

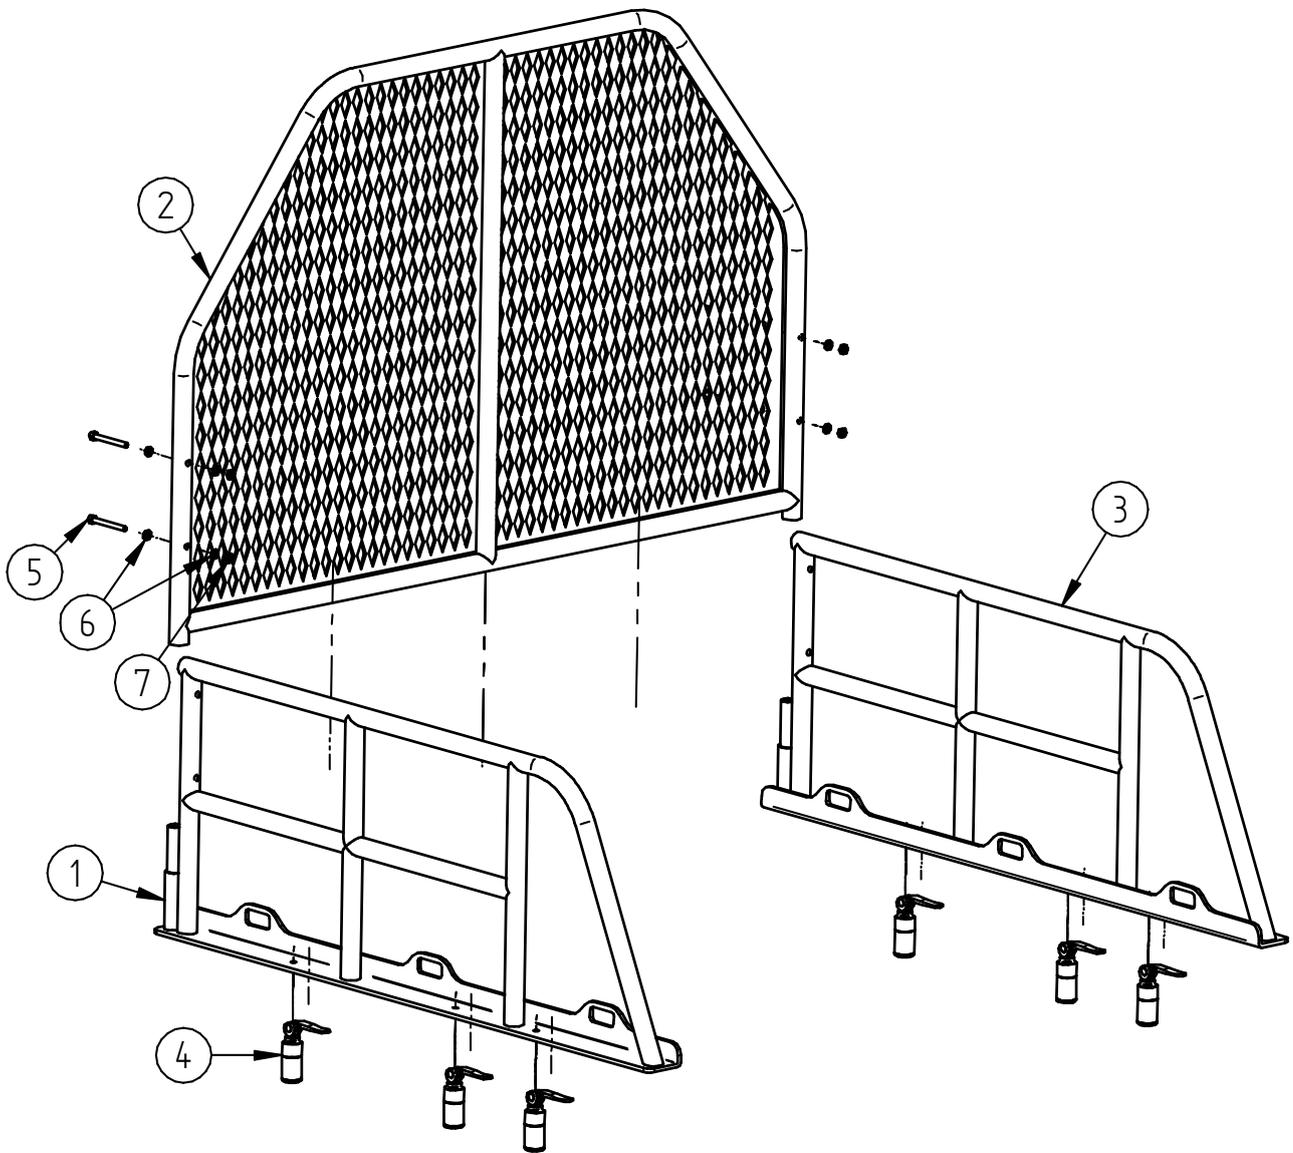

FITTING INSTRUCTIONS

Step 1 Install eccentric clamps to the right and left side.



Step 2 Install sides to the cargo box. Do not tighten eccentric clamps!



Step 3 Install support arc and tighten eccentric clamps!



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

