

IRON BALTIC


BED WALL EXTENDER

CAN AM

Outlander 6x6

Code 14.10700

Version 29112023

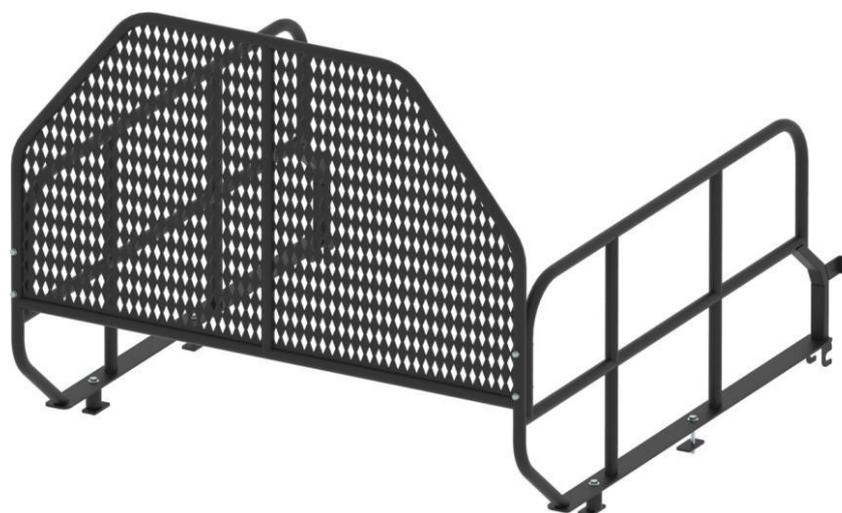

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/EtxQ3LPo

SPECIFICATION

Pos.	Description	Code	Amount
1	Right frame	14.10701K	1
2	Back support	14.10702K	1
3	Left frame	14.10718K	1
4	Installation plate	14.10719	4
5	Bolt M6x60 DIN 933	OT.02.02.140	4
6	Bolt M8x70 DIN 933	OT.02.02.260	4
7	Washer 6/15 SFS 3738	OT.04.03.020	8
8	Washer 8/20 SFS 3738	OT.04.03.030	4
9	Nut M6 Nyloc DIN 985	OT.03.02.030	4


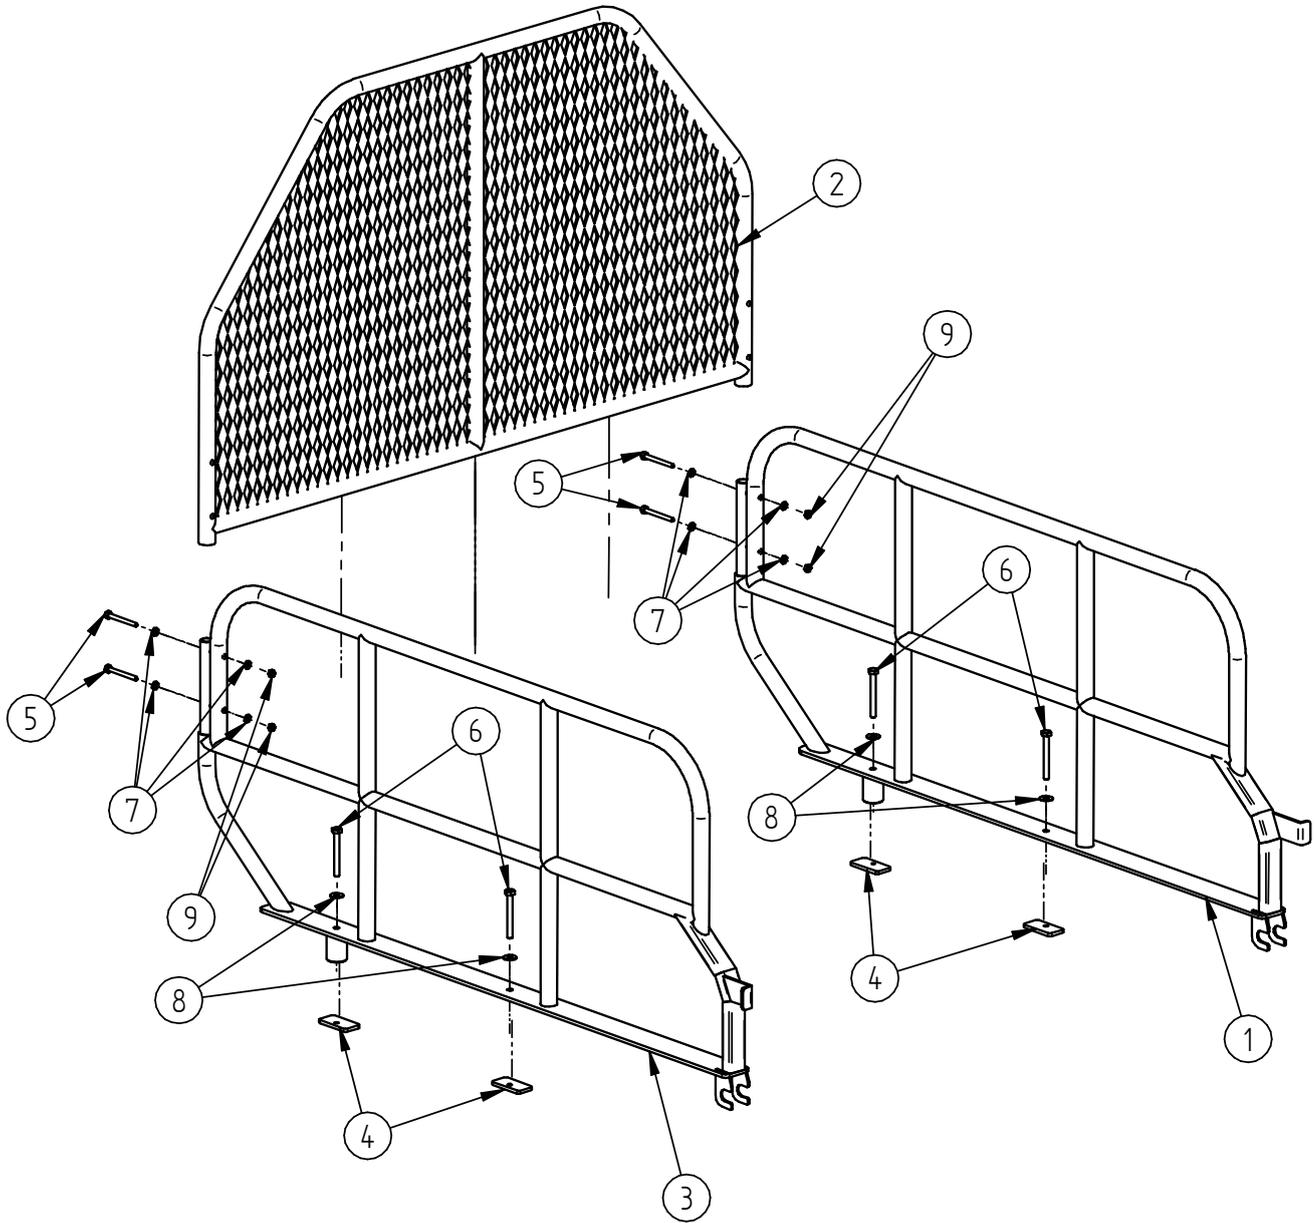


FITTING INSTRUCTIONS

Step 1 Remove original box sides.



Step 2 Install right frame 14.10701K and left 14.10718K frame. Use plates 14.10723. We recommend using thread lock on bolts!

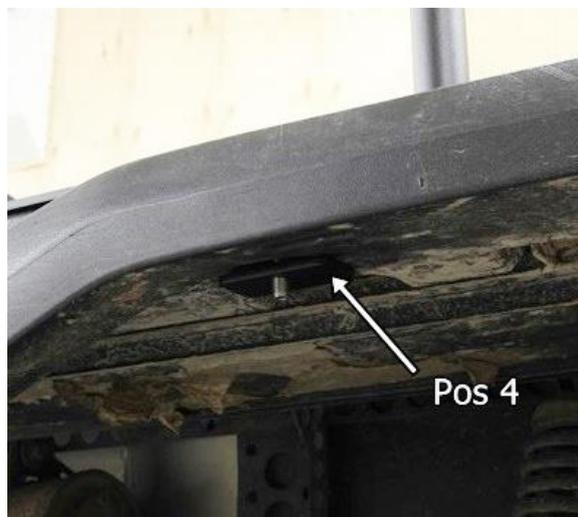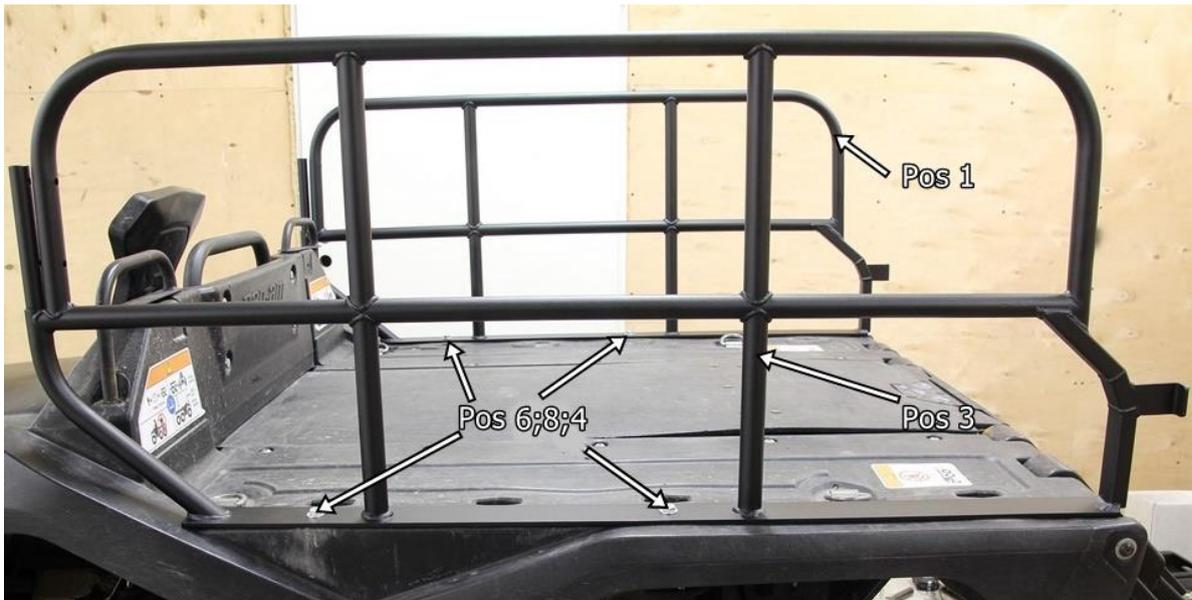

Step 3

Install back support 14.10702K.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

