

# IRON BALTIC

## ECCENTRIC CLAMP

## CFMOTO / SEGWAY

Code 14.11000

Version 01122023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)


DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/744mO4SD](http://code.ironbaltic.com/u/744mO4SD)



# SPECIFICATION

Pos.	Description	Code	Amount
1	Eccentric bolt	OT.05.03.010-A	1
2	Eccentric slider	OT.05.03.010-B	1
3	Eccentric washer	OT.05.03.010-C	1
4-1	Plastic bush (CFMoto)	14.11001	1
4-2	Plastic bush (Segway)	14.11004	1
5	Rubber bush	14.11002	1
6	Nut	14.10003	1

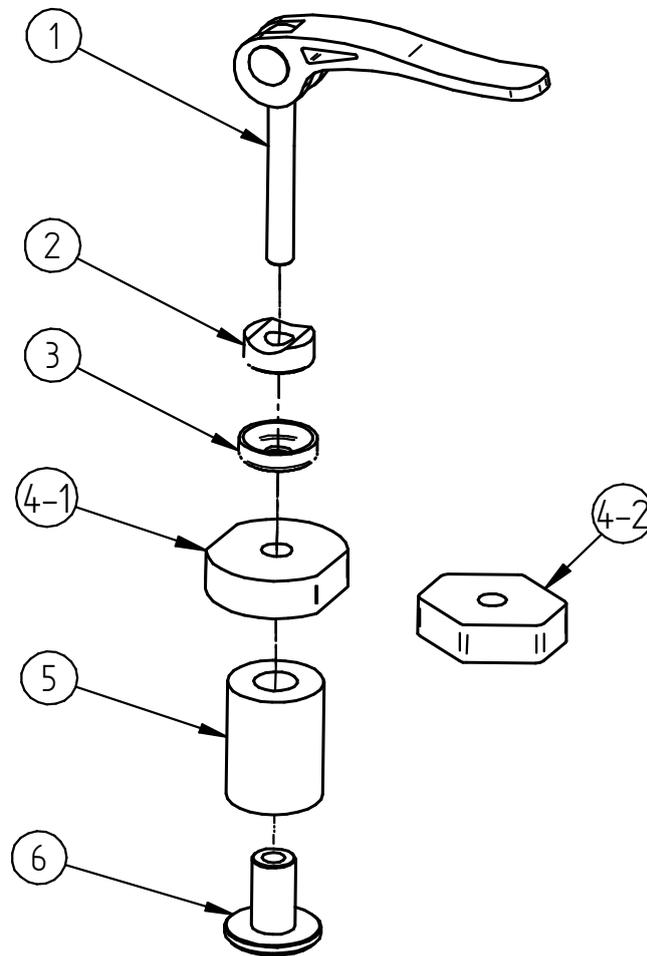

# FITTING INSTRUCTIONS

## Step 1 Install eccentric clamps.

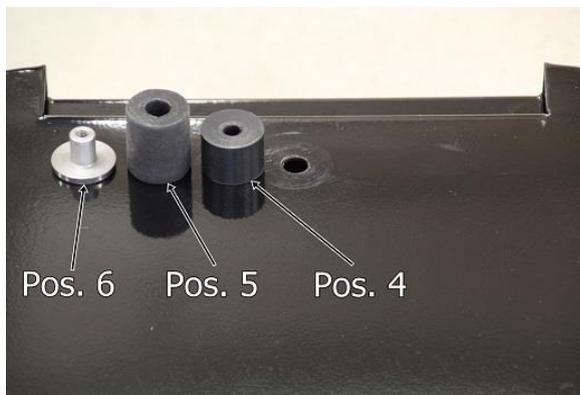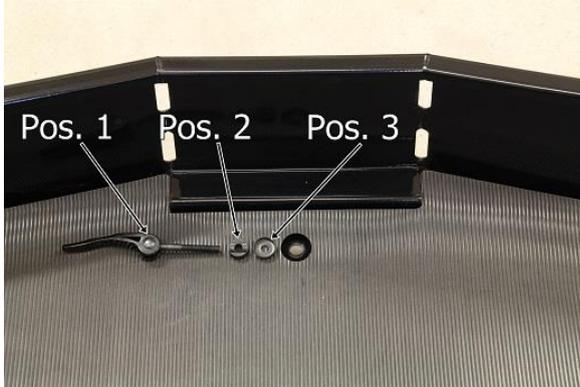

## Step 2 Tighten eccentric clamps.



# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

