



LOG SKIDDING PLATE

Code 14.11700

Version 15112023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com



SPECIFICATION

Pos.	Description	Code	Amount
1	Sled bottom plate	14.11701K	1
2	Log support	14.11704	1
3	Sled front plate	14.11705K	1
4	External telescope tube	14.11707K	1
5	Coupling adapter	14.11709K	1
6	Internal telescope tube	14.11711	1
7	Chain assembly (3000x22x6 mm)	14.11712S	1
8	Towing coupling (60 mm)	OT.10.02.030	1
9	Chain hook	OT.27.00.080	1
10	Pin	OT.53.01.010	2
11	Carriage bolt M8x20 DIN603	OT.02.05.050	13
12	Carriage bolt M8x50 DIN603	OT.02.05.075	4
13	Bolt M10x80 DIN931	OT.02.01.048	2
14	Bolt M12x80 DIN931	OT.02.01.119	1
15	Washer Ø8/20 SFS3738	OT.04.03.030	17
16	Washer Ø10/20 DIN125	OT.04.01.040	4
17	Washer Ø12/24 DIN125	OT.04.01.050	2
18	Nyloc nut M8 DIN985	OT.03.02.040	17
19	Nyloc nut M10 DIN985	OT.03.02.050	2
20	Nyloc nut M12 DIN985	OT.03.02.060	1



TOOLS REQUIRED FOR INSTALLATION:


- Spanner 17 mm
- Spanner 19 mm
- Socket wrench 13 mm
- Socket wrench 17 mm
- Socket wrench 19 mm

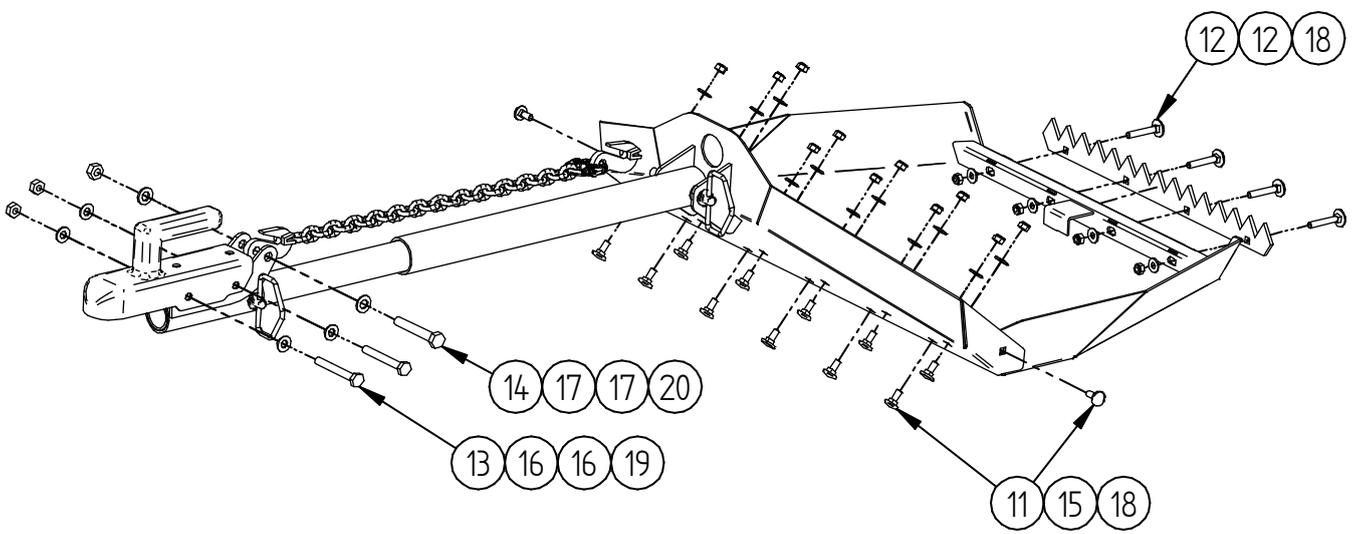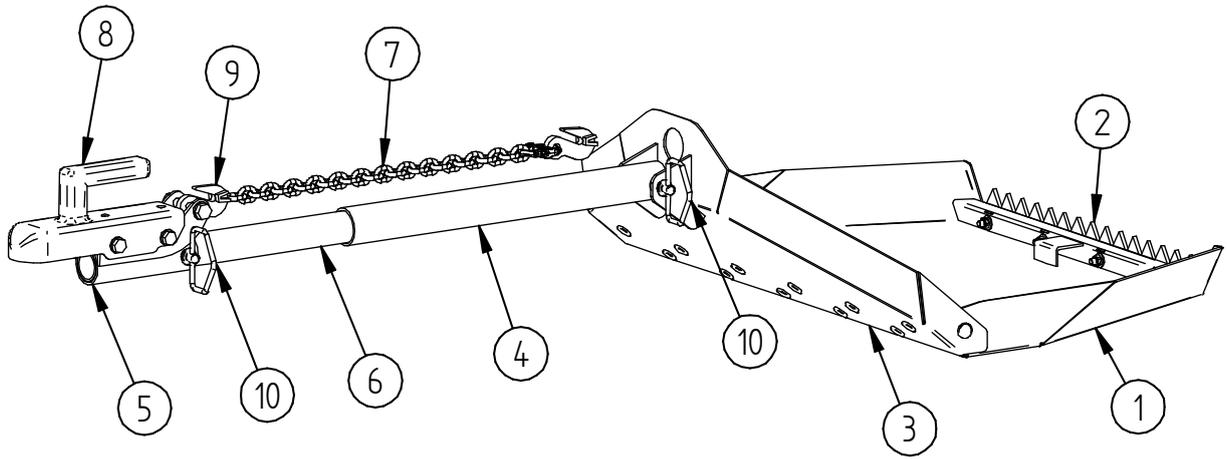

FITTING INSTRUCTIONS


Step 1

Attach the sled front plate (Pos.3) to the sled bottom plate (Pos.1). If you wish to use the log support (Pos.2), then mount it to the bottom plate (Pos.1). For fastening use M8x20 carriage bolts (Pos.11), M8x50 carriage bolts (Pos.12), Ø8 mm washers (Pos.15) and M8 nyloc nuts (Pos.18).

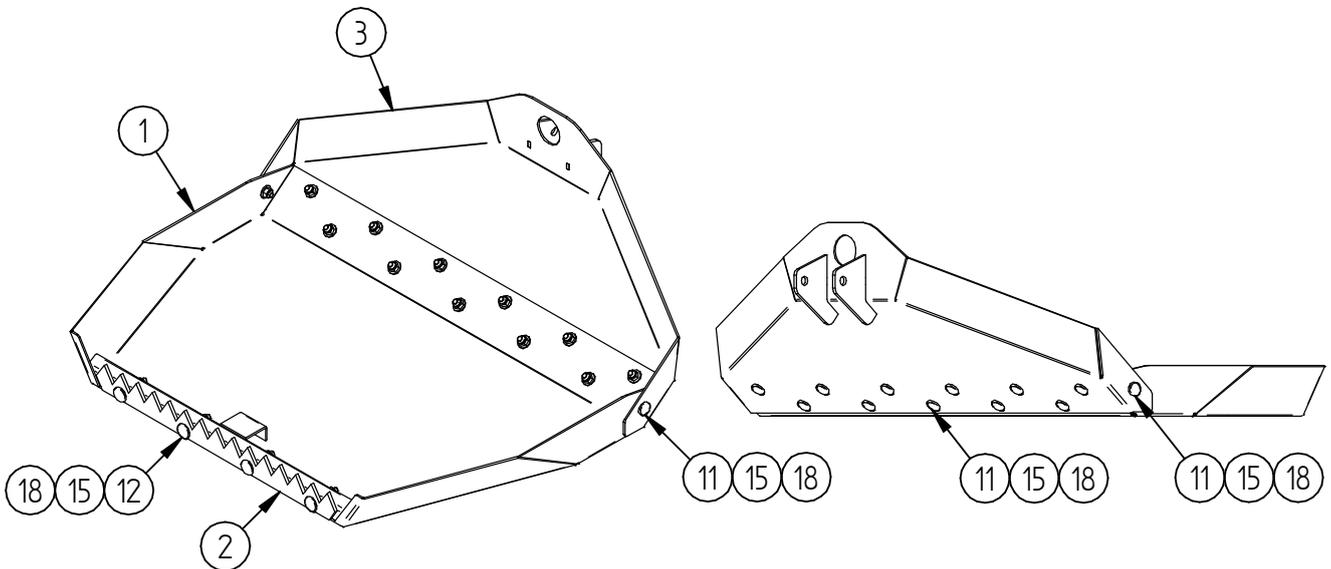


Step 2

Mount the towing coupling (Pos.8) and chain hook (Pos.9) to the coupling adapter (Pos.5). For fastening use M10x80 bolts (Pos.13), M12x80 bolt (Pos.14), Ø10 mm washers (Pos.16), Ø12 mm washers (Pos.17), M10 nyloc nuts (Pos.19) and M12 nyloc nuts (Pos.20).

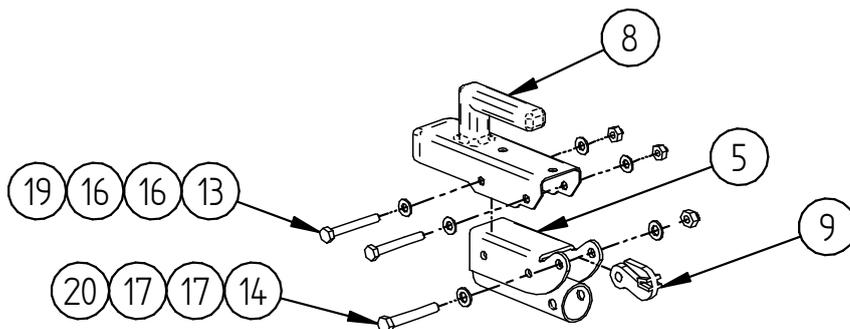


Step 3

Mount the external telescope tube (Pos.4) to the sled front plate (Pos.3) and the internal telescope tube (Pos.6) to the coupling adapter (Pos.5). Use pins (Pos.10) to secure tubes in place. Connect the internal (Pos.6) and external (Pos.4) telescope tube. **NB! Internal and external telescopic tubes slide within each other!**

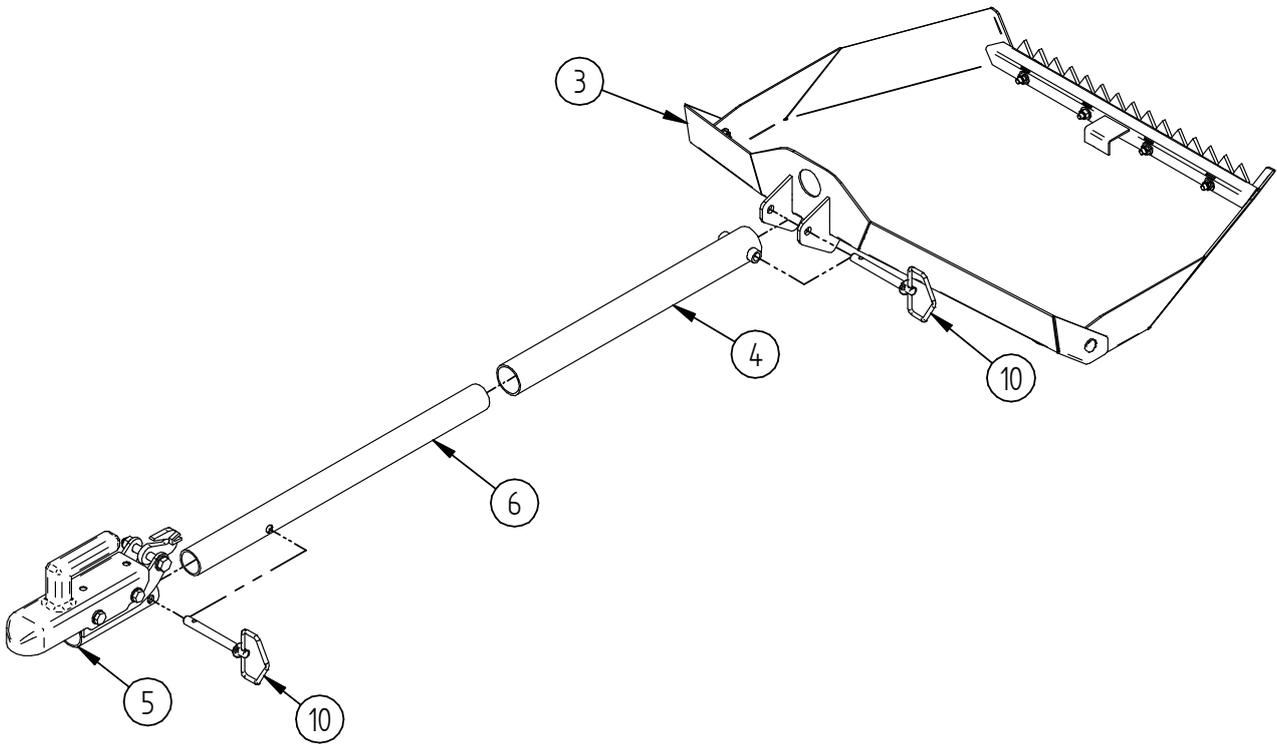

Step 4

Pull the chain assembly (Pos.7) through the chain guide and then through the front plate hole.

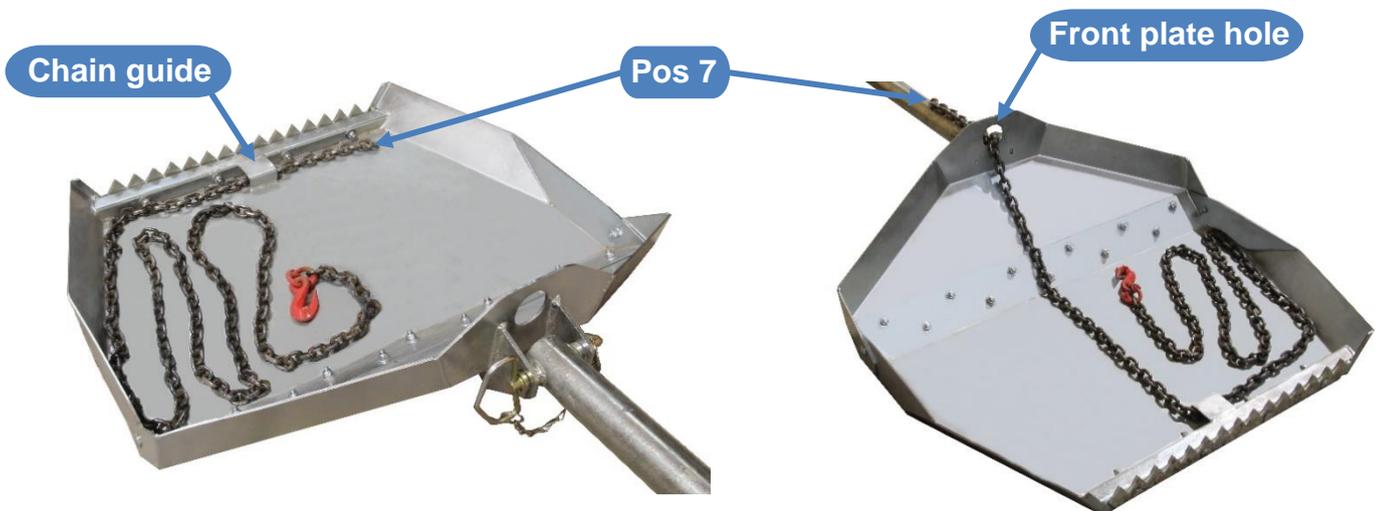


Step 5

Lift the log onto the sled bottom plate and secure it with a chain. **NB!** Make sure that you attach and position the chain assembly as shown in the pictures!



Step 6

Attach the other end of the chain to the chain hook (Pos.9).

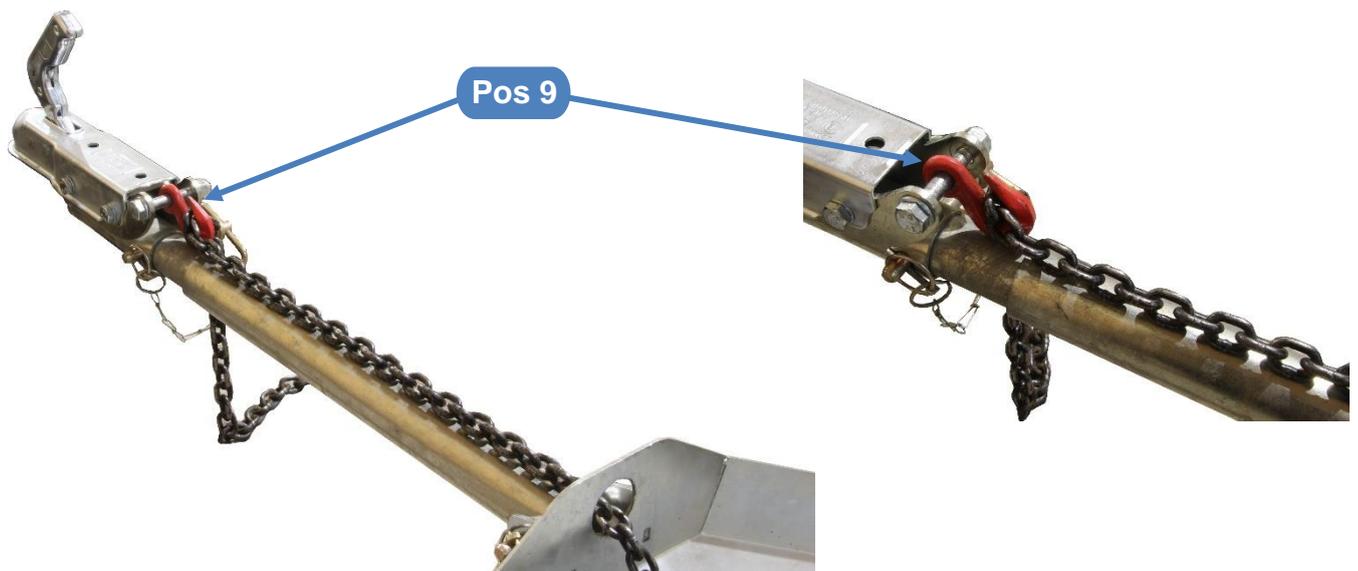

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

