

IRON BALTIC


CARGO BOX WALLS

POLARIS

800 BigBoss

Code 14.8000

Version 01122023

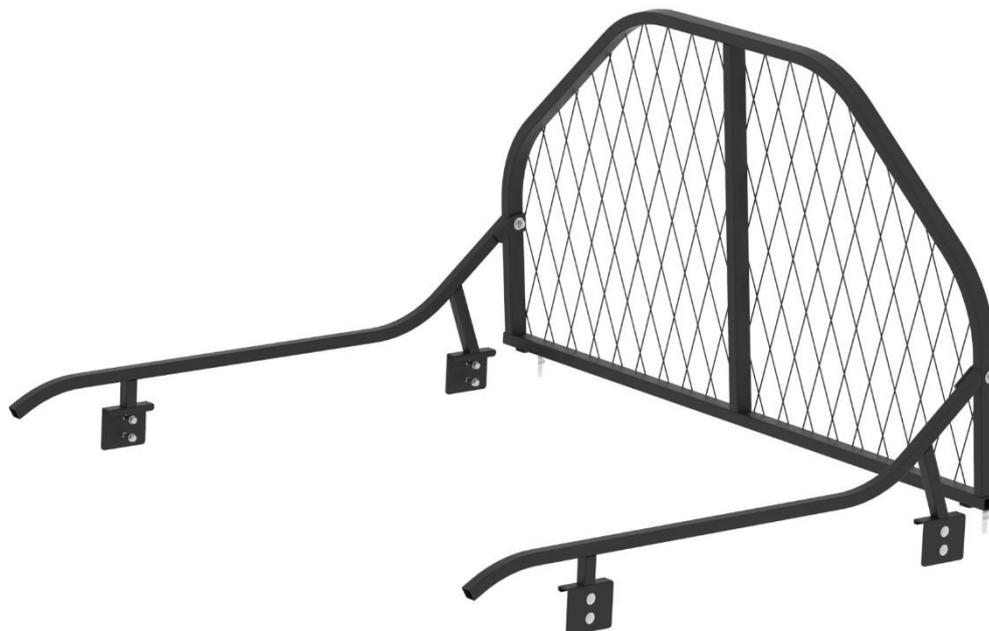

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/UfAt0zTd

SPECIFICATION


| Pos. | Description | Code | Amount |
|------|-----------------------------|--------------|--------|
| 1 | Cage | 14.8010K | 1 |
| 2 | Right support | 14.8020K | 1 |
| 3 | Left support | 14.8030K | 1 |
| 4 | Screw 4,5x30 | OT.01.01.010 | 2 |
| 5 | Dowel KLA Nylon | OT.28.01.010 | 2 |
| 6 | Carriage bolt M6x30 DIN 603 | OT.02.05.022 | 8 |
| 7 | Bolt M8x50 DIN 933 | OT.02.02.240 | 2 |
| 8 | Washer 5/15 DIN 9021 | OT.04.02.010 | 2 |
| 9 | Washer 6/15 SFS3738 | OT.04.03.020 | 8 |
| 10 | Washer 8/20 SFS3738 | OT.04.03.030 | 4 |
| 11 | Nut M6 Nyloc DIN 985 | OT.03.02.030 | 8 |
| 12 | Nut M8 Nyloc DIN 985 | OT.03.02.040 | 2 |

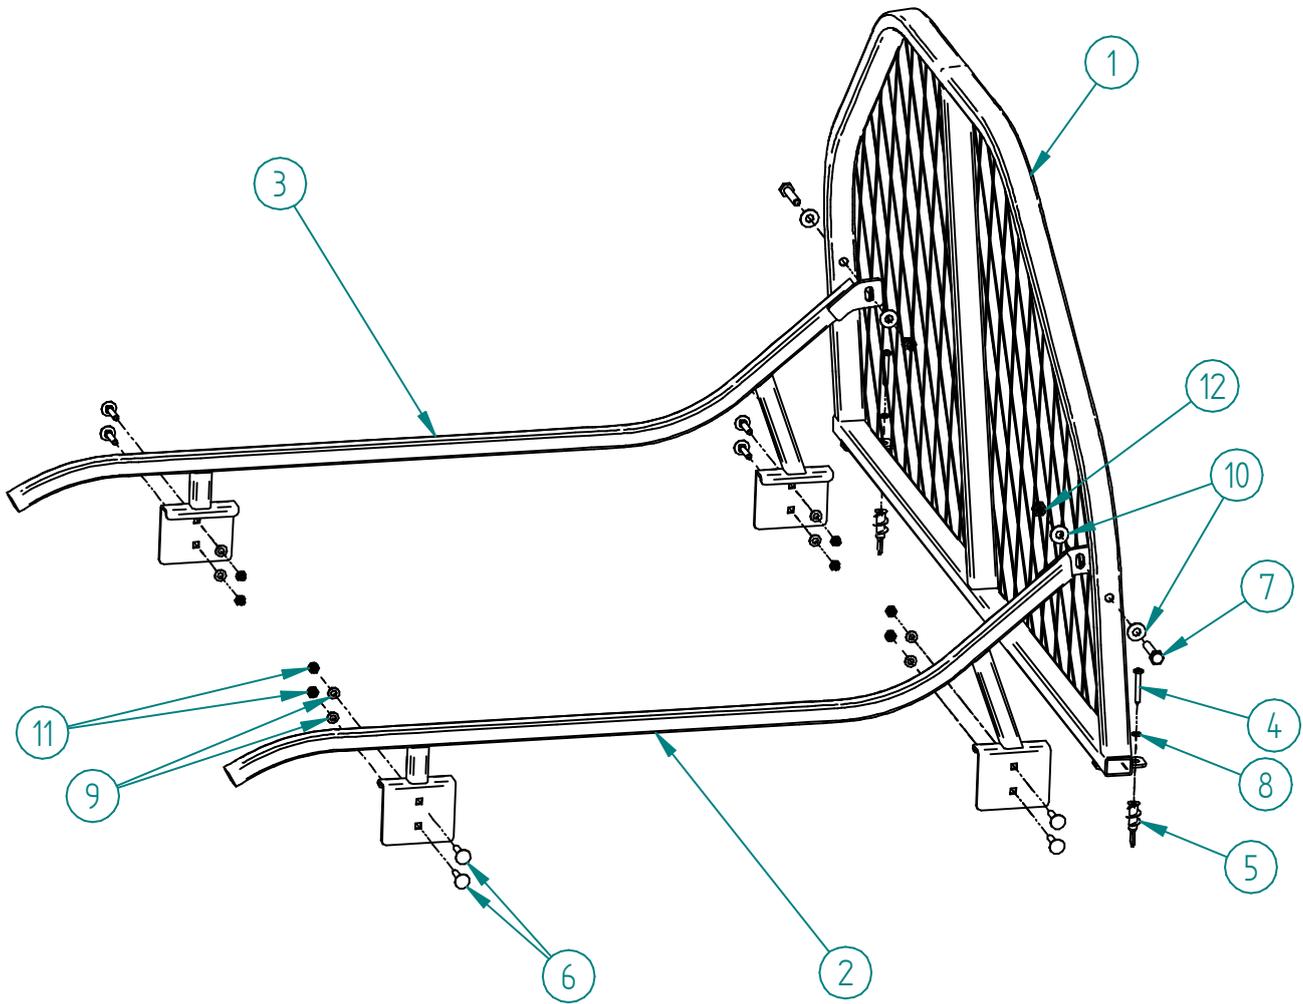

FITTING INSTRUCTIONS

Step 1

Install right and left support.

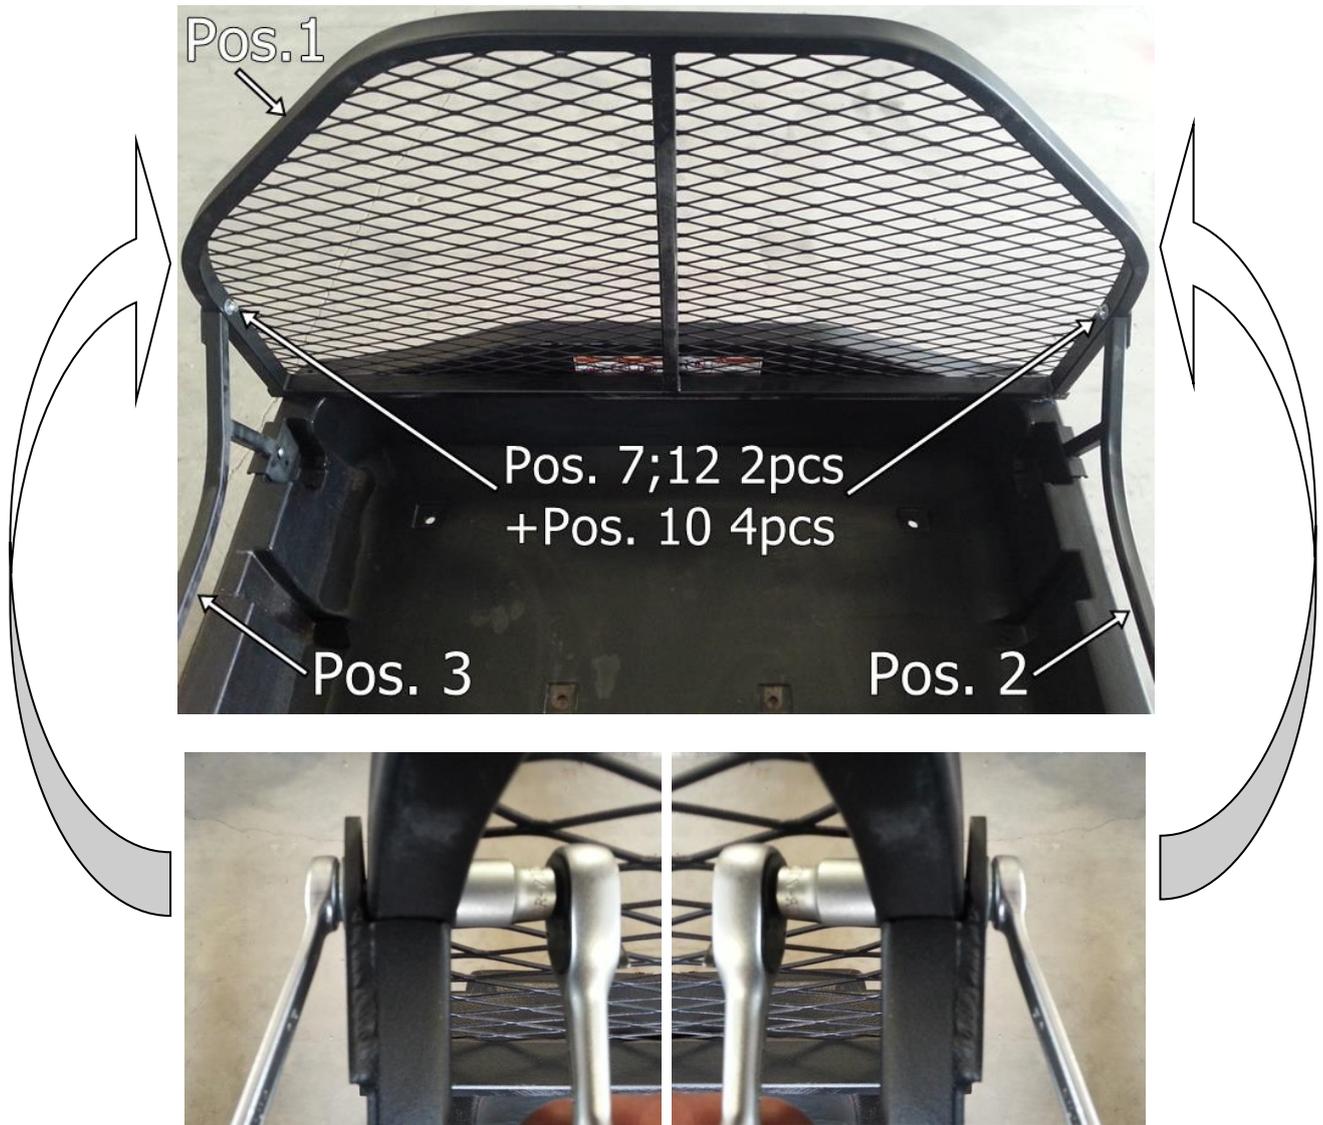

Step 2

Drill two $\varnothing 10$ holes.




Step 3

Install KLA Nylon dowels.



Step 4

Install safeguard with screws 4,5x30.

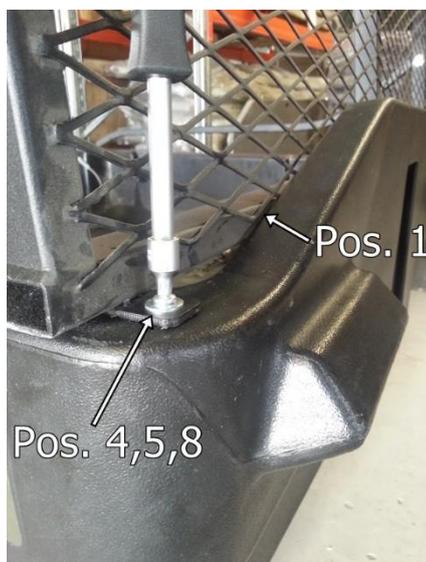

Step 5

Drill $\varnothing 6$ mm holes (8pcs).



Step 6

Install right and left support.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

