




## REAR HITCH MOUNTING KIT

# CFMOTO Z8-EX (ZForce 800)

Code 15.1700

Version 02122023

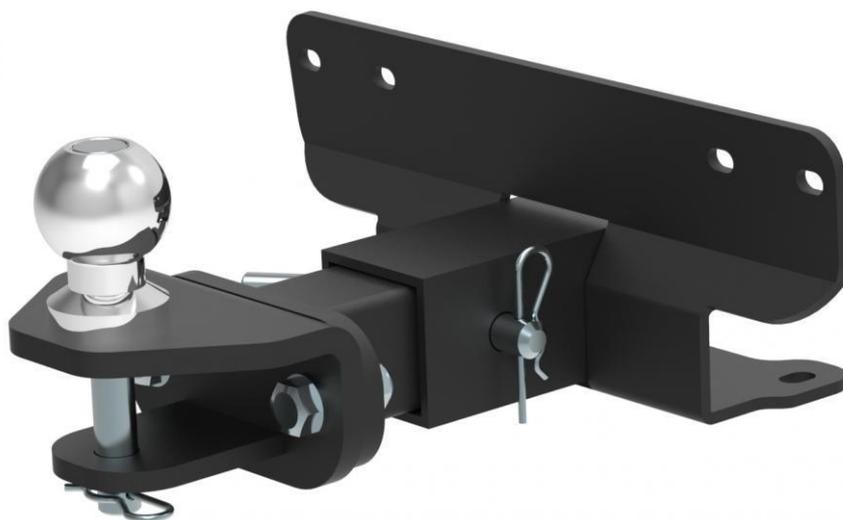

DOWNLOAD MULTILINGUAL  
USER MANUAL




[code.ironbaltic.com/u/SRyPQJjd](https://code.ironbaltic.com/u/SRyPQJjd)

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)


# SPECIFICATION

Pos.	Description	Code	Amount
1	Rear hitch bracket	15.1701K	1
2	Rear hitch bar	15.1601K	1
3	Universal towing hitch	15.1001K	1
4	Hitch pin	15.1003	1
5	Hitch bracket pin	OT.53.00.045	1
6	Cotter pin 3 DIN11024	OT.07.01.020	1
7	U-Bolt M8x38	OT.05.01.020	2
8	Bolt M8x50 DIN933	OT.02.02.240	2
9	Bolt M12x40 DIN933	OT.02.02.410	2
10	Washer M8/20 SFS3738	OT.04.03.030	8
11	Washer M12 DIN125	OT.04.01.050	4
12	Nyloc nut M8 DIN985	OT.03.02.040	6
13	Nylock nut M12 DIN985	OT.03.02.060	2

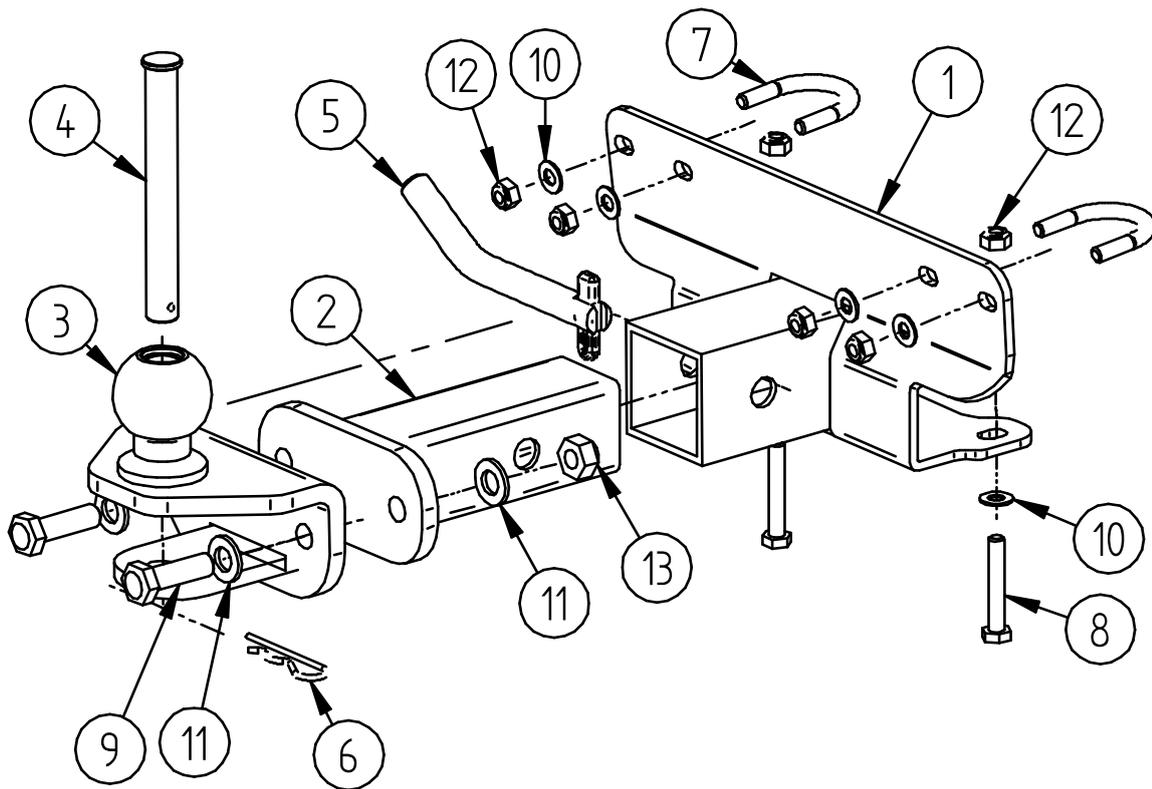


# FITTING INSTRUCTIONS

**Step 1** Install hitch bracket.

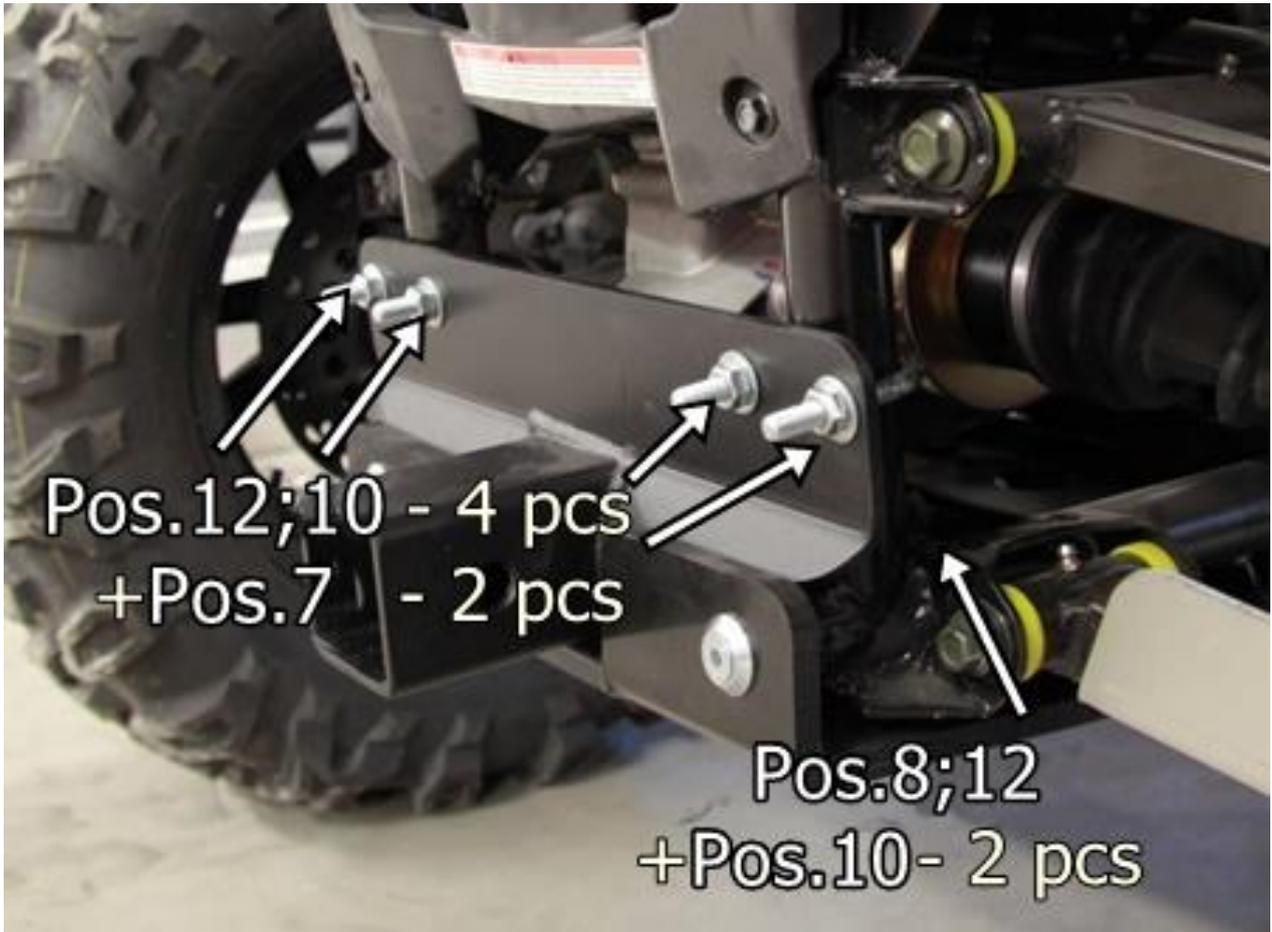

**Step 2** Install hitch bar.

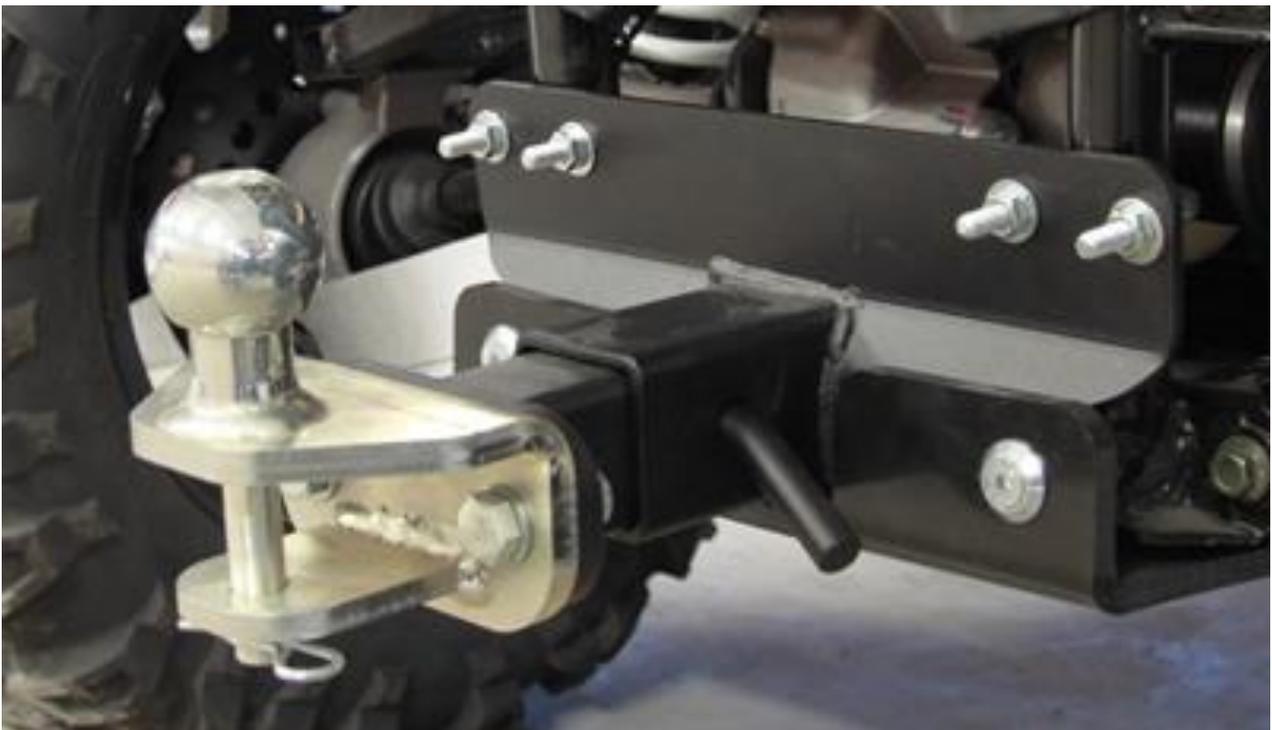

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

