

2" RECEIVER

KAWASAKI

Mule SX 4x4

Code 15.2500

Version 19122023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com


DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/SJ1Z6cgK

SPECIFICATION

Pos.	Description	Code	Amount
1	2" receiver	15.2501K	1
2	Bolt M8x30 DIN933	OT.02.02.20	2
3	Bolt M8x55 DIN931	OT.02.01.012	3
4	Washer Ø8/20 SFS3738	OT.04.03.030	10
5	Nyloc nut M8 DIN985	OT.03.02.040	5

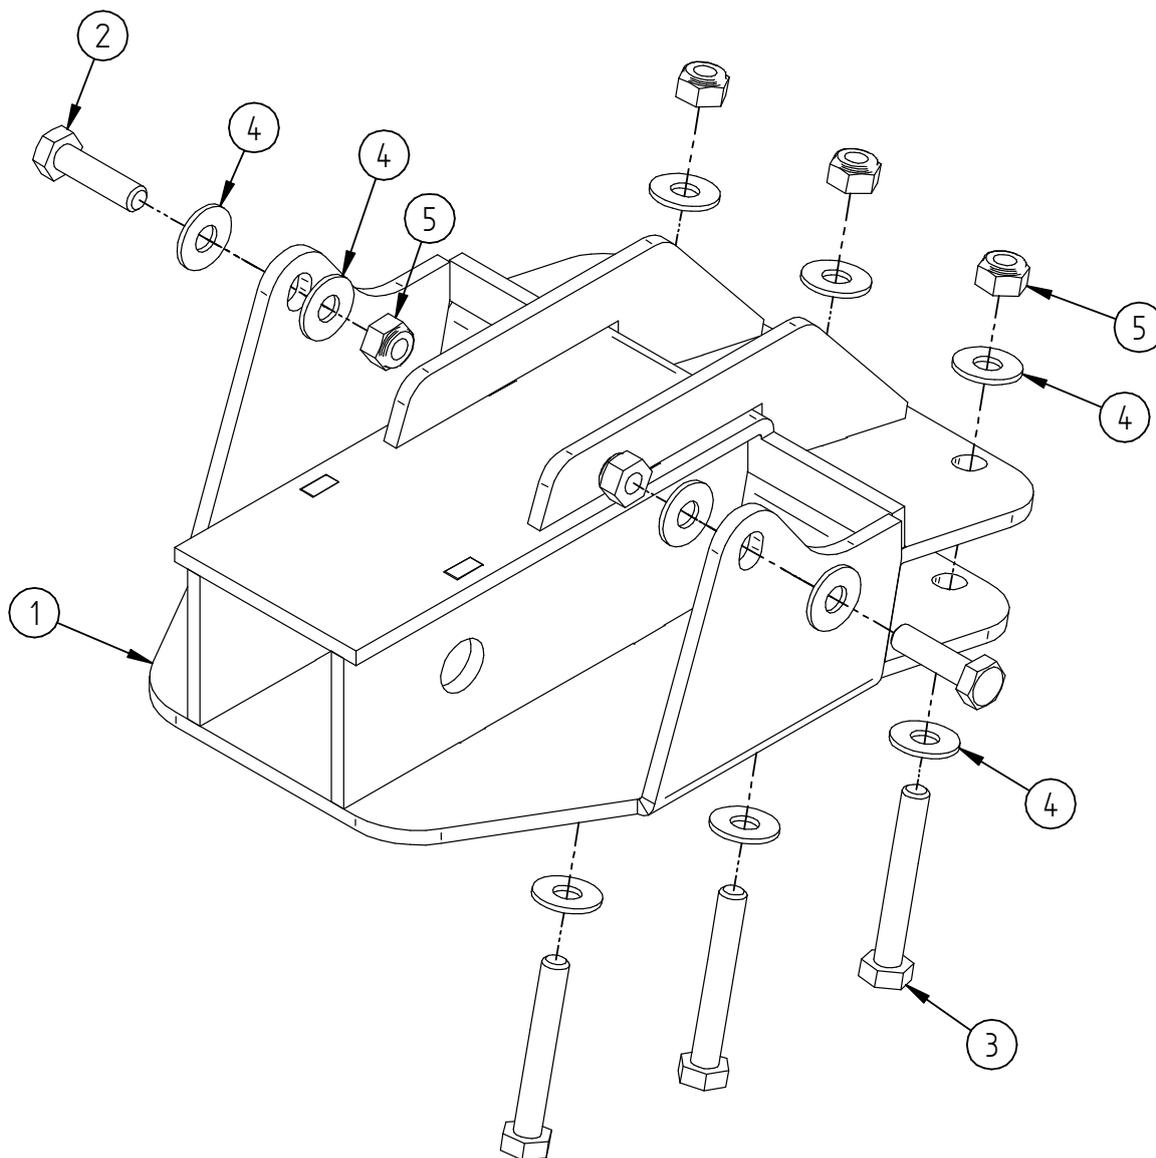


TOOLS REQUIRED FOR INSTALLATION:

- Spanner 13 mm
- Socket wrench 13 mm

FITTING INSTRUCTIONS


Step 1

Remove original bolts.

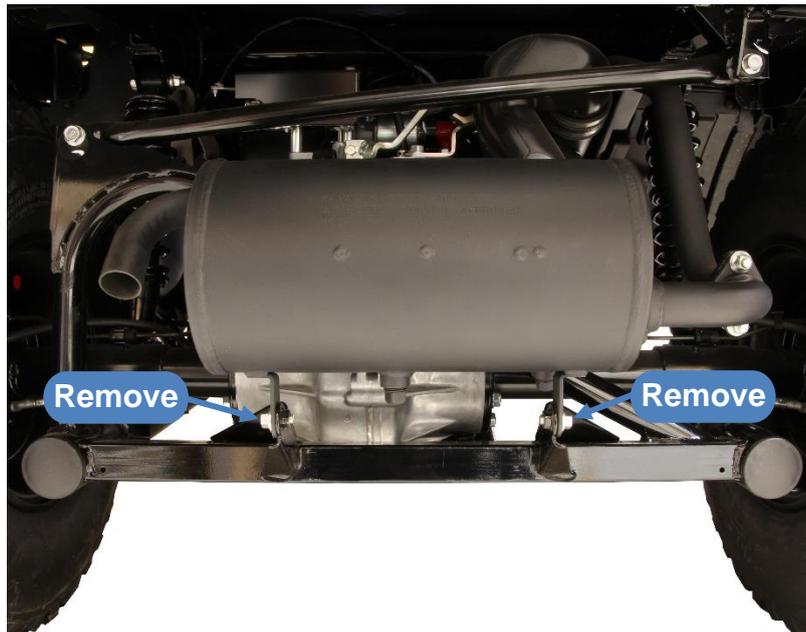

Step 2

Install 2" receiver (Pos.1). For fastening use M8x30 bolts (Pos.2), M8x55 bolts (Pos.3), Ø8 mm washers (Pos.4) and M8 nyloc nuts (Pos.5).

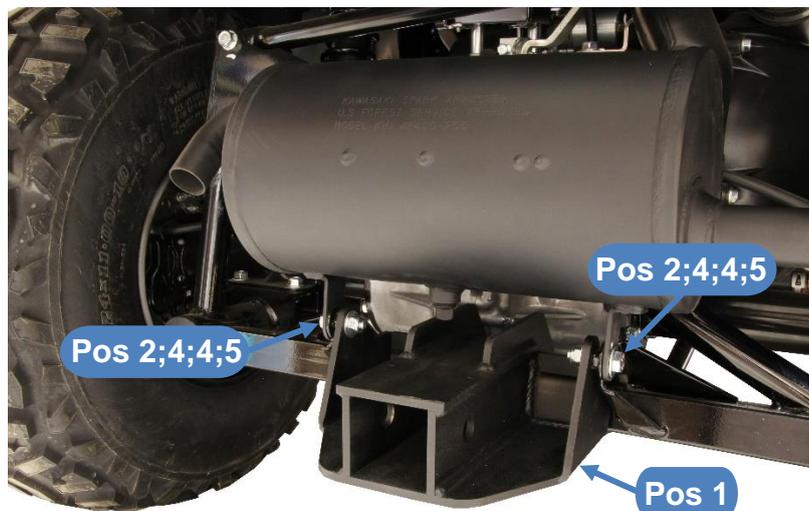

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticld

