

# IRON BALTIC

## ATV PUSH BROOM


DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/rrw1wYq0](https://code.ironbaltic.com/u/rrw1wYq0)

Code 20.1000

Version 03122023

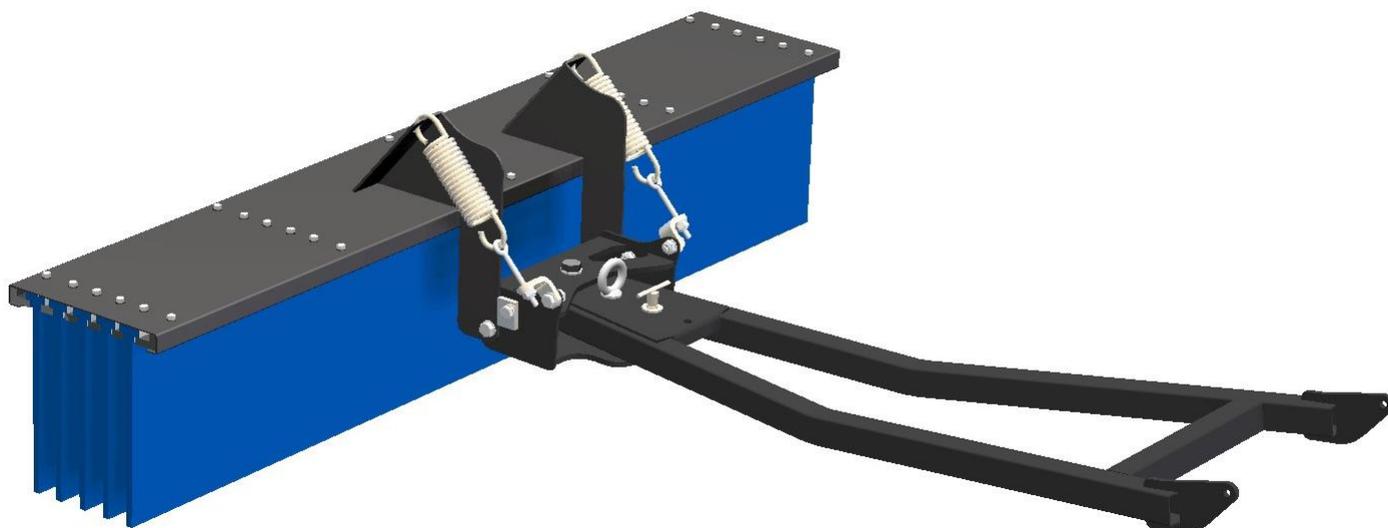


**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Broom frame	20.1000	1
2	Push tubes	04.200/04.700	1

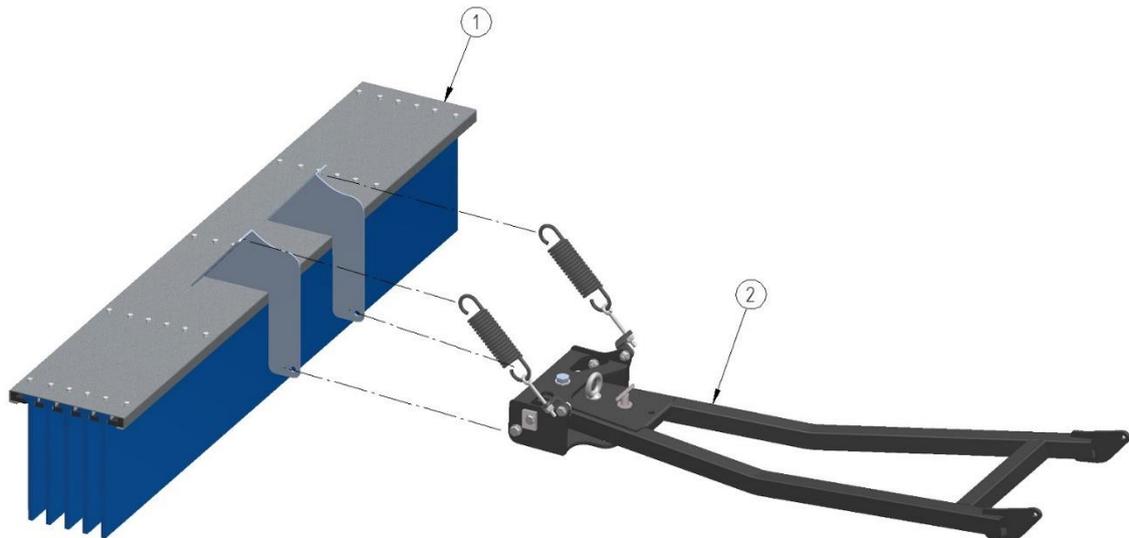

# FITTING INSTRUCTIONS

**Step 1** Install the broom frame to the push tubes using bolts M12x40 on the push tubes.



**Step 2** Install springs to the broom frame and push tubes. Tighten the springs.



**Step 3** Place the lifting eye so, that the winch would pull the push tubes straight up as possible.




## Step 4

To change the angle of the broom, loosen the M10x30 bolts on both sides and turn the regulators to suitable position.



# SPECIFICATION


Pos.	Description	Code	Amount
1	Broom frame	20.1001K	1
2	Gap strip	20.1004	4
3	Distance strip	20.1005	2
4	Edge strip	20.1006	2
5	Brush	20.1007	5
6	Bolt M6x25 DIN 933	OT.02.02.070	30
7	Washer 6/15 SFS3738	OT.04.03.020	30

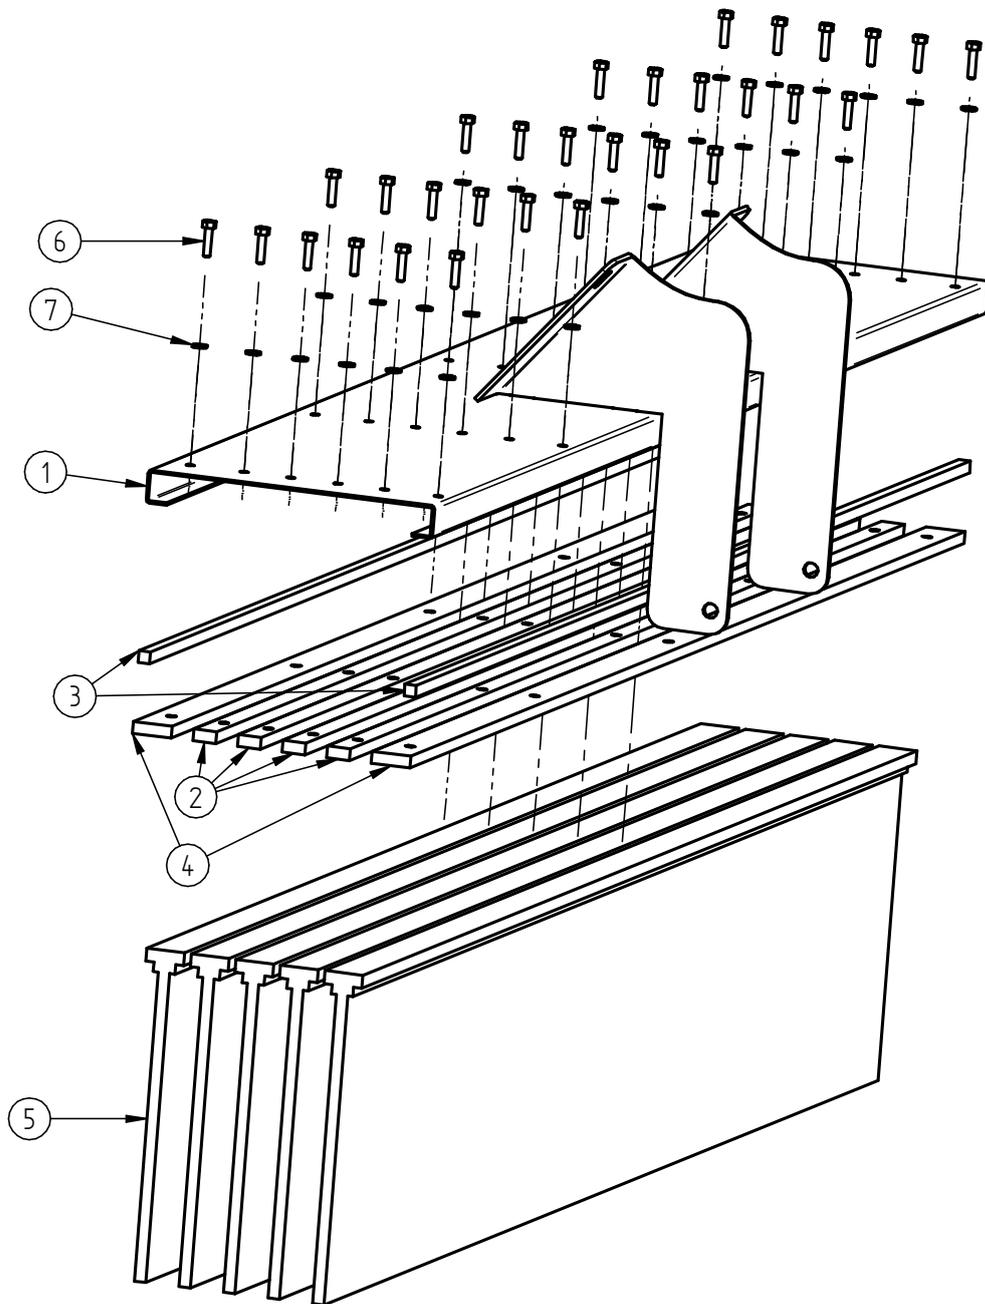

# BROOM ASSEMBLY


## Step 1

Install the edge and gap strips to the broom frame, using bolts M6x25 and washers Ø6. Push the distance strip between the broom frame and edge strips. Don't tighten the bolts.

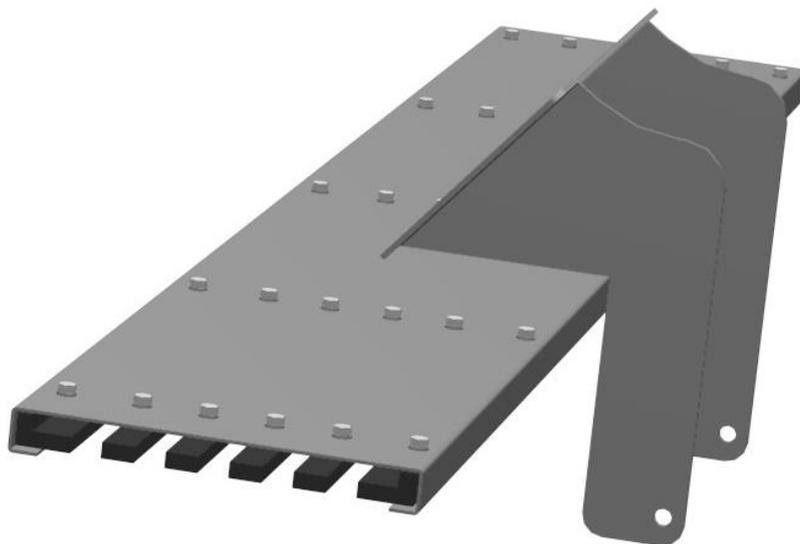

## Step 2

Push the brushes between the edge and gap strips. Tighten the bolts.

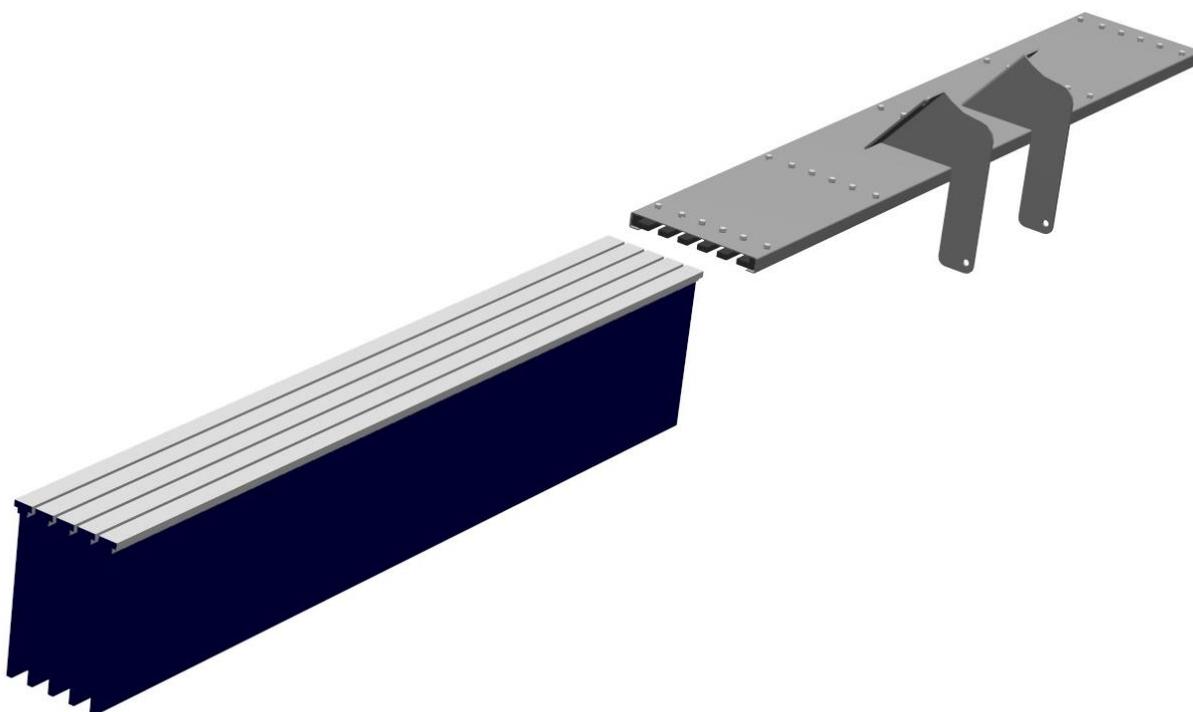



# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

