

IRON BALTIC

SKI SET FOR TRAILER

OFFROAD 500

Code 29.700

Version 15122023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/0E1iAYLS




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Mounting plate	29.701	4
2	Slide plate right	29.702S	1
3	Slide plate left	29.706S	1
4	Slider	29.709K	1
5	Threaded rod	29.713	1
6	Longer tow beam	29.714S	1
7	Ski	41.1000	2
8	Bolt M12x70 DIN931	OT.02.01.110	2
9	Bolt M12x80 DIN931	OT.02.01.119	4
10	Washer M12 DIN125	OT.04.01.050	14
11	Nyloc nut M12 DIN985	OT.03.02.060	8

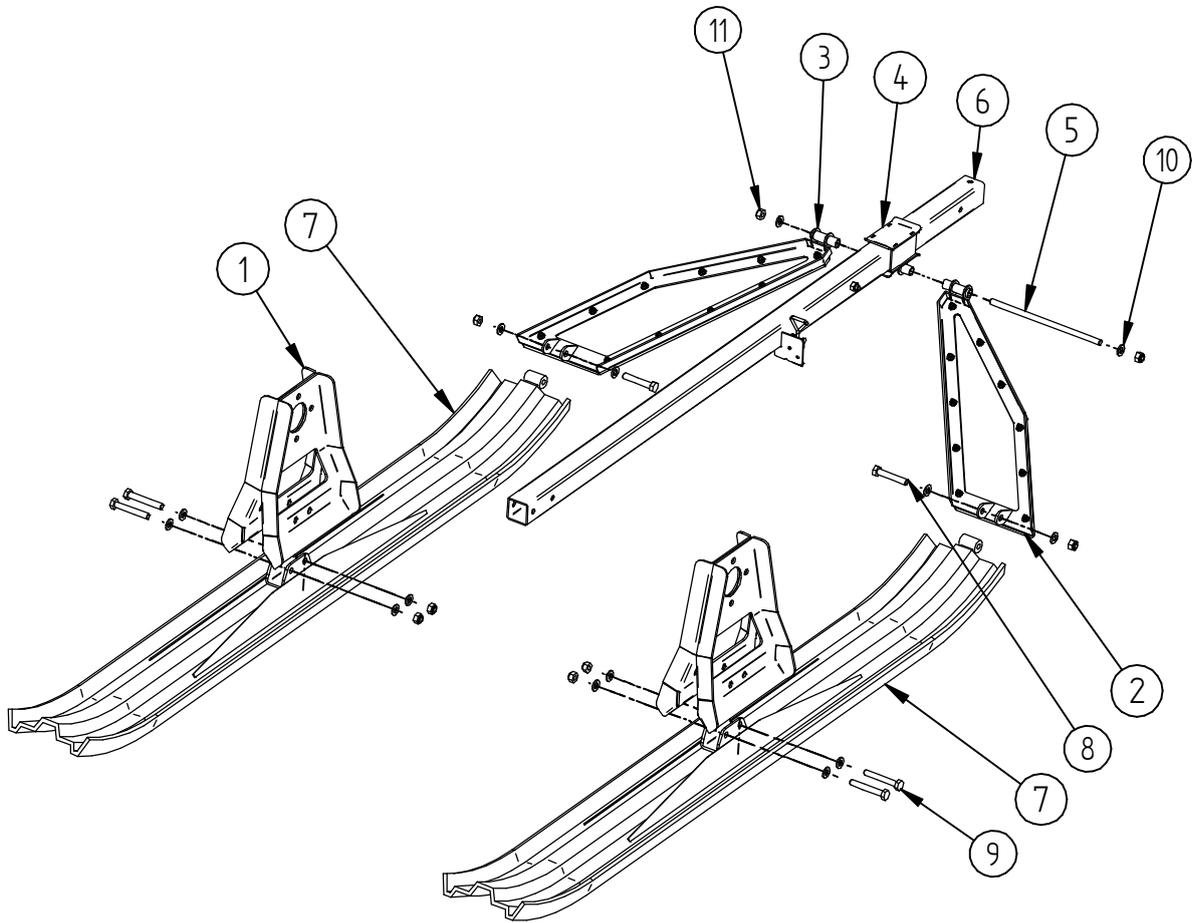

FITTING INSTRUCTIONS

Step 1


Remove tow beam from the trailer and replace it with longer tow beam (Pos. 6). Install slider (Pos. 4) to the tow beam and attach tow coupling with adapter from the shorter tow beam.

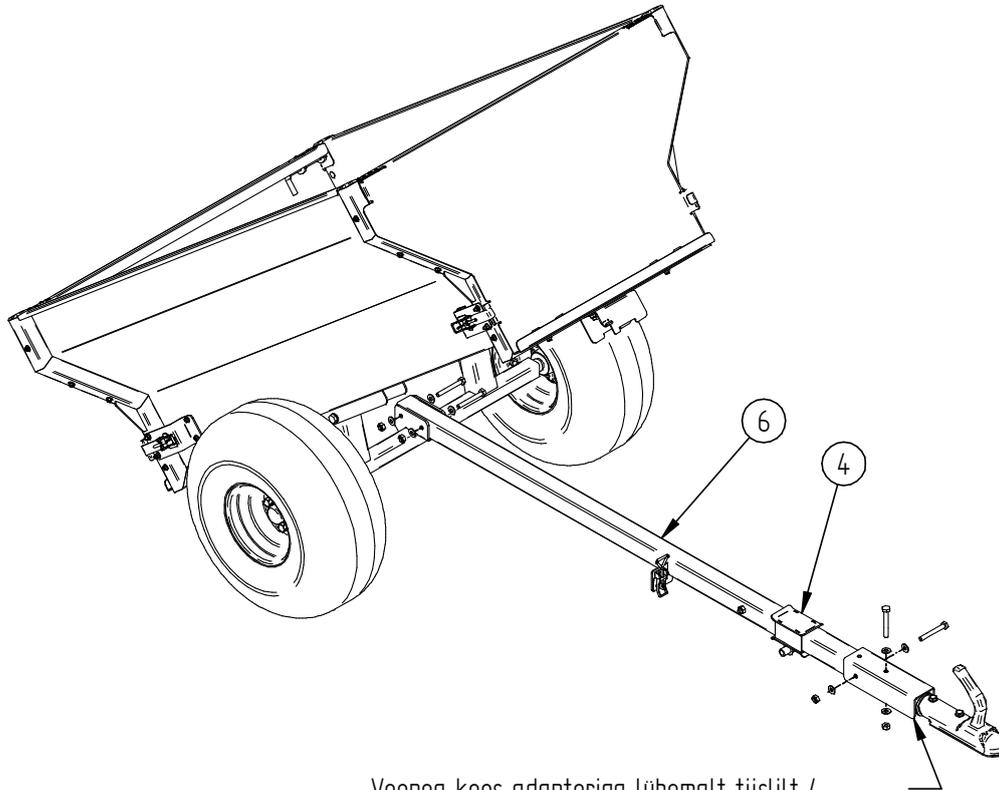

Veopea koos adapteriga lühemalt tiislilt /
Tow coupling with adapter from shorter tow beam


Step 2

Install mounting plates (Pos. 1) to the skis (Pos. 7). For fastening use M12x80 bolts (Pos. 9), Ø12 washers (Pos. 10) and M12 nyloc nuts (Pos. 11).

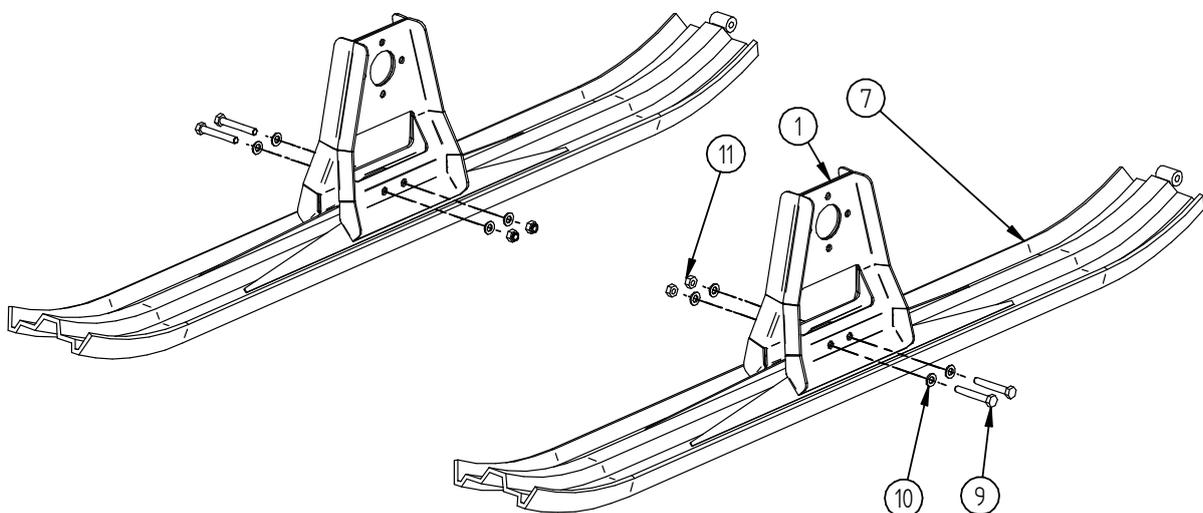


Step 3

Support the trailer and remove wheels. Install skis with mounting plates. For fastening use wheel bolts.

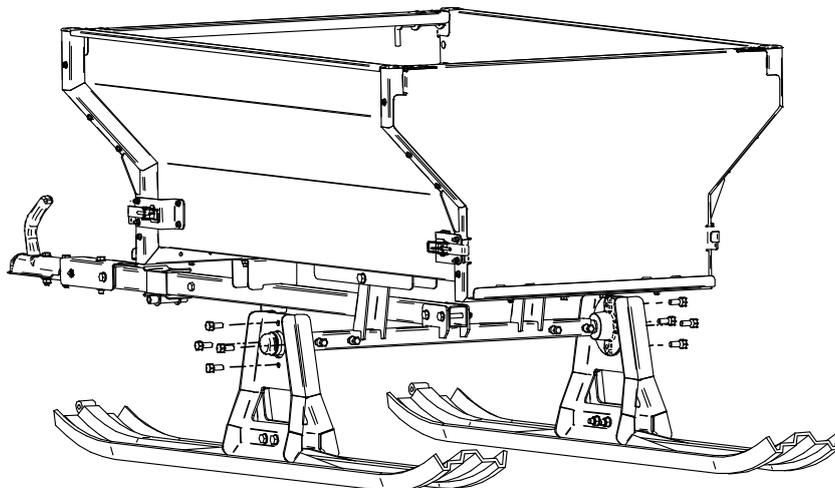

Step 4

Install slide plates (Pos. 2, Pos. 3). Use M12x70 bolts (Pos. 8), Ø12 washers (Pos. 10) and M12 nyloc nuts (Pos. 11) to attach slide plates to the skis. Use threaded rod (Pos. 5), Ø12 washers (Pos. 10) ja M12 nyloc nuts (Pos. 11) to attach slide plates to the slider. Do not fully tighten the nuts! The parts must move freely!

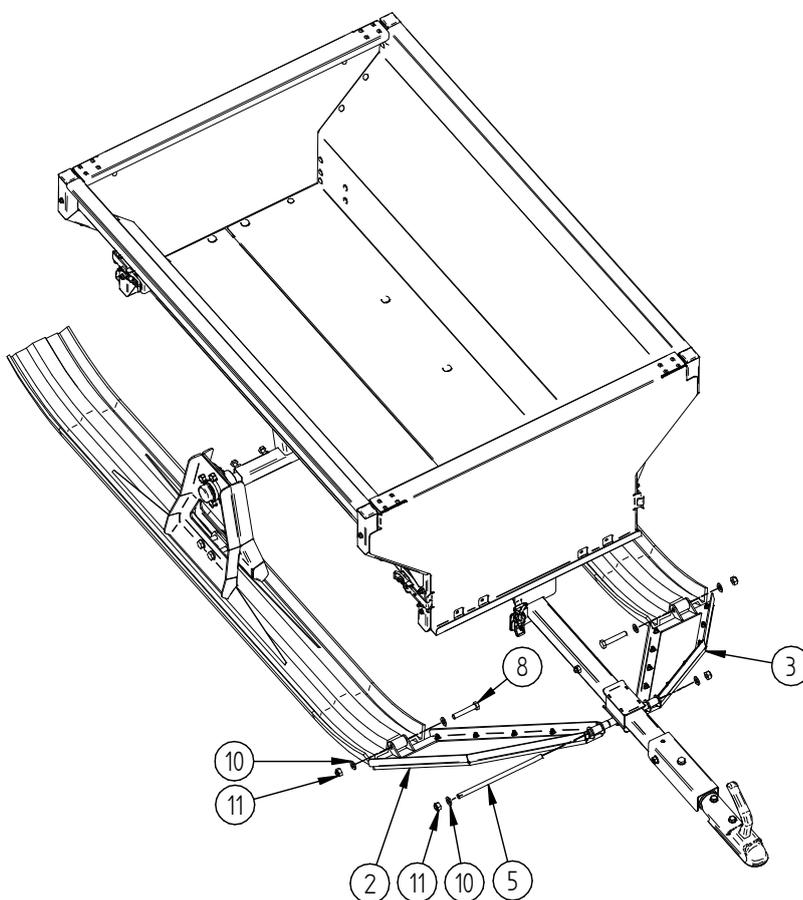

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

