

IRON^{BALTIC}

SIDE WINGS V-PLOW 1500 / 1800 G2

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/ewW6zVfV

Code 34.3200

Version 15122023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Right wing rubber edge	34.3201	1
2	Left wing rubber edge	34.3202	1
3	Rubber edge bracket	34.3203	2
4	Bolt M6x20 DIN7380	OT.02.03.030	14
5	Bolt M6x30 DIN7380	OT.02.03.050	2
6	Washer Ø6/18 DIN9021	OT.04.02.020	18
7	Nut M6 Nyloc DIN985	OT.03.02.030	16

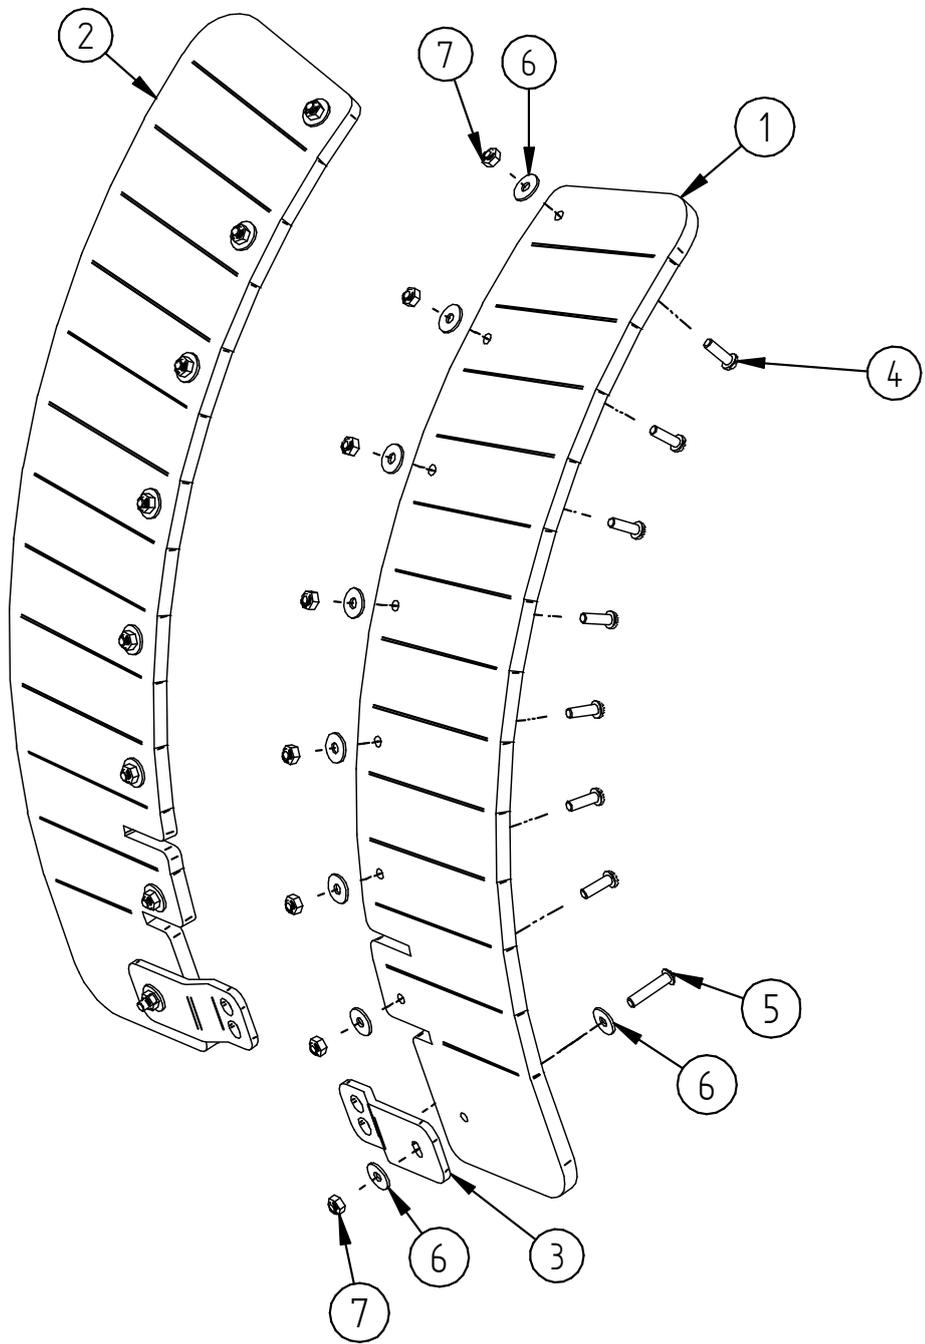

FITTING INSTRUCTIONS

Step 1 Install rubber edge bracket, to mark holes put masking tape to the moldboard.



Step 2 Install rubber edge and mark holes.




Step 3 Remove rubber edge and drill holes, use 6,5mm drill bit. Deburr drilled holes.



Step 4

Install rubber edges.

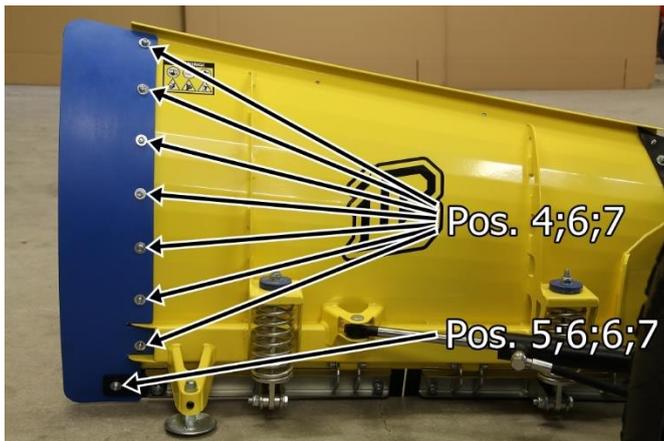

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

