



## SIDE WINGS V-PLOW 1500 / 1800 G2

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/ewW6zVfV](https://code.ironbaltic.com/u/ewW6zVfV)

Code 34.3200

Version 15122023




**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)

# SPECIFICATION

| Pos. | Description            | Code         | Amount |
|------|------------------------|--------------|--------|
| 1    | Right wing rubber edge | 34.3201      | 1      |
| 2    | Left wing rubber edge  | 34.3202      | 1      |
| 3    | Rubber edge bracket    | 34.3203      | 2      |
| 4    | Bolt M6x20 ISO 7380    | OT.02.03.030 | 14     |
| 5    | Bolt M6x25 ISO 7380    | OT.02.03.040 | 2      |
| 6    | Washer Ø6/18 DIN 9021  | OT.04.02.020 | 18     |
| 7    | Nut M6 Nyloc DIN 985   | OT.03.02.030 | 16     |

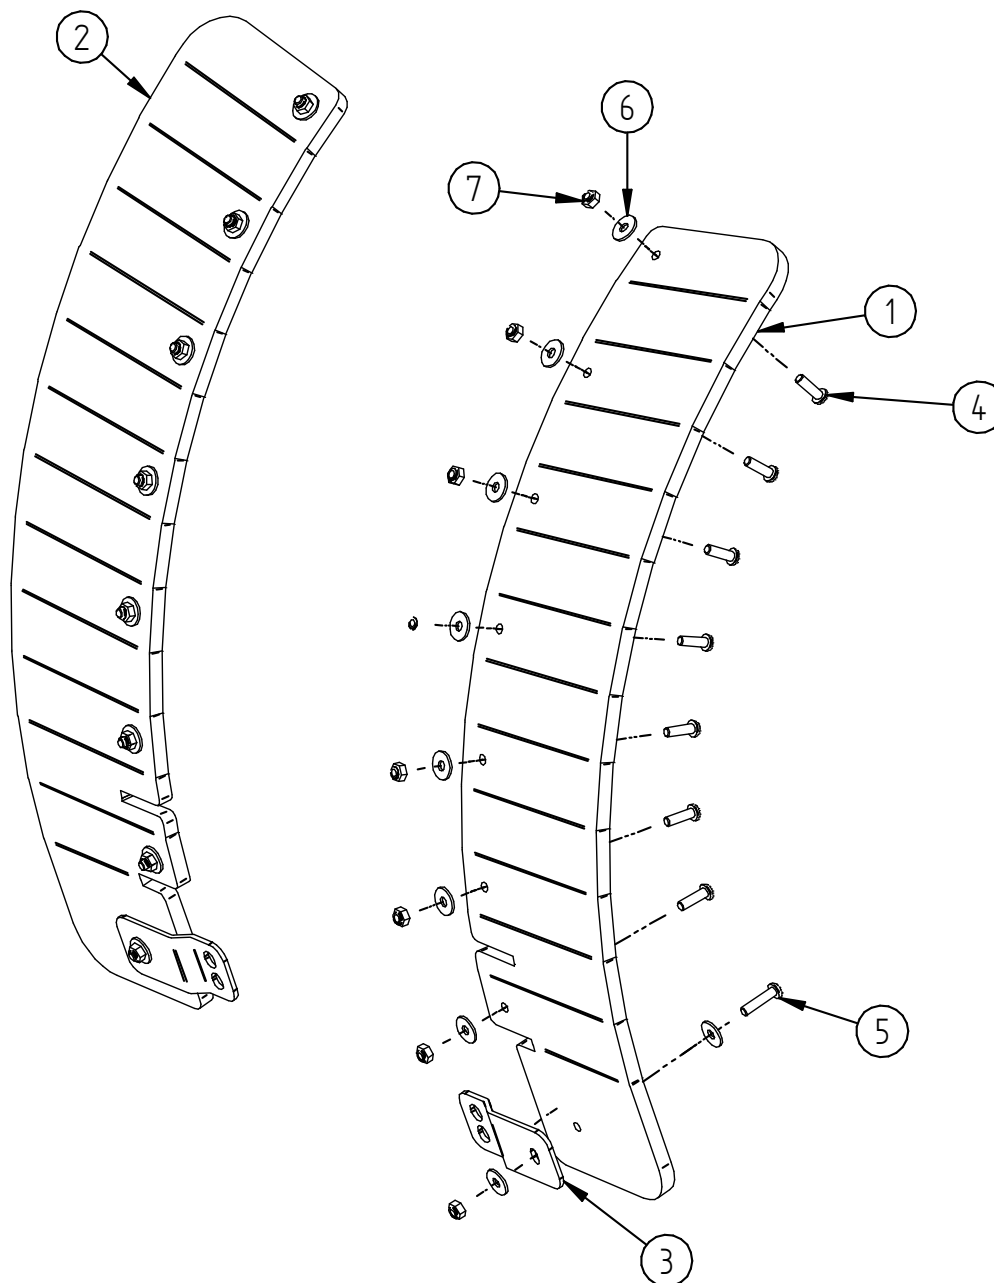

# FITTING INSTRUCTIONS


## Step 1

Install rubber edge bracket, to mark holes put masking tape to the moldboard.




## Step 2

Install rubber edge and mark holes.

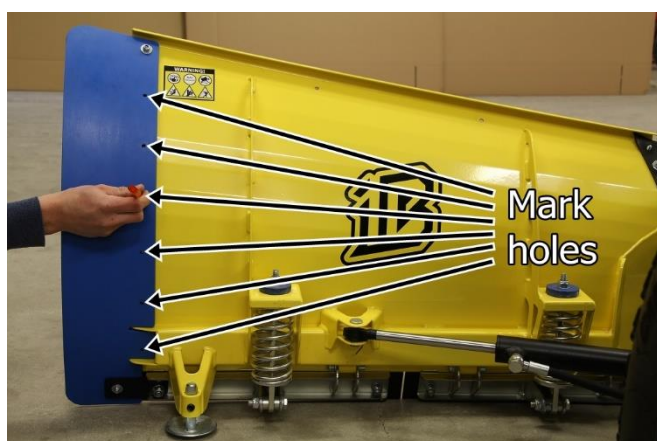


## Step 3

Remove rubber edge and drill holes, use 6,5mm drill bit. Deburr drilled holes.

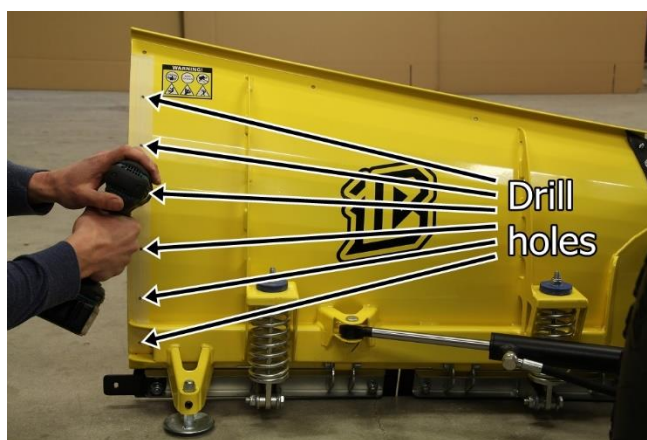

## Step 4

Install rubber edges.

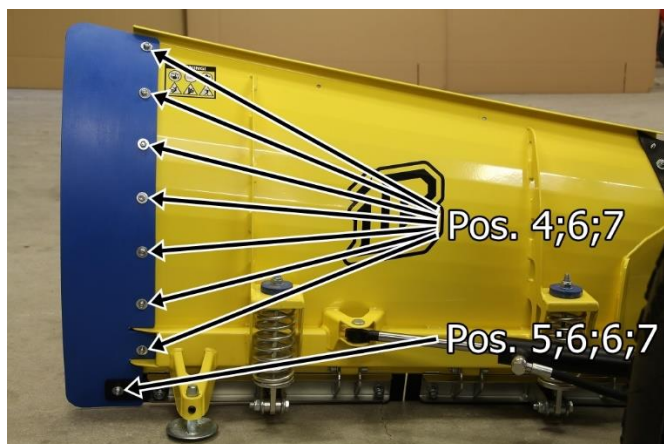





# IRON BALTIC

IRON BALTIC OÜ  
Põldmäe tee 1  
Vatsla 76915  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

